




## K Series

Top class amplification covering  
any power needs in touring applications

K2, K3  
K6, K8, K10, K20  
and DSP + AESOP versions

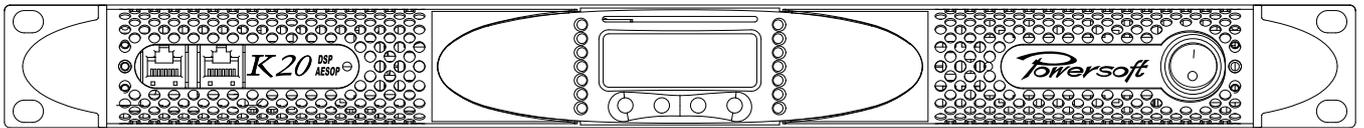

## USER GUIDE

powersoft\_KSeries\_uguide\_en\_v3.0

Data are subject to change without notice.  
For latest update please refer to the  
online version available on [www.powersoft-audio.com](http://www.powersoft-audio.com).

# K Series | User Guide

## Table of contents

<b>1. Important safety instructions</b>	<b>iii</b>	<b>8. LEDs and display menu</b>	<b>11</b>
Importantes instructions de sécurité	iv	<b>8:1. LED chart</b>	11
Instrucciones de seguridad importantes	v	<b>8:2. Front display</b>	11
Importanti istruzioni di sicurezza	vi	8:2.1. How to navigate the main menu	11
<b>2. Regulatory information</b>	<b>vii</b>	8:2.2. Menu diagrams	12
<b>3. K Series</b>	<b>1</b>	<b>9. Settings</b>	<b>15</b>
<b>3:1. Welcome</b>	1	<b>9:1. Amplifier settings: Output attenuation</b>	15
<b>3:2. Unpacking &amp; checking for shipping damage</b>	1	<b>9:2. Amplifier settings: Input Gain/Sensitivity</b>	15
<b>3:3. Disposal of the packing material</b>	1	<b>9:3. Amplifier settings: Input select</b>	15
<b>3:4. About the amplifier platform</b>	1	<b>9:4. Amplifier settings: Max output voltage</b>	15
3:4.1. More sound and less weight	1	<b>9:5. Amplifier settings: Max mains current</b>	16
3:4.2. The Show Always Goes On	1	<b>9:6. Amplifier settings: Clip limiter CH1/CH2</b>	16
<b>4. Mechanical drawings</b>	<b>2</b>	<b>9:7. Amplifier settings: Gate CH1/CH2</b>	16
<b>5. Front and rear panels</b>	<b>4</b>	<b>9:8. Amplifier settings: Mute at power on</b>	16
<b>6. Installation</b>	<b>6</b>	<b>9:9. Amplifier settings: Idle mode</b>	16
<b>6:1. Cooling</b>	6	<b>9:10. DSP Settings: Common settings</b>	17
<b>6:2. Cleaning</b>	6	9:10.1. Source selection	17
<b>6:3. AC mains supply</b>	7	9:10.2. AES3	17
<b>6:4. Precautions regarding installation</b>	7	9:10.3. Cross limit	18
<b>7. Connections</b>	<b>8</b>	9:10.4. Sound speed (m/s)	18
<b>7:1. Signal grounding</b>	8	<b>9:11. DSP Settings: Channel settings</b>	18
<b>7:2. Analog input</b>	8	9:11.1. EQs	18
<b>7:3. Analog line output</b>	8	9:11.2. Lo-pass/Hi-pass filters	19
<b>7:4. Digital Input</b>	8	9:11.3. Polarity	19
<b>7:5. AESOP</b>	9	9:11.4. Channel Delay	19
<b>7:6. Loudspeaker connections</b>	9	9:11.5. Gain	19
7:6.1. Bridge-tied load	9	9:11.6. Limiters	19
7:6.2. Internal signal path polarity	10	9:11.7. Damping Control	22
<b>7:7. V Ext</b>	10	<b>9:12. DSP Settings: Channel setup</b>	23
<b>7:8. RS-485 connection</b>	10	9:12.1. Auxiliary delay	23
		9:12.2. Diagnostics	23

9:13.DSP Settings: Input EQ	23	<b>13.Setup</b>	<b>33</b>
9:14.DSP Settings: Reset input section	23	12:7.Setup: Hardware info	33
9:15.DSP Settings: Reset output section	23	12:8.Setup: Hardware monitor	33
<b>10.Network operations</b>	<b>24</b>	12:9.Setup; LCD contrast	33
<hr/>		12:10.Setup: Set the keylock code	33
10:1.Introduction to AESOP	24	12:11.Setup: Single channe muting	33
10:1.1.Data stream	24	<b>14.System and signal protections</b>	<b>34</b>
10:1.2.Audio	24	<hr/>	
10:1.3.Ethernet internal switch	24	13:1.Turn-On/Turn-Off muting	34
10:1.4.Forwarding and repeater modes	24	13:2.Short circuit protection	34
10:2.KAESOP repeater mode	25	13:3.Thermal protection	34
10:3.KAASOP forward mode	26	13:4.DC fault protection	34
10:3.1.Forward to AES3-A	26	13:5.Input/Output protection	34
10:3.2.Forward to AES3-B	26	<b>15.SmartCard</b>	<b>35</b>
10:3.3.Forward to both	26	<hr/>	
10:4.Network robustness	27	15:1.Firmware update	35
10:4.1.Daisy chain	27	15:2.Step-Up card	35
10:4.2.Daisy chain with redundant AES3	27	<b>16.Software</b>	<b>36</b>
10:4.3.Daisy chain with AES3 and Ethernet redundancy	28	<hr/>	
10:4.4.Two degree redundant daisy chain	29	16:1.Armonía Pro Audio Suite	36
10:5.Network settings menu	30	16:1.1.Networking	36
<b>11.Display</b>	<b>31</b>	16:2.Third party software	36
<hr/>		<b>17.Warranty and assistance</b>	<b>37</b>
11:1.Display: Output meters	31	<hr/>	
11:2.Display: Temperature	31	17:1.Warranty	37
11:3.Display: Mains meters	31	17:1.1.Product warranty	37
11:4.Display: Amplifier name	31	17:1.2.Return of Goods	37
<b>12.Local presets</b>	<b>32</b>	17:1.3.Repair or replacement	37
<hr/>		17:1.4.Cost and responsibility of transport	37
12:1.Local preset: Locked presets	32	17:2.Assistance	37
12:2.Local preset: Locked bank size	32	<b>18.Specifications</b>	<b>38</b>
12:3.Local preset: Recall local preset	32	<hr/>	
12:4.Local preset:Save local preset	32		
12:4.1.Save to an empty slot	32		
12:4.2.Overwriting an existing preset	32		
12:5.Local preset: Change lock code	32		
12:6.Local preset: Erase all presets	32		

# Important safety instructions

## EXPLANATIONS OF GRAPHICAL SYMBOLS

 The triangle with the lightning bolt is used to alert the user to the risk of electric shock.

 The triangle with the exclamation point is used to alert the user to important operating or maintenance instructions.

 The CE-mark indicates the compliance with the low voltage and electromagnetic compatibility.

 Symbol for earth/ground connection.

 Symbol indicating that the equipment is for indoor use only.

 Symbol for conformity with Directive 2002/96/EC and Directive 2003/108/EC of the European Parliament on waste electrical and electronic equipment (WEEE).

 **WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT ATTEMPT TO OPEN ANY PART OF THE UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

 **TO COMPLETELY DISCONNECT THIS APPARATUS FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE.\***

 **THE MAINS PLUG OF THE POWER SUPPLY CORD MUST REMAIN READILY ACCESSIBLE.\*\***

 **DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE, DRIPPING OR SPLASHING LIQUIDS. OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD NOT BE PLACED ON THIS APPARATUS.**

 **K6, K8, K10 AND K20 MUST BE INSTALLED IN RACK CABINETS: INSTEAD OF CONNECTING THE AMPLIFIER TO THE POWER GRID DIRECTLY, PLUG THE AMPLIFIER'S MAINS CONNECTIONS VIA A SECTIONING BREAKER TO A POWER DISTRIBUTION PANEL INSIDE THE RACK CABINET.**

 **WHEN THE UNIT IS INSTALLED IN A CABINET OR A SHELF, MAKE SURE THAT IT HAS SUFFICIENT SPACE ON ALL SIDES TO ALLOW FOR PROPER VENTILATION (50 CM FROM THE FRONT AND REAR VENTILATION OPENINGS).**

 **CONNECTION TO THE MAINS SHALL BE DONE ONLY BY A ELECTROTECHNICAL SKILLED PERSON ACCORDING THE NATIONAL REQUIREMENTS OF THE COUNTRIES WHERE THE UNIT IS SOLD.**



Electrical energy can perform many useful functions. This unit has been engineered and manufactured to ensure your personal safety. But IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD.

In order not to defeat the safeguards incorporated into this product, observe the following basic rules for its installation, use and service. Please read these "Important Safeguards" carefully before use.

### Important safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this equipment near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Numbers 9 and 13 apply only to K2 and K3.

\* K6, K8, K10 and K20: interrupt the mains by switching the sectioning breaker off.

\*\* Valid for K2 and K3 model only; with K6, K8, K10 and K20 a free leads power cord (i.e. without plug) is provided: this solution is intended for connecting the device to a sectioning breaker on the mains. Refer to the installation instruction for selecting the proper sectioning breaker.

# Importantes instructions de sécurité

## EXPLICATION DES SYMBOLES GRAPHIQUES

 La triangle avec le symbol du foudre est employée pour alerter l'utilisateur au risque de décharge électrique.

 Le triangle avec un point d'exclamation est employée pour alerter l'utilisateur d'instruction importantes pour lors opérations de maintenance.

 Le marquage CE indique la conformité à la directive de basse tension et la compatibilité électromagnétique.

 Symbole pour la connexion à la terre.

 Symbole indiquant que l'équipement est destiné à l'emploi à l'intérieur.

 Symbole pour la conformité à la Directive 2002/96/EC et la Directive 2003/108/EC du Parlement Européen sur les équipements électriques et électroniques (WEEE).

 **MISE EN GARDE : AFIN DE RÉDUIRE LES RISQUES DE CHOC ÉLECTRIQUE, N'ESSAYEZ PAS D'OUVRIRE L'UNITÉ, MEME EN PARTIE. AUCUNE PIÈCE À L'INTÉRIEUR NE PEUT ÊTRE CHANGÉE PAR L'UTILISATEUR. LAISSEZ L'ENTRETIEN À UN PERSONNEL QUALIFIÉ.**

 **POUR INTERROMPRE COMPLÈTEMENT L'ALIMENTATION ÉLECTRIQUE DE L'UNITÉ, DÉBRANCHEZ LE CORDON D'ALIMENTATION DE LA PRISE DE COURANT.\***

 **LES FICHES DU CORDON D'ALIMENTATION DOIVENT RESTER ACCESSIBLES À TOUT MOMENT.\*\***

 **AFIN DE RÉDUIRE LES RISQUES D'INCENDIE ET D'ÉLECTROCUTION, N'EXPOSEZ PAS CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ. L'UNITÉ NE DOIT JAMAIS ÊTRE EXPOSÉ AUX ÉCLABOUSSURES, AU DÉVERSEMENT OU À L'ÉGOUTTEMENT DE LIQUIDES, QUELS QU'ILS SOIENT.**

 **K6, K8, K10 ET K20 DOIT ÊTRE INSTALLÉ DANS UN RACK ARMOIRE : AU LIEU DE CONNECTER L'AMPLIFICATEUR POUR LE RÉSEAU ÉLECTRIQUE DIRECTEMENT, BRANCHEZ LA FICHE DE L'AMPLIFICATEUR VIA LE DISJONCTEUR AUX PANNEAU DE DISTRIBUTION ÉLECTRIQUE À L'INTÉRIEUR DE L'ARMOIRE.**

 **QUAND L'UNITÉ EST INSTALLÉ DANS UNE ARMOIRE OU UNE ÉTAGÈRE, ASSUREZ-VOUS QU'IL Y A UN ESPACE SUFFISANT TOUT AUTOUR POUR PERMETTRE UNE BONNE VENTILATION (50 CM DES ORIFICES DE VENTILATION AVANT ET ARRIÈRE).**



**AVIS**  
**RISQUES D'ÉLECTROCUTION**  
**NE PAS OUVRIR**



L'énergie électrique peut remplir beaucoup de fonctions utiles. Cet appareil a été conçu et fabriqué pour assurer votre propre sécurité. Mais UNE UTILISATION INCORRECTE PEUT ENTRAÎNER UN RISQUE POTENTIEL D'ÉLECTROCUTION OU D'INCENDIE. Afin de ne pas annuler les dispositifs de sécurité incorporés dans cet appareil, observez les règles fondamentales suivantes pour son installation, son utilisation et sa réparation. Veuillez lire attentivement ces "Importantes mesures de sécurité" avant d'utiliser l'appareil.

## Importantes instructions de sécurité

1. Lisez les directives suivantes.
2. Conservez ces directives.
3. Observez et respectez tous les avertissements.
4. Suivez toutes les directives.
5. N'utilisez pas cet appareil près de l'eau.
6. Nettoyez cet appareil uniquement avec un chiffon sec.
7. Ne bouchez pas les fentes de ventilation. Respectez les directives du fabricant pour l'installation de l'appareil.
8. N'installez pas l'appareil à proximité d'une source de chaleur telle qu'un radiateur, une bouche d'air chaud, une cuisinière ou tout autre appareil (y compris des amplificateurs) émettant de la chaleur.
9. Ne désactivez pas le dispositif de sécurité appliqué à la fiche polarisée ou à la fiche avec mise à la terre. Une fiche polarisée est équipée de deux lames dont l'une est plus large que l'autre. Une fiche avec mise à la terre est équipée de deux lames et une broche destinée à la mise à la terre. La lame la plus large et la troisième broche sont des dispositifs de sécurité. Si vous ne réussissez pas à brancher la fiche fournie dans la prise de courant, consultez un électricien et faites remplacer la prise par une neuve.
10. Ne placez pas le cordon d'alimentation dans des endroits passants et assurez-vous qu'il ne peut pas être pincé, surtout au niveau des fiches, de la prise de courant et à l'endroit où il sort de l'appareil.
11. Utilisez uniquement les éléments de raccordement et les accessoires recommandés par le fabricant.
12. Utilisez l'appareil uniquement avec le chariot, le trépied, le support ou la table recommandés par le fabricant ou achetés avec l'appareil. Lorsque vous utilisez un chariot, prenez des précautions en déplaçant le chariot et l'appareil afin de ne pas les renverser, ce qui pourrait entraîner des blessures. 
13. Débranchez cet appareil en cas d'orage ou lorsque vous ne l'utilisez pas pendant de longues périodes.
14. Pour toute réparation, adressez-vous à un réparateur qualifié. Faites réparer l'appareil s'il a été endommagé de quelque manière que ce soit, par exemple si le cordon d'alimentation ou sa fiche sont endommagés, si du liquide ou tout autre corps étranger a pénétré dans l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il est tombé.

Numéros 9 et 13 ne s'appliquent qu'aux K2 et K3.

\* K6, K8, K10 and K20: interrompre le réseau par commutation de le disjoncteur.

\*\* Valable seulement pour le K2 et K3 modèles; on fournis avec K6, K8, K10 et K20 un cordon avec fils libres (c'est à dire sans fiche) : cette solution est destinée à connecter l'appareil à un disjoncteur sur le réseau. Se référer aux instructions d'installation pour sélectionner le disjoncteur de sectionnement approprié.

# Instrucciones de seguridad importantes

## EXPLICACIÓN DE LOS SÍMBOLOS GRÁFICOS

 El triángulo con el símbolo de rayo eléctrico es usado para alertar al usuario de el riesgo de un choque eléctrico.

 El triángulo con el signo de admiración es usado para alertar al usuario de instrucciones importantes de operación o mantenimiento.

 La marca CE indica el cumplimiento de la directiva de bajo voltaje y de compatibilidad electromagnética.

 Símbolo de la conexión a tierra.

 Símbolo que indica que el equipo es sólo para uso en interiores.

 Símbolo de conformidad con la Directiva 2002/96/EC y Directiva 2003/108/EC del Parlamento Europeo sobre los aparatos eléctricos y electrónicos (WEEE).

 **PRECAUCIÓN: PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO DESMONTE LA TAPA (NI EL PANEL TRASERO). NO HAY PIEZAS REPARABLES POR EL USUARIO EN EL INTERIOR. LLÉVELO A REPARAR A PERSONAL DE SERVICIO CUALIFICADO.**


 **PARA DESCONECTAR COMPLETAMENTE EL APARATO, EL ENCHUFE DEL CABLE DE ALIMENTACIÓN DE LA UNIDAD DEBERÁ SER RETIRADO DE LA TOMA DE CORRIENTE.\***

 **EL ENCHUFE DEL CABLE DE ALIMENTACIÓN DEBERÁ PERMANECER FÁCILMENTE ACCESIBLE.\*\***

 **NO EXPONGA ESTE UNIDAD A LA LLUVIA O LA HUMEDAD, GOTEO O SALPICADURAS. NO COLOQUE OBJETOS LLENOS DE LÍQUIDOS, TALES COMO VASIJAS, SOBRE EL APARATO.**

 **K6, K8, K10 Y K20 SE DEBEN INSTALAR EN ARMARIOS RACK: EN LUGAR DE CONECTAR EL AMPLIFICADOR A LA RED ELÉCTRICA DIRECTAMENTE, CONECTE LAS CONEXIONES DE RED DEL AMPLIFICADOR A TRAVÉS DE UN INTERRUPTOR DE SECCIONAMIENTO A UN PANEL DE DISTRIBUCIÓN DE ENERGÍA EN EL INTERIOR DEL ARMARIO RACK.**

 **CUANDO LA UNIDAD SE INSTALA EN UN ARMARIO O UN ESTANTE, ASEGÚRESE QUE TENGA SUFICIENTE ESPACIO EN TODOS LOS LADOS PARA PERMITIR LA VENTILACIÓN ADECUADA (50 CM DE LOS ORIFICIOS DE VENTILACIÓN DELANTEROS Y TRASEROS).**

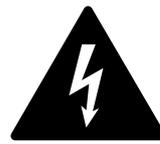

**PRECAUCIÓN**  
RIESGO DE CHOQUE ELÉCTRICO  
NO ABRA LA UNIDAD



La energía eléctrica puede realizar numerosas funciones útiles. Esta unidad ha sido diseñada y fabricada para brindarle un funcionamiento seguro. Sin embargo, el USO INCORRECTO O PUEDE PRODUCIR INCENDIOS O DESCARGAS ELÉCTRICAS. Para no anular las salvaguardas incorporadas a este producto, asegúrese de respetar las reglas básicas siguientes para su instalación, uso y servicio. Por favor lea atentamente estas “Salvaguardas importantes” ante del uso.

## Instrucciones de seguridad importantes

1. Lea estas instrucciones.
2. Guarde estas instrucciones.
3. Respete todas las advertencias.
4. Siga todas las instrucciones.
5. No utilice este aparato cerca del agua.
6. Límpielo únicamente con un paño seco.
7. No bloquee los orificios de ventilación. Instale el aparato según las instrucciones del fabricante.
8. No lo instale cerca de fuentes de calor como radiadores, calefactores, hornos u otros aparatos (incluidos los amplificadores) que generen calor.
9. Respete la finalidad de seguridad del enchufe polarizado o de tipo conexión a tierra. Un enchufe polarizado presenta dos contactos, uno más ancho que el otro. Un enchufe de tipo conexión a tierra dispone de dos contactos y una tercera clavija de conexión a tierra. El contacto ancho o la tercera clavija se suministra para su seguridad. Si el enchufe suministrado no encaja en la toma de corriente, póngase en contacto con un electricista para el reemplazo del tomacorriente que quedó obsoleto.
10. Para proteger el cable de alimentación, aléjelo de lugares de paso o donde pueda ser aplastado, especialmente en la punta de los enchufes, los tomacorrientes o el punto donde el cable sale del aparato.
11. Utilice únicamente los complementos o accesorios especificados por el fabricante.
12. Utilícelo únicamente con el carro, pedestal, trípode, abrazadera o mesa especificados por el fabricante o vendidos con el aparato. Si utiliza un carro, tenga cuidado al moverlo junto con el aparato para evitar lesiones en el caso de una caída. 
13. Desenchufe el aparato durante tormentas eléctricas o cuando no se utilice durante períodos de tiempo prolongados.
14. Solicite servicio técnico únicamente a personal de servicio técnico especializado. Será necesario solicitar servicio técnico si el aparato ha sufrido daños como, por ejemplo, si el cable de alimentación o el enchufe están dañados, se ha vertido líquido o se ha caído algún objeto dentro del aparato, o bien si dicho aparato ha sido expuesto a la lluvia o a humedad, no funciona correctamente o se ha caído.

Números 9 y 13 se aplican sólo a K2 y K3.

\* K6, K8, K10 and K20: interrumpir la red apagando el disyuntor de la red.

\*\* Válido para los modelos K3 y K3 sólo; con K6, K8, K10 and K20 se proporciona un cable de alimentación de hilos libres (es decir, sin enchufe): se provee esta solución para conectar el dispositivo a un disyuntor en la red. Consulte las instrucciones de instalación para seleccionar el disyuntor impecables.

# Importanti istruzioni di sicurezza

## SPIEGAZIONE DEI SIMBOLI GRAFICI

 Il triangolo con il lampo è utilizzato per avvisare l'utente del rischio di scossa elettrica.

 Il triangolo con il punto esclamativo è utilizzato per avvisare l'utente di importanti istruzioni d'uso e manutenzione.

 The CE-mark indicates the compliance with the low voltage and electromagnetic compatibility.

 Simbolo della connessione di terra.

 Simbolo che indica che l'apparecchio è solo per uso interno.

 Simbolo di conformità alla Direttiva 2002/96/CE e alla Direttiva 2003/108/CE del Parlamento Europeo sulle apparecchiature elettriche ed elettroniche (RAEE).

 **ATTENZIONE: PER RIDURRE IL RISCHIO DI SCOSSE ELETTRICHE, NON TENTARE DI APRIRE ALCUNA PARTE DELL'UNITÀ. NON CI SONO PARTI INTERNE AD USO DELL'UTENTE. RIVOLGERSI A PERSONALE QUALIFICATO PER L'ASSISTENZA.**

 **PER SCOLLEGARE COMPLETAMENTE QUESTO APPARECCHIO DALL'ALIMENTAZIONE PRINCIPALE, SCOLLEGARE LA SPINA DEL CAVO DI ALIMENTAZIONE DALLA PRESA.\***

 **LA SPINA DEL CAVO DI ALIMENTAZIONE DI RETE DEVE ESSERE SEMPRE ACCESSIBILE.\*\***

 **NON ESPORRE QUESTO APPARECCHIO ALLA PIOGGIA, UMIDITÀ O SOSTANZE LIQUIDE. OGGETTI PIENI DI LIQUIDI, COME VASI, NON DEVONO ESSERE COLLOCATI SU QUESTO APPARATO.**

 **K6, K8, K10 E K20 DEVONO ESSERE INSTALLATI IN ARMADIO RACK: INVECE DI COLLEGARE DIRETTAMENTE L'AMPLIFICATORE ALLA RETE ELETTRICA, COLLEGARE IL CAVO DI ALIMENTAZIONE DELL'AMPLIFICATORE AD UN INTERRUTTORE DI SEZIONAMENTO IN UN PANNELLO DI DISTRIBUZIONE ALL'INTERNO DELL'ARMADIO RACK.**

 **QUANDO L'UNITÀ È INSTALLATA IN UN MOBILE O SU UNO SCAFFALE, ASSICURARSI CHE RIMANGA SPAZIO SUFFICIENTE SU TUTTI I LATI PER CONSENTIRE UN'ADEGUATA VENTILAZIONE (50 CM DAI FORI DI VENTILAZIONE ANTERIORI E POSTERIORI).**



**ATTENZIONE**

**RISCHIO DI SCOSSE ELETTRICHE, NON APRIRE**



L'elettricità viene usata per svolgere molte funzioni utili, ma può anche causare danni personali o agli oggetti se applicata in modo improprio. Questo prodotto è stato progettato e realizzato con la massima attenzione alla sicurezza. Tuttavia, UN USO IMPROPRIO PUÒ PRODURRE SCOSSE ELETTRICHE E/O INCENDI. Per evitare potenziali pericoli, osservare le seguenti istruzioni durante l'installazione, l'utilizzo e la pulizia del prodotto. Per garantire la sicurezza e prolungare la vita utile del monitor LCD, leggere attentamente le seguenti precauzioni prima di usare il prodotto.

## Importanti istruzioni di sicurezza

1. Leggere queste istruzioni.
2. Conservare le istruzioni.
3. Tenere conto di tutti gli avvisi.
4. Seguire tutte le istruzioni.
5. Non usare l'apparecchio in prossimità di acqua.
6. Pulire solo con un panno asciutto.
7. Non ostruire le prese di ventilazione. Installare secondo le indicazioni del produttore.
8. Non installare vicino a fonti di calore quali radiatori, bocchette dell'aria calda, stufe o altri apparecchi (compresi gli amplificatori) che producono calore.
9. Non compromettere la sicurezza delle spine polarizzate o con messa a terra. Una spina polarizzata ha due terminali, di cui uno più grande dell'altro. Una spina con messa a terra ha tre terminali, di cui uno per la messa a terra. Il terminale più grande o il terzo terminale ha una funzione di sicurezza. Se la spina in dotazione non è adatta alla presa, far sostituire tale presa obsoleta da un elettricista.
10. Evitare di calpestare o di schiacciare il cavo di alimentazione, in particolare in corrispondenza di spine, prese della corrente e punto di uscita dall'apparecchio.
11. Usare solo accessori specificati dal produttore.
12. Usare solo con il supporto indicato dal produttore (carrello, piedistallo, cavalletto, staffa o tavolo) o venduto con l'apparecchio. Se si usa il carrello, fare attenzione durante il trasporto dell'apparecchio sul carrello per evitare danni causati dal ribaltamento.
13. Scollegare l'apparecchio dalla presa di corrente durante i temporali o se inutilizzato per lunghi periodi di tempo.
14. Ricorrere a personale qualificato per qualsiasi intervento. Tali interventi sono necessari in caso di guasti dell'apparecchio quali danneggiamento del cavo di alimentazione o della spina, versamento di liquidi o caduta di oggetti nell'apparecchio, esposizione a pioggia o umidità o se l'apparecchio non funziona normalmente o è caduto



I numeri 9 e 13 si applicano solo a K2 e K3.

\* K6, K8, K10 e K20: interrompere l'alimentazione elettrica commutando l'interruttore di sezionamento.

\*\* Valido solo per i modelli K2 e K3; con K6, K8, K10 e K20 è fornito un cavo di alimentazione con i terminali liberi (cioè senza spina): questa soluzione è pensata per il collegamento diretto all'interruttore di sezionamento di rete. Fare riferimento al manuale per le istruzioni di installazione e il corretto dimensionamento dell'interruttore.

## Regulatory information

### FCC COMPLIANCE NOTICE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

### WEEE DIRECTIVE

If the time arises to throw away your product, please recycle all the components possible.



This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved.

The Waste Electrical and Electronic Equipment Directive (WEEE Directive) aims to minimise the impact of electrical and electronic goods on the environment. Powersoft S.p.A. comply with the Directive 2002/96/EC and 2003/108/EC of the European Parliament on waste electrical and electronic equipment (WEEE) in order to reduce the amount of WEEE that is being disposed of in land-fill site. All of our products are marked with the WEEE symbol; this indicates that this product must NOT be disposed of with other waste. Instead it is the user's responsibility to dispose of their waste electrical and electronic equipment by handing it over to an approved reprocessor, or by returning it to Powersoft S.p.A. for reprocessing. For more information about where you can send your waste equipment for recycling, please contact Powersoft S.p.a. or one of your local distributors.

### EC DECLARATION OF CONFORMITY

**Manufacturer:**  
Powersoft S.p.A.  
via E. Conti 5  
50018 Scandicci (Fi)  
Italy



**We declare that under our sole responsibility the products:**

**Model Names:** K2, K3, K6, K8, K10, K20  
K2 DSP+AESOP, K3 DSP+AESOP,  
K6 DSP+AESOP, K8 DSP+AESOP, K10 DSP+AESOP,  
K20 DSP+AESOP.

**Intended use:** Professional Audio Amplifier

Are in conformity with the provisions of the following EC Directives, including all amendments, and with national legislation implementing these directives:

- ▶ 2006/95/EC Low Voltage Directive
- ▶ 2004/108/EC Electromagnetic Compatibility Directive
- ▶ 2002/95/CE RoHs Directive

The following armonized standards are applied:

- ▷ EN 55103-1:2009 /A1:2012
- ▷ EN 55014-1:2006 /A1:2009 /A2:2011
- ▷ EN 55022:2010 /AC:2011
- ▷ EN 61000-3-2:2006 /A1:2009 /A2: 2009
- ▷ EN 61000-3-3:2013
- ▷ EN 61000-3-11:2000
- ▷ EN 61000-3-12:2011
- ▷ EN 55103-2:2009 /IS:2012
- ▷ EN 61000-4-2:2009
- ▷ EN 61000-4-3:2006 /A1:2008 /IS1:2009 /A2:2010
- ▷ EN 61000-4-4:2012
- ▷ EN 61000-4-5:2006
- ▷ EN 61000-4-6:2014
- ▷ EN 61000-4-11:2004
- ▷ EN 60065:2002 /A1:2006 /A11:2008 /A2:2010 /A12:2011

Scandicci,  
15 July 2014

Luca Lastrucci  
Managing Director

For compliance questions only: [compliance@powersoft.it](mailto:compliance@powersoft.it)

Page intentionally left blank

## 3:1.Welcome

Congratulations on buying a Powersoft K Series amplifier! We know you are eager to use your new amplifier, but please take a moment to read this user's manual and safety instructions. In case you have any questions, please do not hesitate to contact your dealer or Powersoft.

Powersoft is a leading company in the field of high efficiency audio power management. The Powersoft switching mode technology has changed the way the world looks at professional audio amplification: no other amplifier's performance comes close for applications demanding high power and long term reliability. Thanks to amazing reductions in heat output and weight, without sacrificing output powers, Powersoft amplifiers can be used in an unlimited range of PA applications such as opera houses, theaters, churches, cinema, and theme parks.

## 3:2.Unpacking & checking for shipping damage

Your Powersoft product has been completely tested and inspected before leaving the factory. Carefully inspect the shipping package before opening it, and then immediately inspect your new product. If you find any damage notify the shipping company immediately.

The box contains the following:

- ▶ One K Series amplifier.
- ▶ One AC mains power cord
- ▶ This user guide.

## 3:3.Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

**Rather than just throwing these materials away, please ensure they are offered for recycling.**

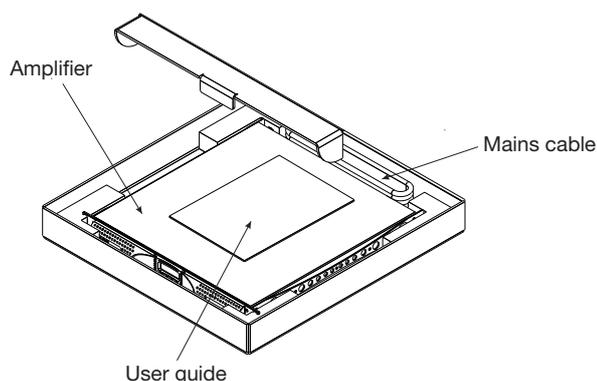


FIGURE 1:Packaging.

## 3:4.About the amplifier platform

K Series has many advanced features, digital control of many parameters, adjustable maximum mains consumption, selectable digital presets and a graphic display that shows detailed information of the status of the amplifier. All K Series amplifiers come with built in Power Factor Correction. This unique feature ensures that a predominantly resistive load is presented to mains thus minimizing current distortion and voltage/current displacement. This leads to improved performance of the amplifier at high levels of output and avoids mains-voltage collapses, typical of standard and switching power supplies. Another great advantage of this technology is that its performance is, to a large extent, independent of mains voltage. The rated output power does not vary with load/line conditions.

### 3:4.1.More sound and less weight

Class D technology based amplifiers are highly efficient, delivering greater power to speakers with reduced heat dissipation: typical running efficiency of output stages is 95%, with only 5% of input energy dissipated as heat. This allows for smaller dimensions, weight and power consumptions.

Contrary to conventional amplifiers which achieve highest efficiency only at full rated power output, Class D efficiency is almost independent of output level. Music has an average power density of 40% of its peak value; this means that other (non-class D) amplifiers can easily generate 10 times more heat than Powersoft products for the same sound pressure level.

Powersoft amplifiers deliver crystal-clear highs, and a tight, well-defined low end: the most accurate reproduction of an audio signal. Solid time proven design features ensure extremely high performance in terms of super low total harmonic distortion, optimal frequency response, high power bandwidth and damping factor across a vast number of application scenarios. Powersoft's multi patented application of Pulse Width Modulation (PWM) high frequency sampling techniques is just one of the many factors contributing to the K Series' high performance ratings across the audio bandwidth.

### 3:4.2.The Show Always Goes On

The K series offers complete protection against any possible operation error. Every amplifier in this series is designed to work under a large range of possible conditions, delivering maximum power with maximum safety and an outstanding long term reliability. Anticipating potential problems at the design stage means your show always goes on!

## Mechanical drawings

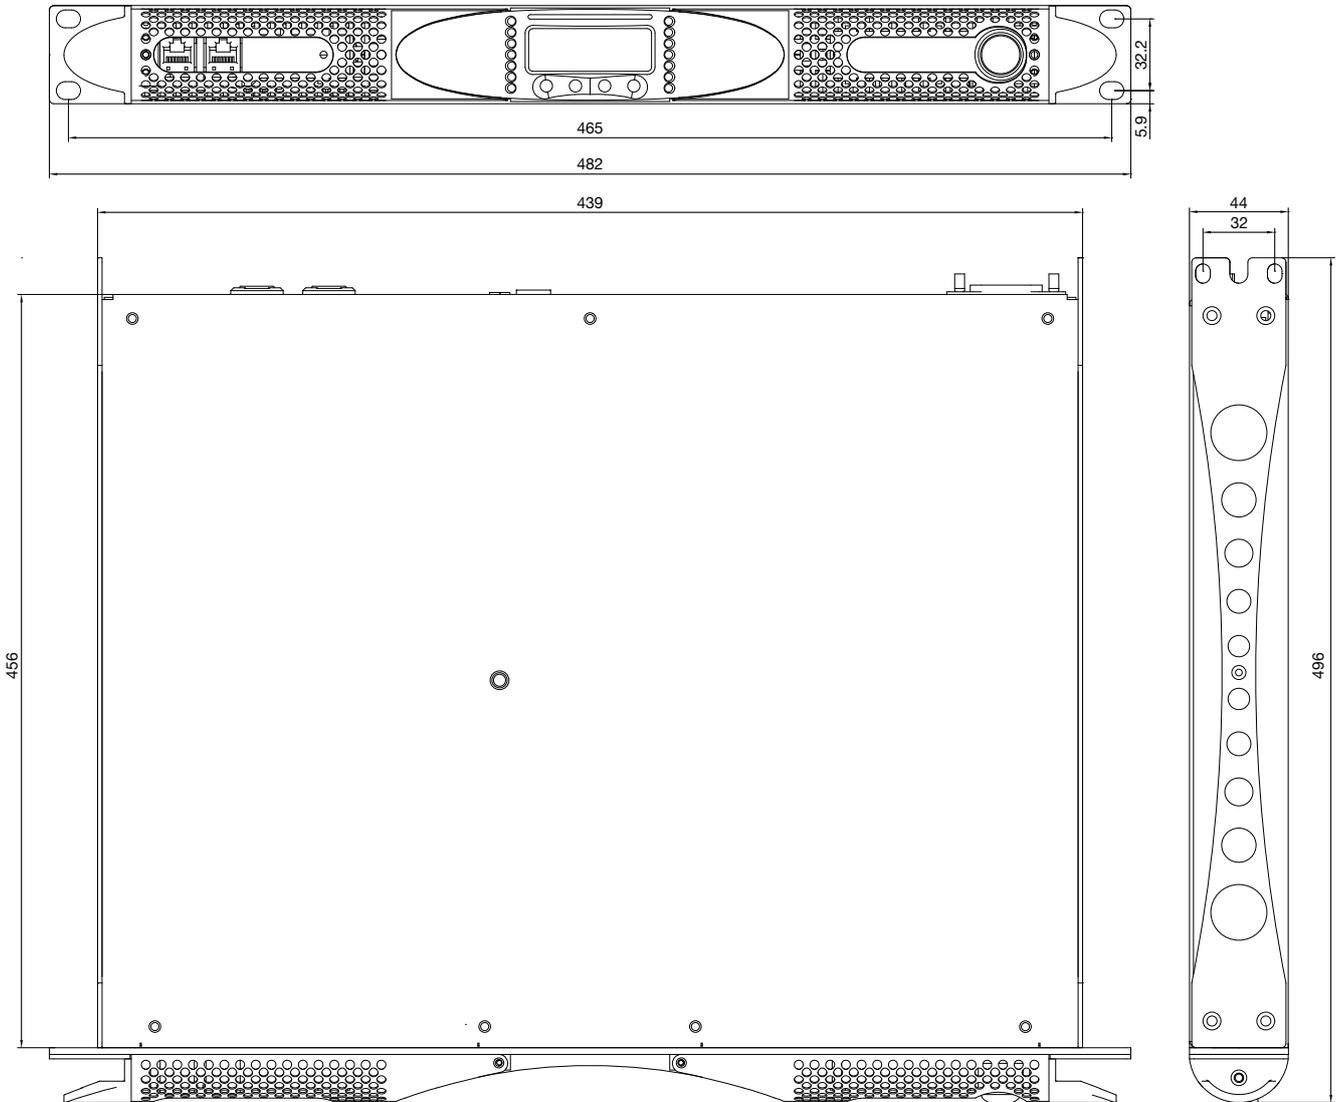


FIGURE 2: K2 and K3 mechanical drawings.


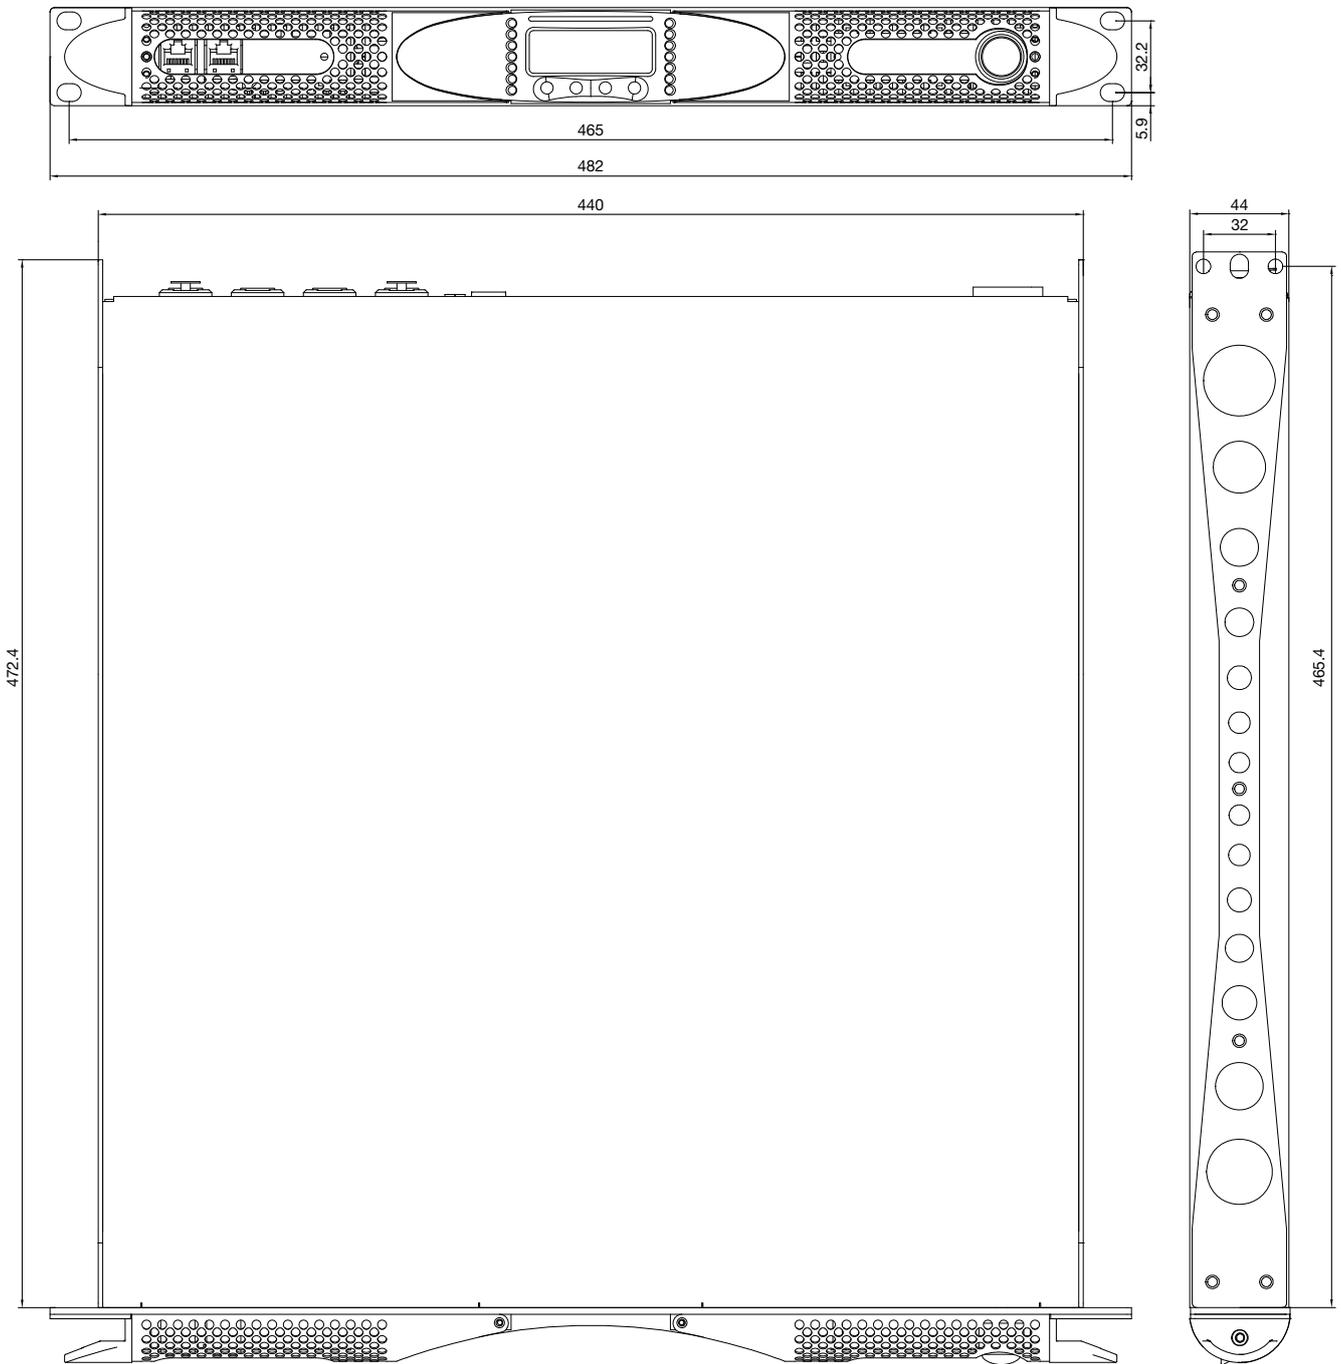



FIGURE 3: K6, K8, K10 and K20 mechanical drawings.

## Front and rear panels

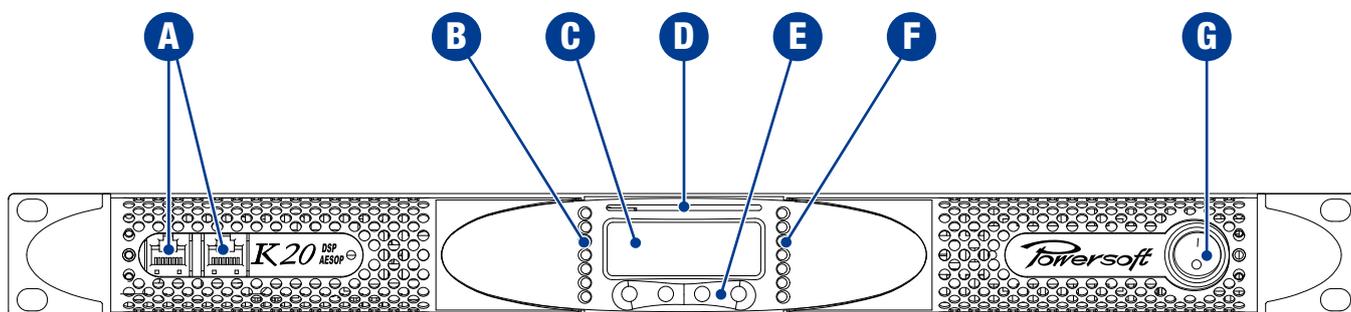


- A. RJ45 plugs (either AESOP or RS485 ports according to the amplifier configuration)
- B. LED bar: signal metering channel 1
- C. Main display
- D. Smart Card slot
- E. Multifunction buttons
- F. LED bar: signal metering channel 2
- G. Main switch

K2, K3 rear panel.

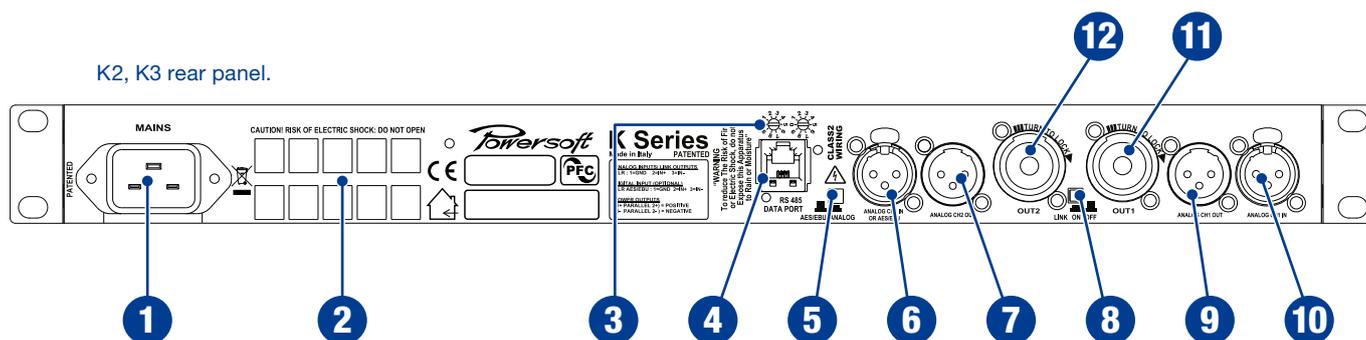


- 1. Mains plug
- 2. Air vents
- 3. Serial ID selector for the RS485 port (non AESOP version only)
- 4. RS485 serial port (non AESOP version only)
- 5. AES3/analog switch for input 2
- 6. Input 2: channel 2 analog input in analog mode or AES3 input in AES3 mode, according to the position of the switch in #5
- 7. Line output channel 2
- 8. Link button: link input from channels 1 and 2
- 9. Line output channel 1
- 10. Input 1: channel 1 analog input
- 11. Speaker connector: output channel 1
- 12. Speaker connector: output channel 2
- 13. Ethernet+AESOP ports (AESOP version only)
- 14. Vext: 12 V<sub>DC</sub>, 1A external voltage input (AESOP version only)

K2, K3 AESOP rear panel.

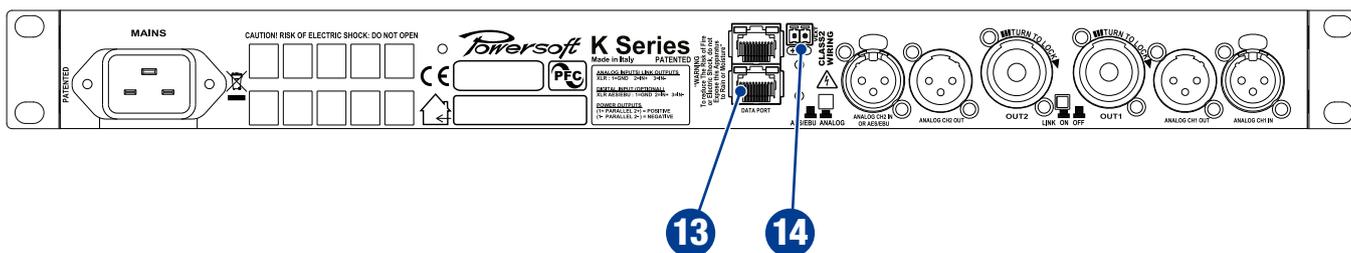


K6, K8, K10, K20 rear panel.

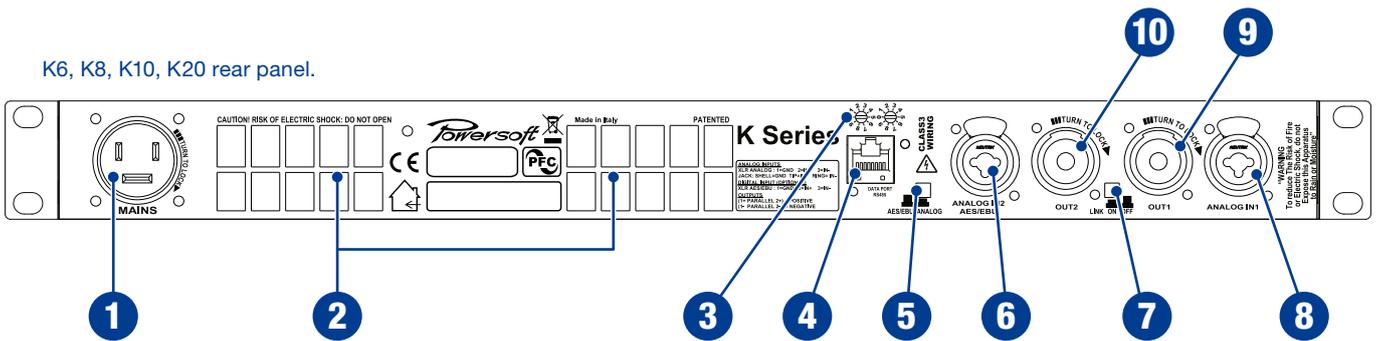

- |   |   |
|---|---|
| <ol style="list-style-type: none"> <li>1. Mains plug</li> <li>2. Air vents</li> <li>3. Serial ID selector for the RS485 port (non AESOP version only)</li> <li>4. RS485 serial port (non AESOP version only)</li> <li>5. AES3/analog switch for input 2</li> <li>6. Input 2: channel 2 analog input in analog mode or AES3 input in AES3 mode, according to the position of the switch in #5</li> </ol> | <ol style="list-style-type: none"> <li>7. Link button: link input from channels 1 and 2</li> <li>8. Input 1: channel 1 analog input</li> <li>9. Speaker connector: output channel 1</li> <li>10. Speaker connector: output channel 2</li> <li>11. Ethernet+AESOP ports (AESOP version only)</li> <li>12. Vext: 12 V<sub>DC</sub>, 1A external voltage input (AESOP version only)</li> </ol> |
|---|---|

K6, K8, K10, K20 AESOP rear panel.

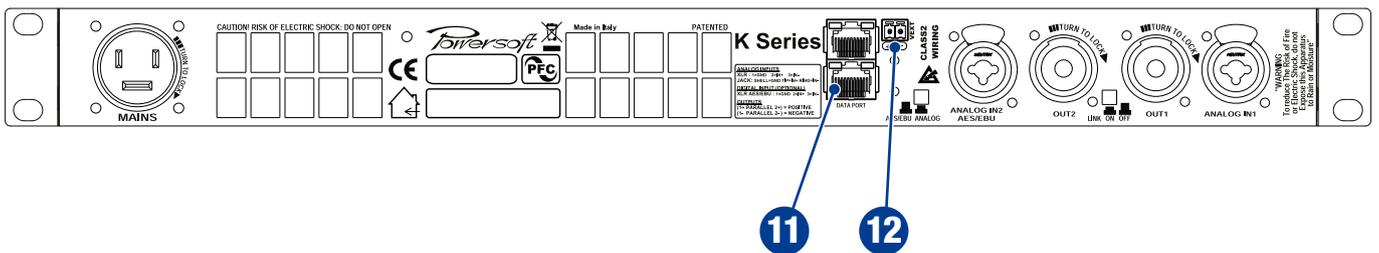

# Installation

The common installation of the amplifier is in rack cabinets: in order to limit the risk of mechanical damages, the amplifiers must be fixed to the rack using both frontal and rear mounting brackets.

Note: Instead of connecting the amplifier to the power grid directly, plug the amplifier's mains connections to a power distribution panel inside the rack cabinet.

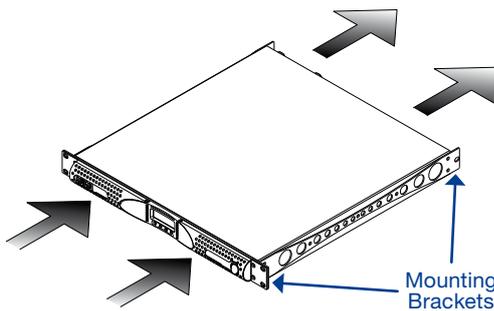


FIGURE 4: Mounting brackets and air flow direction.

## 6:1. Cooling

Install the amplifier in a well-ventilated location: the ventilation openings must not be impeded by any item such as newspapers, tablecloths, curtains, etc; keep a distance of at least 50 cm from the front and rear ventilation openings of the amplifier.

All Powersoft amplifiers implement a forced-air cooling system to maintain low and constant operating temperatures. Drawn by the internal fans, air enters from the front panel and is forced over all components, exiting at the back of the amplifier.

The amplifier's cooling system features "intelligent" variable-speed DC fans which are controlled by the heatsink temperature sensing circuits: the fans speed will increase only when the temperature detected by the sensors rises over carefully predetermined values. This ensures that fan noise and internal dust accumulation are kept to a strict minimum.

Should however the amplifier be subject to an extreme thermal load, the fan will force a very large volume of air through the heat sink. In the extremely rare event that the amplifier should dangerously overheat, sensing circuits shut down all channels until the amplifier cools down to a safe operating temperature. Normal operation is resumed automatically without the need for user intervention.

X Series amplifiers can be stacked one on top of the other due to the efficient cooling system they are equipped with.

There is however a safety limit to be observed: in case a rack with closed back panels is used, leave one rack unit empty every four installed amplifiers to guarantee adequate air flow.

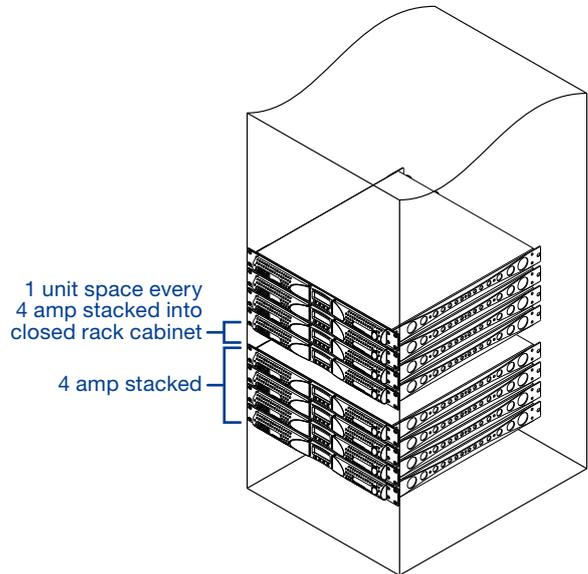


FIGURE 5: How to stack the amplifiers in closed racks.

## 6:2. Cleaning

Always use a dry cloth for cleaning the chassis and the front panel. Air filter cleaning should be scheduled according to the dust levels in the amplifier's operating environment.

**⚡ Disconnect the AC main source before attempting to clean any part of the amplifier ⚠**

In order to clean the vent filters you need to remove the front cover: never attempt to open any other part of the unit.

By means of a screwdriver Phillips PH1, unscrew the screws that lock the left and right cover grills on the front panel (ref. FIGURE 6), gently lift the covers and remove the filters. You may use compressed air to remove the dust from filters, or wash it with clean water: in the latter case ensure that the filters are dry before reassembly.

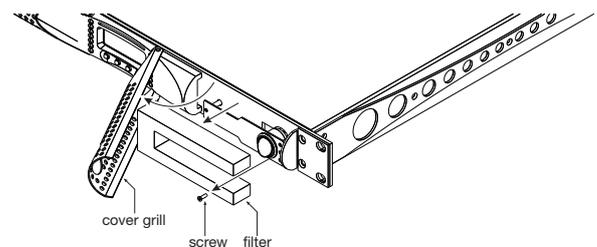




FIGURE 6: Cleaning air filters.

## 6:3.AC mains supply


 
 
The AC Main connection is made via the

- ▶ AMP CPC 45A connector in K6, K8, K10 and K20;
- ▶ IEC C20 connector in K3 and K2.

The **FIGURE 7** shows how to connect the mains power cable to the amplifier.



All K Series amplifiers have an automatic power factor correction system – PFC – for a perfect mains network interface. The PFC minimizes the reactive power reflected on the network and reduces the harmonic distortion on the voltage/current waveform: in this way the amplifier is seen as a resistive load from the mains network. Furthermore, the system allows performance to be maintained even in case of varying mains voltage.

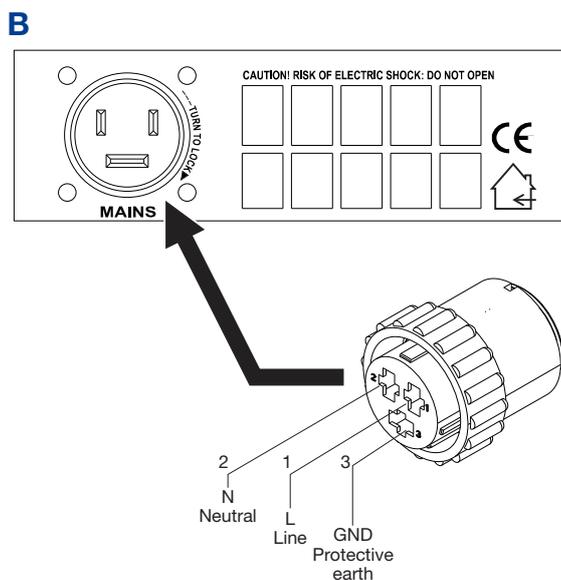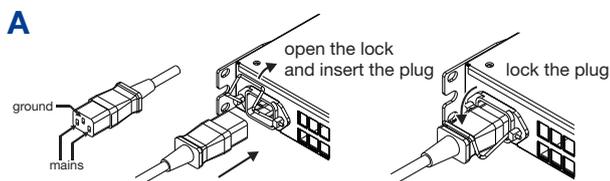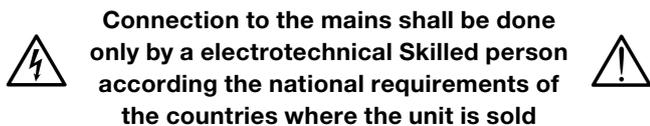

**FIGURE 7:** Mains connectors; A) IEC C20 in K2 and K3; B) AMP CPC 45A in K6, K8, K10 and K20.

## 6:4.Precautions regarding installation

Placing and using the amplifier for long periods of time on heat generating sources will affect its performance. Avoid placing the amplifier on heat generating sources. Install this amplifier as far as possible from tuners and TV sets. An amplifier installed in close proximity of such equipment may experience noise or generic performance degradation.

The power cord type provided with the amplifier are

- ▶ LAPP OLFLEX191 3G6 / SJT 3XAWG10 for K6, K8, K10 and K20.
- ▶ Bahoing SJT 3x16AWG or I-sheng SGIS 3G 1,5 mm<sup>2</sup> for K3 - K2.

### WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK

- ▶ This device must be powered exclusively by earth connected mains sockets in electrical networks compliant to the IEC 364 or similar rules.
- ▶ Install K6, K8, K10 and K20 into rack cabinet.
- ▶ With K6, K8, K10 and K20 a sectioning breaker between the mains connections and the amplifier must be installed inside the rack cabinet. Suggested device is 32A/250VAC, C or D curve, 10kA.
- ▶ With K2 and K3 provide a sectioning breaker between the mains connections and the amplifier. Suggested device is 16A/250VAC, C or D curve, 10kA.
- ▶ Before powering this amplifier, verify that the correct voltage rating is being used.
- ▶ Verify that your mains connection is capable of satisfying the power ratings of the device.
- ▶ Do not use this amplifier if the electrical power cord is frayed or broken.
- ▶ Output terminals are hazardous: wiring connection to these terminals require installation by an instructed person and the use of ready made leads.
- ▶ Take care to secure the output terminal before switching the device on.
- ▶ To avoid electrical shock, do not touch any exposed speaker wiring while the amplifier is operating.
- ▶ Do not spill water or other liquids into or on the amplifier.
- ▶ No naked flame sources such as lighted candles should be placed on the amplifier.
- ▶ Do not remove the cover. Failing to do so will expose you to potentially dangerous voltage.
- ▶ It is absolutely necessary to verify this fundamental requirement of safety and, in case of doubt, require an accurate check by qualified personnel.
- ▶ The manufacturer cannot be held responsible for damages caused to persons, things or data due to an improper or missing ground connection.
- ▶ Contact the authorized service center for ordinary and extraordinary maintenance.

## Connections

Make sure the power switch is off before attempting to make any input or output connections.

By using good quality input and speaker cables, the likelihood of erratic signal behavior is reduced to a minimum. Whether you make them or buy them, look for good quality wires, connectors and soldering techniques.

### 7:1. Signal grounding

There is no ground switch or terminal on the K Series amplifiers. All shield terminals of input connections are directly connected to the chassis. This means that the unit's signal grounding system is automatic. In order to limit hum and/or interference entering the signal path, use balanced input connections.

In the interests of safety, the unit **MUST** always operate with electrical safety earth connected to the chassis via the dedicated wire in the 3-wire cable (ref. [Chapter 6:3.AC mains supply](#)). Never disconnect the ground pin on the AC mains power cord.

### 7:2. Analog input

Analog input is provided by means of two Neutrik XLR connectors in K2 and K3 or a couple of XLR/jack hybrid combo connectors in K6, K8, K10 and K20 amplifiers. Signal polarity for XLR and TRS plugs is shown in [FIGURE 8](#).

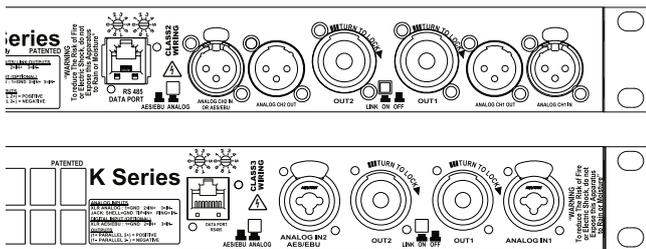


FIGURE 9: Analog input in K2, K3 (top) and K6, K8, K10, K20 (bottom).

### 7:3. Analog line output

Line out is provided in K2 and K3 via a couple of XLR connectors on the rear panel. In DSP equipped models, the output signal is pre-DSP, being a replica of the input signal.

 


FIGURE 10: Analog line output in K2, K3.

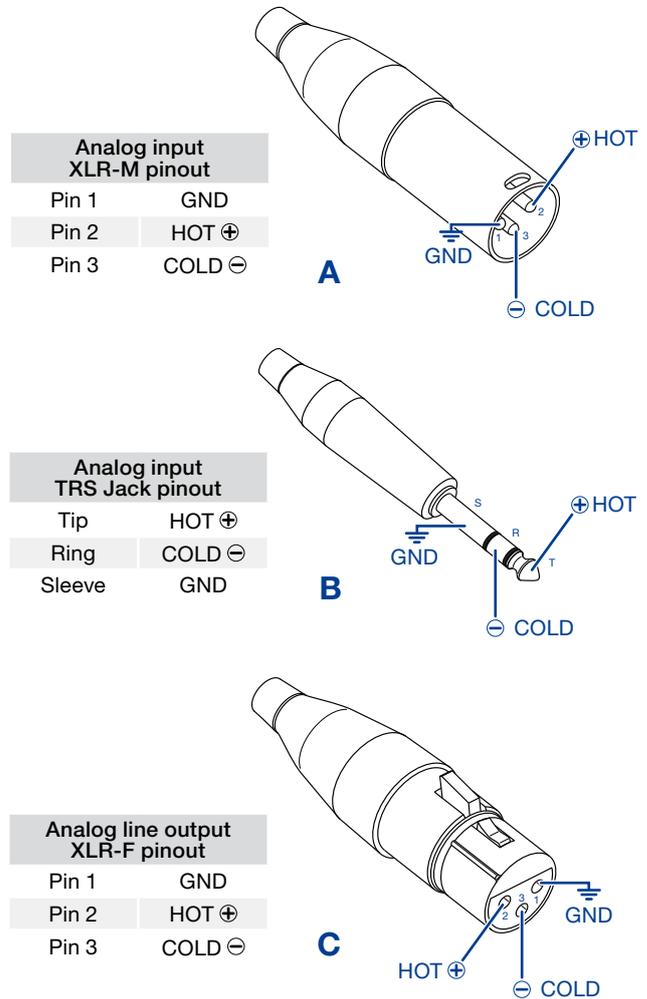


FIGURE 8: Signal polarity in balanced connections; A) XLR-M plug; B) TRS jack; C) XLR-F plug.

### 7:4. Digital Input

On DSP equipped models, the XLR input for channel2 can switch to an AES3 digital input. The AES3/analog push-button located nearby the channel 2 XLR input connector toggles the XLR between analog and digital input.

 


FIGURE 11: Digital input in K2, K3 (top) and K6, K8, K10, K20 (bottom).

In AES3 mode

- ▶ the channel 2 analog line out is off;
- ▶ the channel 1 analog input can be used as redundant input if the digital input fails.

The AES3 connection carries a channel pair through a 110 Ω nominal impedance wire in the form of a balanced (differential) digital signal: in AES3 XLR connectors the identification of hot and cold pins is not an issue; take care to never tie pin 2 or pin 3 (balanced signals) to pin 1 (ground). Avoid the use of microphone cables in AES connections: impedance mismatch can result in signal reflections and jitter, causing bit errors at the receiver.

## 7:5.AESOP

The AESOP standard can transport a single bidirectional Fast Ethernet (IEEE 802.3u, 100 Mbit/s) control data stream and two independent separate AES3 digital audio monodirectional streams using one Cat5 cable.


All K Series amplifier with the optional KAESOP board installed are equipped with at least two RJ45 connectors, each of them being a single AESOP port, capable of sending and/or receiving data and audio.

If the amplifier has only two RJ45 plugs, these will be on the front panel. If four plugs are present, the rear two will be “primary” ports, while the two on the front panel are “secondary” ports.

Primary ports allow both data and AES3 streams; secondary ports, on the other hand, are data-only ports, allowing Ethernet connections only.

Cat5 standard twisted pair cables shall be used for connections up to 100 meters (328 ft). RJ45 pinout must comply to TIA/EIA-568-B and adopt the T568B scheme pinout, as show in [TABLE 1](#).

For more details about networking and AESOP please refer to [Section: Network operations \(p. 24\)](#).

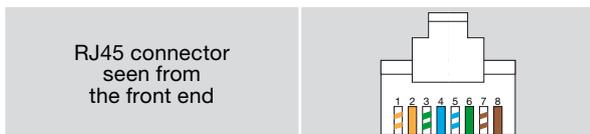

	Color code (TIA/EIA-568-B)	Pin
	ORANGE / WHITE	1
	ORANGE	2
	GREEN / WHITE	3
	BLUE	4
	BLUE / WHITE	5
	GREEN	6
	BROWN / WHITE	7
	BROWN	8

TABLE 1: EtherCON/RJ45 T568B scheme pinout.

## 7:6.Loudspeaker connections



K6, K8, K10, K20  
CLASS3 WIRING



K2, K3  
CLASS2 WIRING

**Output terminals are hazardous: wiring connection to these terminals require installation by an instructed person and the use of ready made leads.**

**Take care to secure the output terminal before switching the device on.**

Two Neutrik NL4MD speakON connectors are located on the rear panel, each of them being a single output to loudspeaker.

Pins 1+ and 2+ are physically bridged to the positive pole; pins 1- and 2- are physically bridged to the negative pole.

In order to remain within safe operating conditions, when using low impedance loads – i.e. 4 Ω or less (8 Ω or less in bridge mode) –, connections must be made with a four wire cable. Use suitable wire gauges to minimize power and damping factor losses in speaker cables.

### 7:6.1.Bridge-tied load

Bridge-tied load connection can be achieved as described in [FIGURE 12](#). In analog mode, only the input of channel 1 needs to be wired: link channel 2 to channel 1 by means of the link pushbutton located on the rear panel.

When operating with digital inputs – i.e. AES3 and AESOP – link the channels via software: do not switch the link pushbutton.

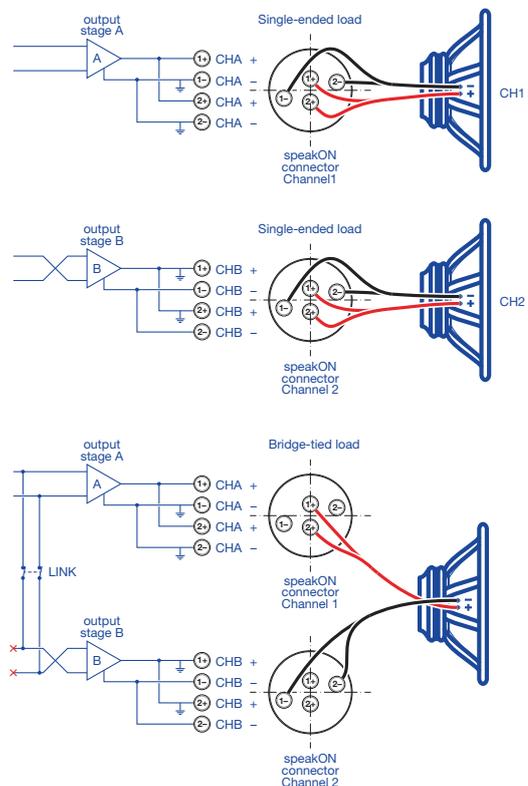


FIGURE 12: Loudspeaker connections: single-ended loads (top), bridged-tied load (bottom).

## 7:6.2. Internal signal path polarity

In order to increase the power's supply energy storage efficiency, signals coming from each channel pairs are polarity reversed, one with respect to the other within the pair, when entering the amplifier. This ensures a symmetrical use of the voltage rails: if, for example, both channels' 1 and 2 input signals are going through a peak at the same time, channel 1's energy will come from the positive voltage rails while channel 2, whose polarity is reversed with respect to channel 1, will be fed energy from the negative voltage rails. In this manner, the power supply will work symmetrically, with one channel catered by the positive rails and the other by the symmetrical negative rails. Channel 2's signal will be polarity reversed once more at the output connectors to ensure that both channels output with the same polarity as their corresponding input signals.

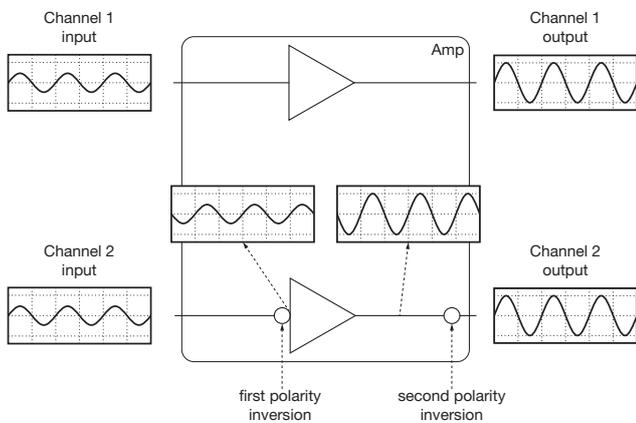


FIGURE 13: Internal signal path polarity with example input signals. Both channels 1 and 2 are fed the same sine signal.

## 7:7.V Ext

The V Ext terminal is used to remotely manage the DSP in K Series DSP amplifier and enable remote on/off.

K Series provided with a KAESOP board have a dedicated 2 pin Phoenix connector MCV 1,5/ 2-G-3,81 - 1803426 located near the rear Ethernet ports. K Series with the RS-485 serial port implement the V Ext connection on pin 2 (pin 7) of the RJ45 rear connector (ref. FIGURE 15).

When the V Ext port is powered by an external 12 V<sub>DC</sub> (1 A max) power supply, the internal controller allows to control the DSP – if present – even without AC mains supply, and allows serial communication – via RS-485 or ethernet communication in KAESOP equipped models – for remote on/off via the Armonia Pro Audio Suite software.

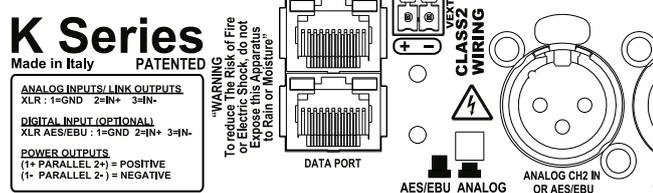


FIGURE 14: V Ext phoenix connector MCV 1,5/ 2-G-3,81.

## 7:8.RS-485 connection

K Series amplifiers without an optional KAESOP board can be remotely controlled via an RS-485 connection.

Remote connection data cables must have an 8P8C modular plug – namely RJ45 plug – to be inserted in the rear port labelled “DATA PORT”.

By plugging an RJ45 plug and selecting the unit's remote ID via the rotary trimmers, the amp is ready to be remotely controlled. Please note that ID number 00 is not allowed.

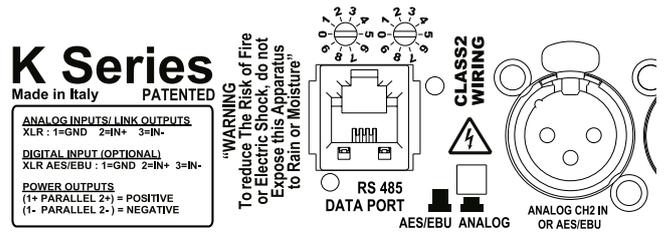


FIGURE 17: Data port and ID selectors for serial connection; note that ID number 00 is not allowed.

The recommended arrangement of the connections is a series of point-to-point (multidropped) nodes – i.e. a line or bus. Ideally, the two ends of the line should be terminated with a resistor, typically 120 Ω for twisted pairs. Powersoft recommend the use of Ethernet Cat5 straight through – patch – cables with pin/pair assignments TIA/EIA-568-B, i.e. T568B (ref. TABLE 1).

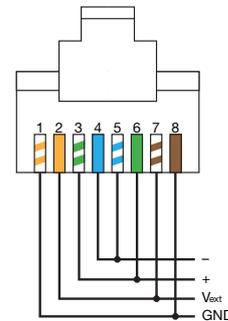


FIGURE 15: Front view of the RJ45 connector with T568 B wiring: RS-485 pinout.

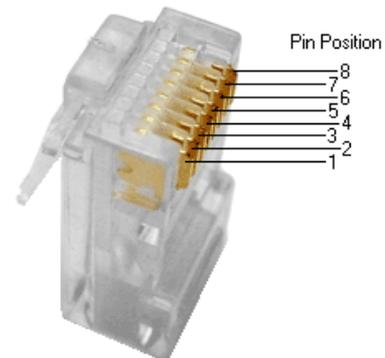


FIGURE 16: RJ45 (8P8C) plug.

## LEDs and display menu

In all K Series amplifiers, the combination of the front panel buttons together with the LCD display allow the user access to detailed information and complete control over the amplifier's status. Each button has multiple functions and the display shows the current active function for each button. This chapter illustrates all the functions and settings accessible via the amplifier front panel.

All the setup and settings functions described in this section can be also accessed through a computer with Powersoft's Armonía Pro Audio Suite software. Armonía is a software environment that offers an easy to use end user remote control interface and signal processing capabilities.

Armonía Pro Audio Suite is available for free on the Armonía forum:

<http://www.powersoft-audio.com/en/armonia-forum>

Please note that when an Armonía client is connected to the amplifier, any local operation is overridden by the software.

### 8:1.LED chart

The LED columns on the front of the amp can work as output voltage or current meters. When the LED bars are set to meter output voltage, for example, the meters on the LCD screen will indicate output current values. The vice versa is true: LED bars set as output current meters, LCD display bars become output voltage meters.

Color	Solid	Blinking	
	RED	Signal clipping OR channel muted for protection <sup>1</sup>	Tone detection problem
	YELLOW	Temperature above 85°C OR output level <sup>2</sup> -2 dB	Critical temperature (80° - 85°C)
	GREEN	output level <sup>2</sup> -3 dB	
	GREEN	output level <sup>2</sup> -6 dB	
	GREEN	output level <sup>2</sup> -9 dB	
	GREEN	output level <sup>2</sup> -15 dB	
	GREEN	input signal is above -60 dBV OR output level <sup>2</sup> -18 dB	

<sup>1</sup> In case of a short circuit protection event, the LCD screen will read "PROT".  
<sup>2</sup> With respect to the output clipping threshold.

TABLE 2: LED chart.

### 8:2.Front display

When the amp is turned on, the main screen appears after a short presentation.

The first line of the screen will read "WAIT" while the system undergoes an initial batch of internal tests to determine the status of the amp. If all parameters are normal, "READY" will replace "WAIT" on the display.

System parameters are continuously monitored by the internal controller. If any parameter value should fall out of its correctly operating range, a code error relative to that particular parameter will appear on the third line of the LCD meter at the corresponding channel number. Should the parameter be out of range for both adjacent channels, the error code will appear in between the two compromised channels.

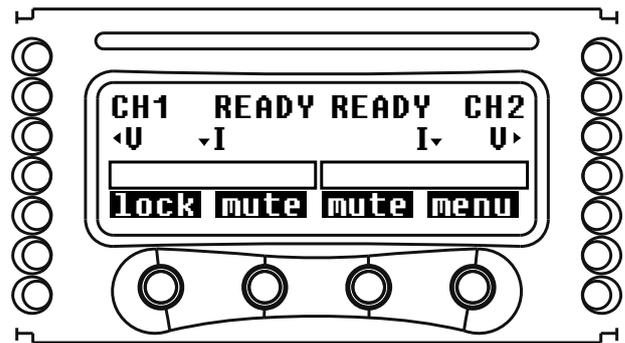


FIGURE 18: K Series front display.

The fourth line of the front panel LCD screen shows the functions of the buttons immediately below. A beep confirms that a button has been pressed; please note that this sound is not mutable.

Pressing the button directly below the "menu" label on the LCD screen gives access to the amplifier's main menu. If an Armonía client is connected to the amplifier, a yellow shadow will appear in the software workspace view, signaling local access to the amplifier.

#### 8:2.1.How to navigate the main menu

The K Series main menu can be accessed by pressing the first button on the right, underneath the LCD label "menu".

The up and down arrows allow to scroll the menu items. To access further menu voices branching off a specific menu item, select it and press the "menu" button once.

Some submenus in the K Series amps require the user to set a numerical value for specific parameters using the front panel buttons. In order to speed this process up, these submenus dedicate two of the four available buttons to switching to a fast or slow parameter increment mode.

When in the “slow” mode, the up and down arrows increase or decrease the parameter by the smallest amount possible. The “fast” mode will increase or decrease the parameter value by an amount equal to 10 times the amount increased in the “slow” mode.

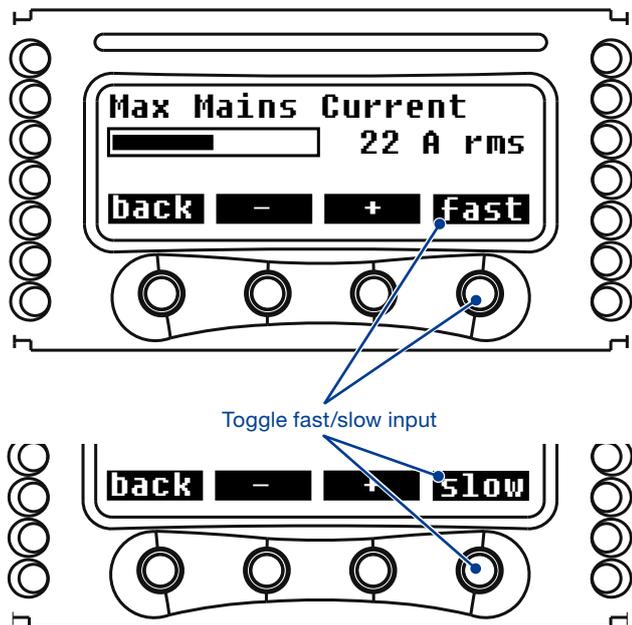


FIGURE 19: Fast/slow data emission.

For example: in “slow” mode a single “+” button press will increase the Max mains current from 22 A to 23 A; in “fast” mode a single “+” button press will increase the Max mains current from 22 A to 32 A.

## 8:2.2. Menu diagrams

On the following pages you will find two diagrams providing an overview of the structure of the Main menu (FIGURE 20) and DSP settings menu (FIGURE 21) accessible via the front panel on K Series amplifiers.


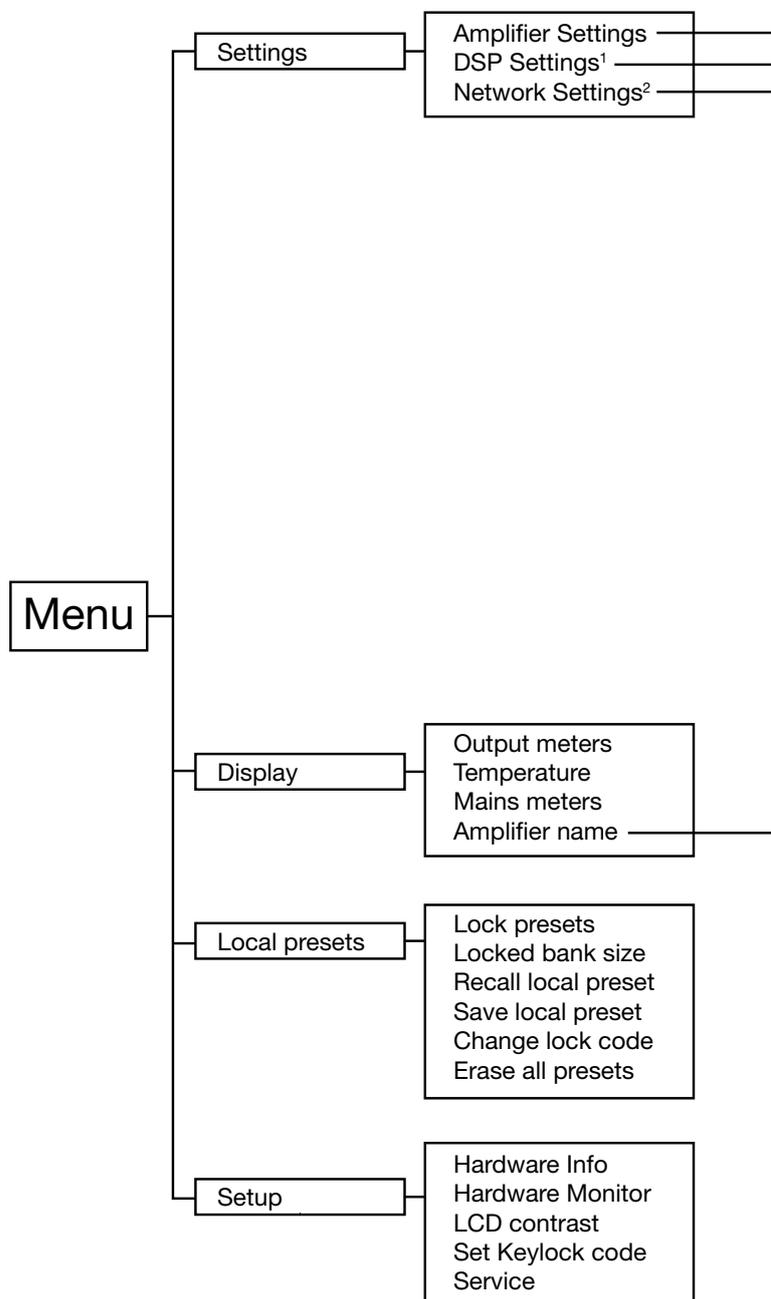


FIGURE 20: Main menu diagram.

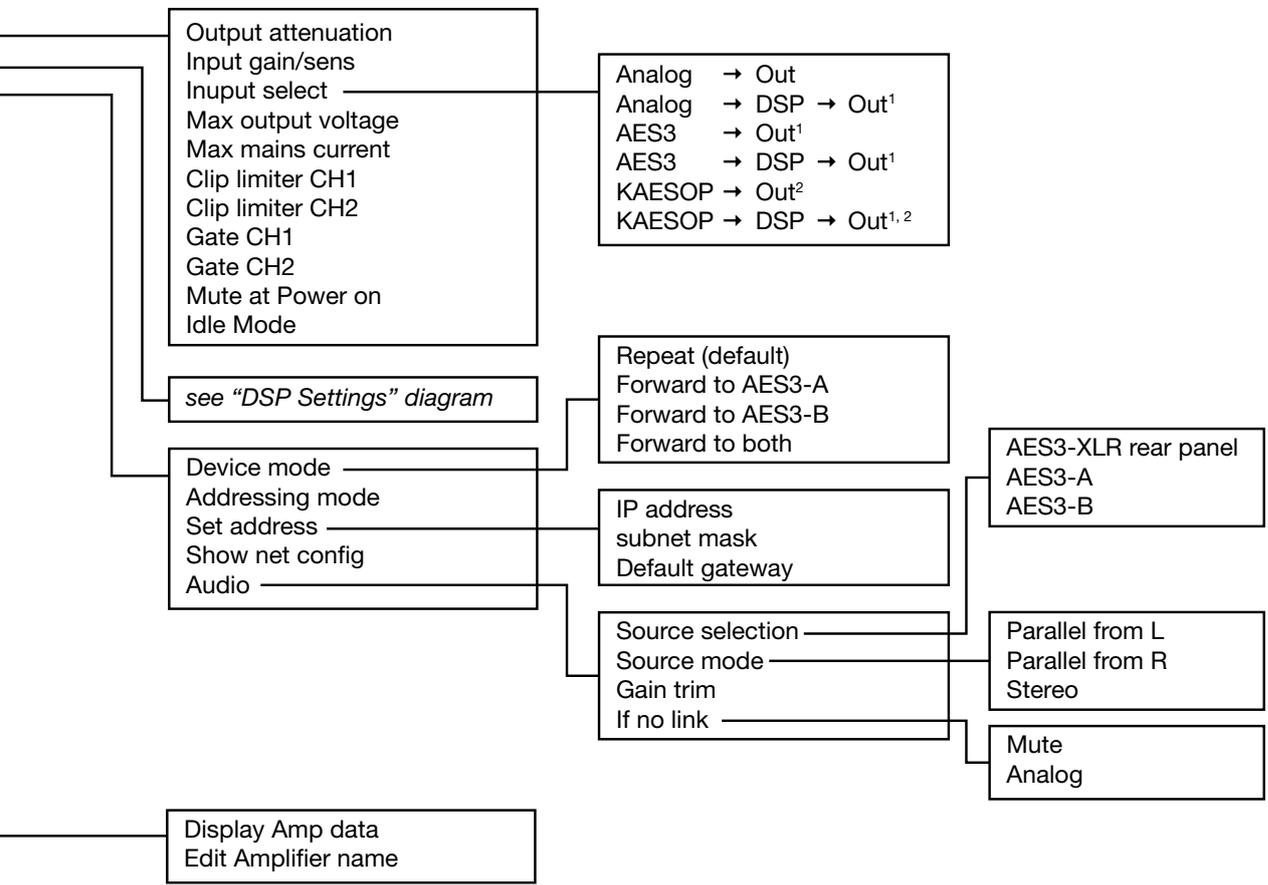

<sup>1</sup> Available only with optional KDSP board

<sup>2</sup> Available only with optional KAESOP board

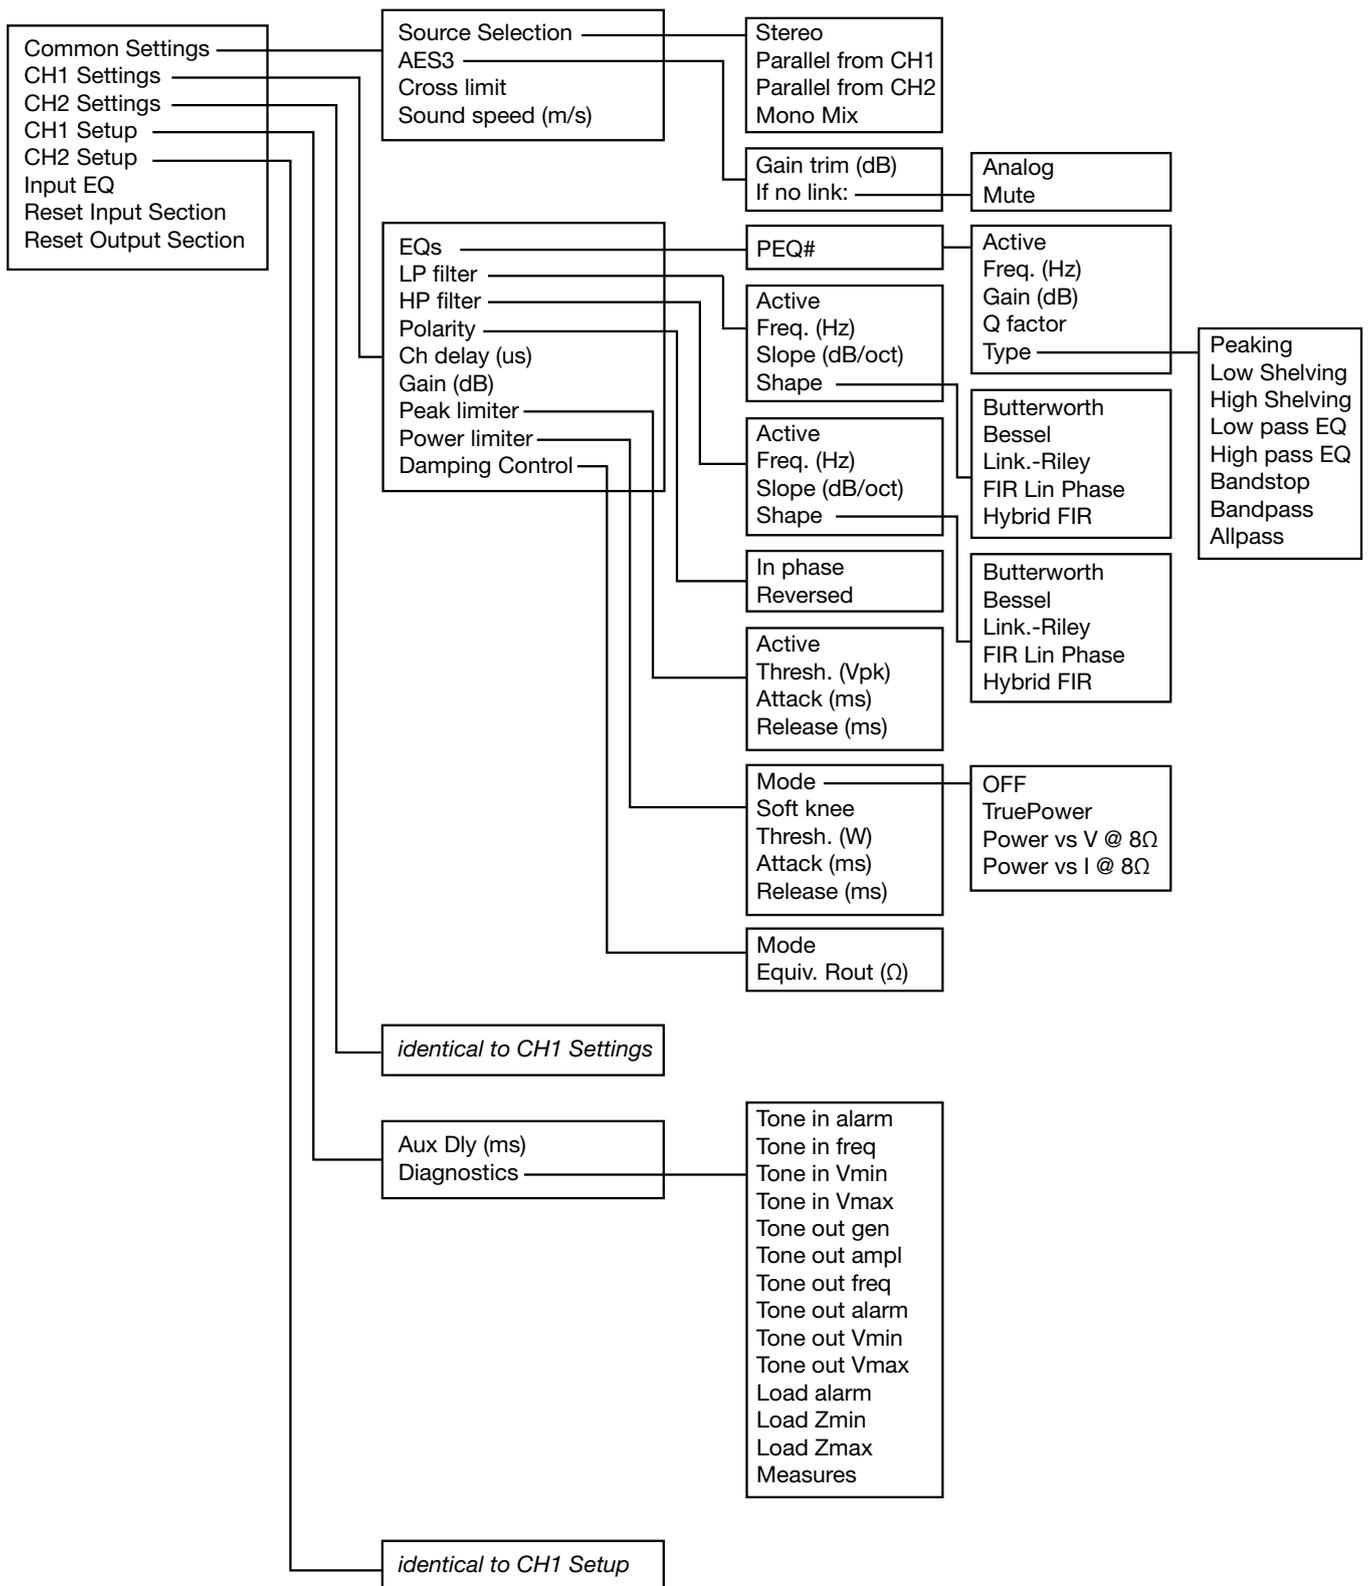


FIGURE 21: DSP settings diagram.

# Settings

## 9:1. Amplifier settings: Output attenuation

The output attenuation screen sets the amplifier's output attenuation level.

The user can choose whether to set output attenuation for channel 1, channel 2 or both by cycling through the right most button. The "+" and "-" buttons change the value of the output attenuation in the range from 0 to -30 dB. A single "+" or "-" button press will increase or decrease the output attenuation by 1 dB.

Note: for ideal sonic performance, select a 0 dB output attenuation (meaning no attenuation), and select the proper gain/sensitivity level as explained in the next paragraph.

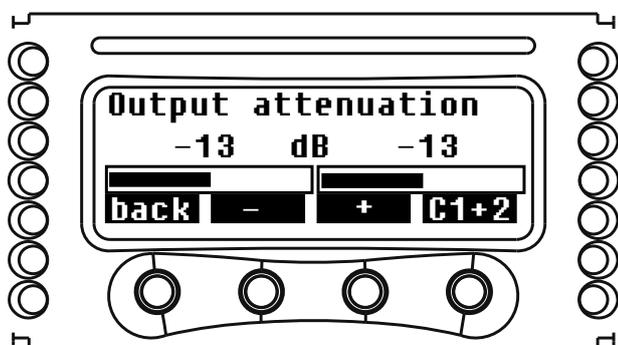


FIGURE 22: Output attenuation.

## 9:2. Amplifier settings: Input Gain/Sensitivity

All K Series amplifiers allow selection of input sensitivity to allow correct sensitivity matching with other third party equipment.

The user can choose whether to set the input gain/sensitivity for channel 1, channel 2 or both by cycling through the right most button. The "+" and "-" buttons change the value of the input gain and corresponding sensitivity. The allowed gain values are 26 dB, 29 dB, 32 dB and 35 dB.

TABLE 3 shows the input sensitivity values for the K Series amplifiers. These are the maximum RMS voltage values of a 1 kHz sine wave input before clipping occurs at the output stage. These values are reported with respect to the amplifier's gain.

Gain	K2	K3	K6	K8	K10	K20
26 dB	4.48 V	5.30 V	5.11 V	5.50 V	6.34 V	7.37 V
29 dB	3.17 V	3.75 V	3.62 V	3.90 V	4.49 V	5.22 V
32 dB	2.47 V	2.66 V	2.56 V	2.75 V	3.18 V	3.68 V
35 dB	1.59 V	1.88 V	1.81 V	1.95 V	2.25 V	2.62 V

TABLE 3: Input sensitivity (in RMS volt) @ 1 kHz vs gain.

The maximum balanced input signal before saturation of the input stage of the amplifier occurs with respect to the amplifier's gain is presented in TABLE 4.

Gain	dBV	dBu	V <sub>rms</sub>
26 dB	25.0	27	18
29 dB	21.6	24	12
32 dB	19.0	21	9
35 dB	15.6	18	6

TABLE 4: Maximum balanced input signal vs gain.

## 9:3. Amplifier settings: Input select

K Series amplifiers allow the user to choose three different input modes (if available): Analog, AES3<sup>1</sup> and/or KAESOP<sup>2</sup>.

Each of these inputs can either be processed by the internal DSP (if installed) or not. The up and down buttons on the "Input select" screen toggle between the available input sources. The "sel" button locks the selected option.

The available signal routing path configurations are:

- ▶ Analog → Out  
Analog input and direct output
- ▶ Analog → DSP → Out<sup>1</sup>  
Analog input routed to the internal DSP
- ▶ AES3 → Out  
AES3 input, direct output
- ▶ AES3 → DSP → Out<sup>1</sup>  
AES3 input routed to the internal DSP
- ▶ KAESOP → Out<sup>2</sup>  
KAESOP input, direct output
- ▶ KAESOP → DSP → Out<sup>1 2</sup>  
KAESOP input routed to the internal DSP

## 9:4. Amplifier settings: Max output voltage

The max output peak voltage of K Series amplifiers can be set by the user.

It is possible to set output peak voltage levels for channel 1, channel 2 or both by pressing the "C1+2" button. The "+" and "-" buttons change the value of the max output peak voltage. Available voltage ranges for each model are shown in TABLE 5.

K2	K3	K6	K8	K10	K20
40/140 V	40/165 V	40/153 V	40/169 V	40/200 V	40/225 V

TABLE 5: Maximum output voltage (V<sub>peak</sub>).

<sup>1</sup> Available only with optional KDSP board

<sup>2</sup> Available only with optional KAESOP board

## 9:5. Amplifier settings: Max mains current

The maximum current the amplifier can draw from the mains can be set by the user through the front panel of all K Series amplifiers.

The “+” and “-” buttons allow setting of the value of the max rms mains current. Acceptable values are within the 8 A to 16 A for K2 and K3 and from 15 A to 32 A range for all other K amplifiers.

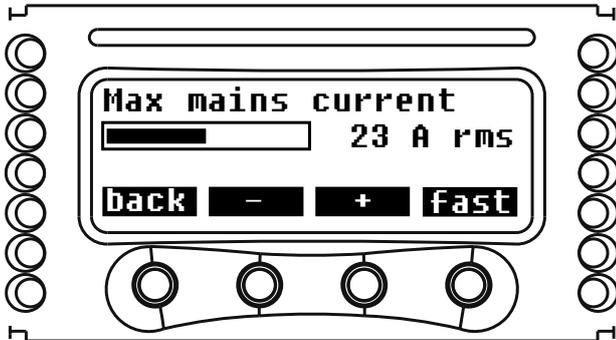


FIGURE 23: Max mains current.

Setting the maximum mains current determines the current threshold at which a C-Type current breaker will trip.

## 9:6. Amplifier settings: Clip limiter CH1/CH2

The clip function can be used to prevent distortion caused by clipping of the output signal.

Please note that clip limiters can be set independently for both channels.

**CAUTION: disabling clip limiters can potentially damage loudspeakers.**

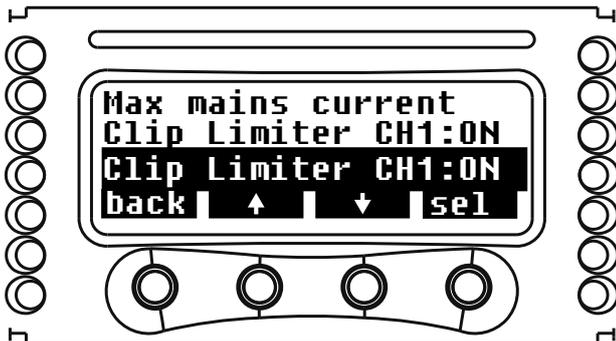


FIGURE 24: Clip limiters.

The amplifier’s internal clip limiters should not be deactivated unless the limiting function is implemented by an external device such as digital system controllers. In this case, it is extremely important to correctly set limiting parameters in order to preserve loudspeakers from excessively powerful and potentially hazardous driving signals.

## 9:7. Amplifier settings: Gate CH1/CH2

This function allows to mute the amplifier channels individually if the input signal amplitude falls below the threshold shown in

Gating the output is delayed by 5 seconds after the input signal falls below the threshold. If the channel is muted, the bottom green LED in the corresponding front panel LED column is off.

Gain	dBV	dBu
26 dB	-54	-52
29 dB	-57	-55
32 dB	-60	-58
35 dB	-63	-61

TABLE 6: Gate threshold vs gain.

## 9:8. Amplifier settings: Mute at power on

This functions allows the user to automatically mute all channels when the amplifier is turned on. Toggle the on or off status by pressing the front panel button below the “sel” label.

If this function is enabled, a “Muted” label will appear at the main screen next to each channel at the next power on. Press the button underneath the “mute” label in the front screen to unmute the channel.

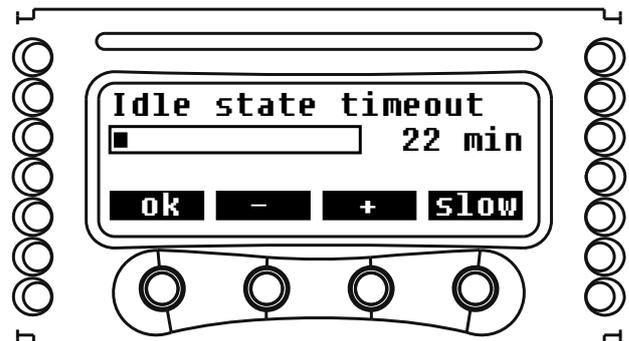


FIGURE 25: Idle state timeout.

## 9:9. Amplifier settings: Idle mode

The idle mode function is a power saving feature. When this function is activated, the output stage is turned off after no input signal greater than a selected threshold is detected for a user selectable amount of time, saving about 40 W of power per channel. This results in reduced heating, longer amplifier and fans life, and, especially for fixed installations which are permanently turned on, a lower electricity bill. Exiting from idle mode is quasi-instantaneous.

In order to set the time after which the amplifier enters in idle mode, push the rightmost button labelled “sel” when the idle mode line is highlighted. This will open the “Idle state timeout” screen. Using the central buttons, select the desired time. In the “slow” mode, a single button press will increase or decrease the time by one minute. The “fast” mode will bring this up to 10 minute steps. The timeout range goes from 0 to 720 minutes.

## 9:10.DSP Settings: Common settings

The KDSP is an advanced digital sound processor board based on a floating point SHARC® DSP.

KDSP can be used to optimize the performance of the audio system by means of fully customizable crossovers and equalizers. Exceptionally high reliability is guaranteed in all conditions by advanced limiters, and continuously monitored loudspeaker parameters. This chapter illustrates the features and operational modes of the KDSP board.

### 9:10.1.Source selection

This menu allows to choose the input signal to be processed by the DSP. The possible options are:

- ▶ **Stereo:** the signal coming from channel 1 is processed and routed out to output channel 1. Similarly, the input signal coming from Channel 2 is processed and then routed out to output channel 2.
- ▶ **Parallel from CH1:** the input signal from channel 1 feeds two parallel, distinct and independent processing branches. The result of one branch is sent to output channel 1, while the result of the other branch is sent to output channel 2.
- ▶ **Parallel from CH2:** the input signal from channel 2 feeds two parallel, distinct and independent processing branches. The result of one branch is sent to output channel 1, while the result of the other branch is sent to output channel 2.
- ▶ **Mono Mix:** the input signals from channel 1 and 2 are summed together and routed to both output channels in order to maintain a consistent output level.

### 9:10.2.AES3

This menu controls the AES3 input stream options. The AES3 source can enter the amplifier from the rear XLR connector or from the KAESOP board (if present) based on the type of input selection (ref. [Chapter 9:3.Amplifier settings: Input select](#)).

#### 9:10.2.1.Gain trim (dB)

This menu allows the user to set the gain to be applied to the signal coming from the AES3 digital input. Setting a 0 dB gain makes the full-scale digital signal equivalent to a 20 dBu analog input signal.

#### 9:10.2.2.If no link

This menu controls the amplifier's behavior should the AES3 signal connection fail or become unreliable. The AES3 connection is considered unreliable when transmission errors are greater than 1% of total data transmitted. The possible options are:

- ▶ **Mute:** when the AES3 connection fails, the amplifier mutes the output.
- ▶ **Analog:** when the AES3 connection fails, the amplifier will rely on the analog input as backup. This source signal switching is done in real time in order to avoid any glitches in the audio feed. If the input levels are

correctly matched between analog input and AES3 input (use the AES3 Gain trim parameter), the switch between AES3 and analog will be inaudible.

When using the analog input to backup a failed AES3 feed, the analog input connection must be setup based on source type of input AES3 stream:

- ▶ **AES3 from rear XLR** – the primary audio signal for this configuration is an AES3 fed via the rear XLR (AES3 → DSP → Out ref. [Chapter 7:4.Digital Input](#)). The backup analog cable, with an analog signal identical to that provided by AES3, should be plugged in the channel 1 XLR input. If the AES3 feed should fail, the amplifier will automatically fall back to channel 1 analog input (we suggest to set the DSP source selection to “Parallel from CH1”). The signal levels of both primary AES3 and backup analog signals should be carefully matched. This can be done using the gain trim parameter or by adjusting the analog signal level.

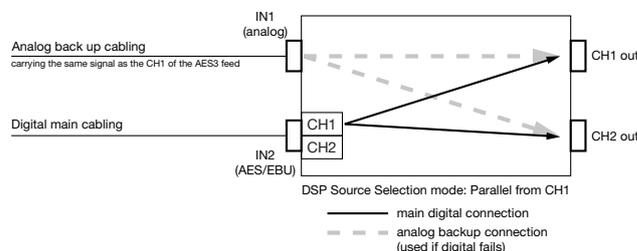


FIGURE 26: AES3 from XLR.

- ▶ **AES3 from KASEOP** – the primary audio signal for this configuration is an AES3 fed via the RJ45 port (KAESOP → DSP → Out ref. [Chapter 7:4.Digital Input](#)). The backup analog cable, with an analog signal identical to that provided by the KAESOP, should be plugged in the channel 1 XLR and channel 2 XLR (set to analog) connectors. The DSP's source selection can be set to any possible input. If the KAESOP feed should fail, the amplifier will automatically fall back to the analog input on the channels 1 and 2. The signal levels of both primary KAESOP and backup analog signals should be carefully matched. This can be done using the gain trim parameter or by adjusting the analog signal level.

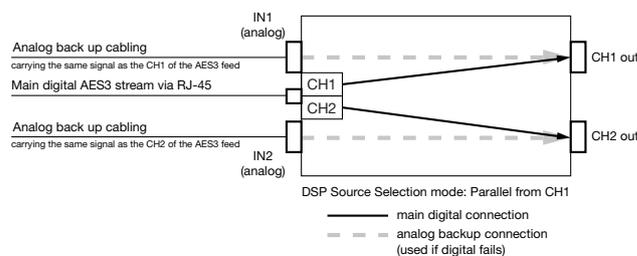


FIGURE 27: AES3 from KAESOP.

When the AES3 stream is lost and the analog backup kicks in, a message on the front panel is displayed and if a remote client (e.g. Armonía) is connected to the amplifier, an alarm is sent to it.

### 9:10.3. Cross limit

In case of power limiting of only one channel (ref. [Chapter 9:6. Amplifier settings: Clip limiter CH1/CH2](#)), the gain reduction on one channel is mirrored to the other channel in order to maintain consistent signal levels. This is useful in two ways speakers where the limitation of one channel alone leads to an unbalanced sound. This function can be turned on or off.

### 9:10.4. Sound speed (m/s)

This menu allow the user to set the sound velocity used for time to distance conversions throughout the local interface. It can be set from 320 m/s to 360 m/s.

## 9:11. DSP Settings: Channel settings

All of the following settings are available for both channel 1 and channel 2. In all the following menus and submenus, the channel number whose properties are being edited is shown in the top right hand corner of the menu. If a specific parameter affects both channels, the top right hand corner will report this as “1+2”.

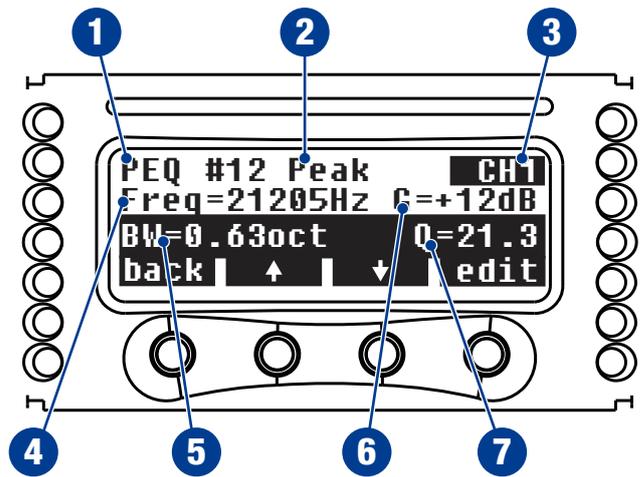


FIGURE 28: EQ settings: 1) Filter number; 2) Filter type; 3) Channel; 4) Frequency; 5) Bandwidth; 6) Gain; 7) Q.

### 9:11.1. EQs

This menu gives access to the parametric output equalizer interface. This menu lists the 16 parametric filters one by one. The current selected filter number is shown on the

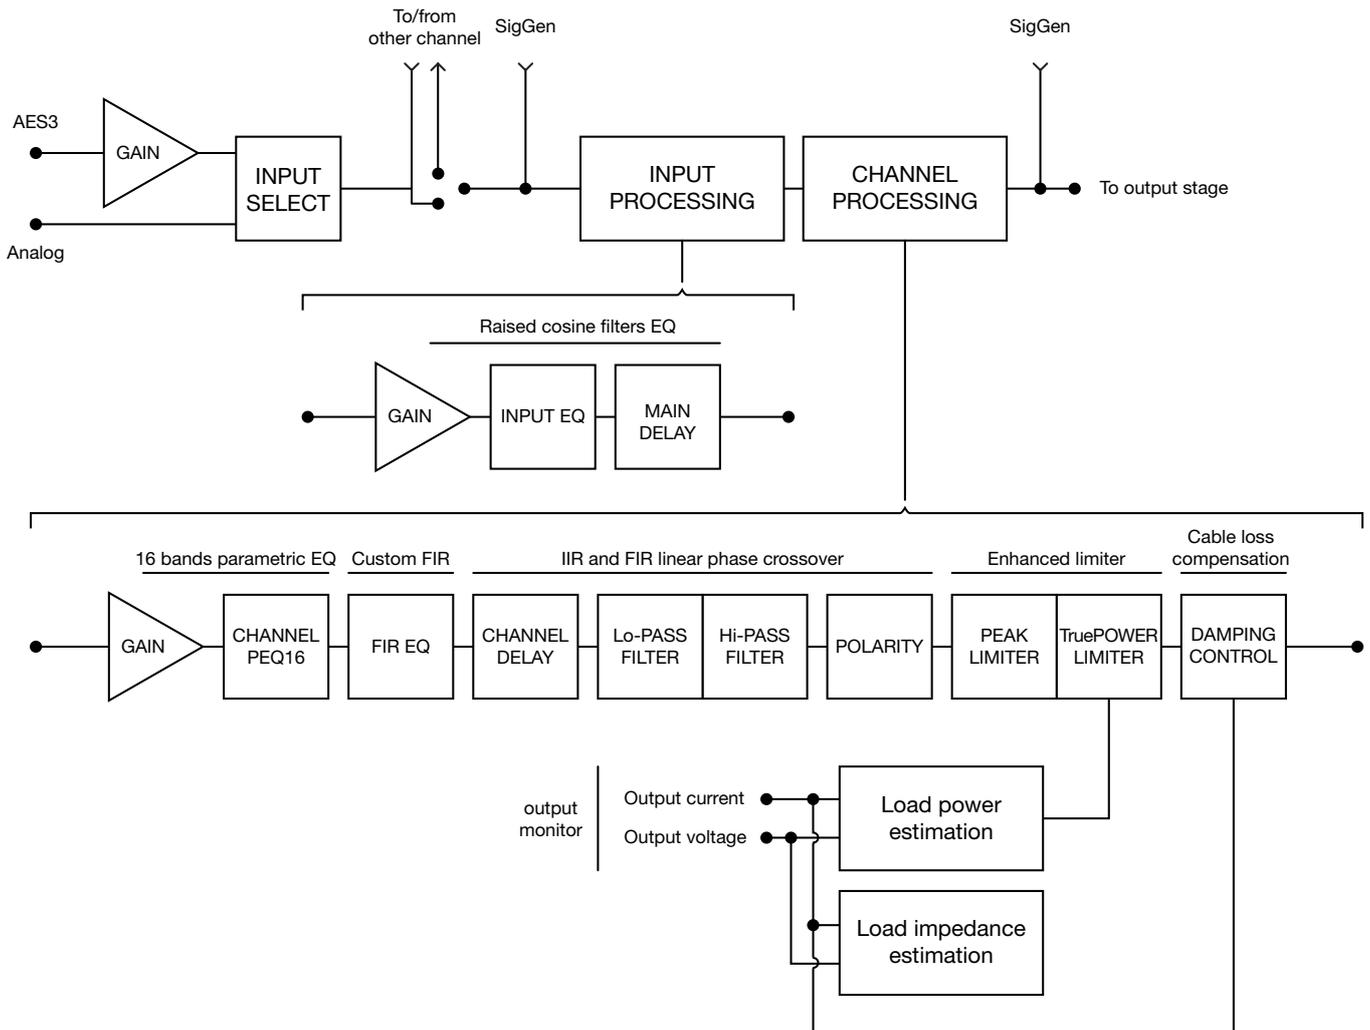


FIGURE 29: DSP processing diagram.

left of the first line. By pressing the up and down pointing arrows, it is possible to move from one filter to the next. The filter parameters are reported on the screen.

- ▶ **Active:** determines if the filter is enabled or not (flat response)
- ▶ **Gain(dB):** filter gain. Can be set only if the filter is a peaking or shelving filter. Acceptable values go from -15 to +15 dB in 0.1 dB steps.
- ▶ **Q factor:** quality factor of the filter. This can be set for all filters except shelving filters. Acceptable values range from 0.1 to 30 with 0.1 steps.
- ▶ **Bandwidth (oct):** the bandwidth of the filter expressed in octaves around the central frequency. This value is determined by setting the Q factor.
- ▶ **Type:** allows the user to select the filter type:
  1. Peaking
  2. Low Shelving (3 to 15dB/oct)
  3. High Shelving (3 to 15dB/oct)
  4. Low pass EQ
  5. High pass EQ
  6. Bandstop
  7. Bandpass
  8. Allpass

	Frequency 20Hz-20kHz	Gain ±15 dB	Slope 3-15dB/oct	Q 0.1-30
Peaking	✓	✓		✓
Lo-Shelv	✓	✓	✓	
Hi-Shelv	✓	✓	✓	
Lo-pass	✓			✓
Hi-pass	✓			✓
Band-stop	✓			✓
Band-pass	✓	✓		✓
All-pass	✓			✓

TABLE 7: Filters parameters.

By pressing the “edit” button, the settings for the selected filter can be modified. TABLE 7 summarizes which parameters can be edited according to the selected filter type.

### 9:11.2.Lo-pass/Hi-pass filters

This menu allows the user to configure the crossover filters. There are 2 available crossover filters: a lowpass and a highpass. By combining both, the result will be a bandpass response.

Both traditional Infinite Impulse Response as well as brickwall linear phase Finite Impulse Response filters are implemented. If a FIR filter in the EQ section is enabled, a FIR crossover filter cannot be enabled at the same time. The low pass and high pass filters can be edited (active status, frequency, slope, filter type) by the user via the main LCD screen.

The classic IIR crossover filter shapes that can be selected as a high pass or low pass filter are: Butterworth, Bessel, and Linkwitz-Riley. In the first 2 cases, the frequency parameter in the edit window defines the -3 dB point, in the latter, the -6 dB point. The slope is freely selectable from

a minimum of 6 dB/octave (1st order filter) to 48 dB/octave (8th order filter).

The FIR filters can be selected as normal (FIR Linear Phase) or enhanced (Hybrid FIR). The enhanced version of the filters gives a higher rejection of out of band signals, at the expense of a small phase modification (30°@400Hz). In both cases, the minimum working frequency is relative to the desired latency. Standard setting limit this to 400 Hz. For this reason it is advisable to use FIR filters to crossover upper midranges or mid-high drivers for which the phase coherency is a key point.

### 9:11.3.Polarity

This menu allows to reverse the signal polarity. The two selectable modes are:

- ▶ In phase: the signal’s polarity is not altered
- ▶ Reversed: the signal’s polarity is reversed.

### 9:11.4.Channel Delay

This menu allows to set a single channel output delay.

This is helpful to time-align two different loudspeakers on the two output stages. The selectable delay varies from 0 to 32 ms (about 11 meters at 344 m/s sound speed), with a single sample step (equal to 1/96000th second or 10.4 us, about 3.5 mm)

### 9:11.5.Gain

This menu changes the channel gain, from -40 dB to +15 dB, with a 0.1 dB step.

### 9:11.6.Limiters

The limiting process in sound reinforcement is a way to protect loudspeakers from accidental damage; therefore, limiters are a safeguard against excessive signal peaks and/or signal power. They not only protect from sudden signal peaks but also they protect against to an over power delivering.

Bear in mind that limiting does not only prevent occasional damage, but it first and foremost guarantees a long component life. The two main purposes of limiting process are:

- ▶ **Limit over-excursion:** an impulsive signal can reach the speakers and cause damage due to over-excursion of the voice coil that is driven out of the magnetic gap.This can damage the diaphragm (breaking or deforming it).
- ▶ **Limit over-heating:** delivering high power to the voice coil may lead to overheating. This can damage the isolation or burn out the voice coil. Another evident high power driving effect is power compression, noticeable in low frequency speakers.

In order to prevent the mentioned phenomena two kinds of limiters are provided:

- ▶ **Peak limiter:** protects against mechanical damages. The peak limiter may also be used to control amplifier clipping. Designers should set this limiter’s parameters as a function of both the maximum displacement (Xmax) of the diaphragm as well as the speaker’s maximum tolerated voltage.

- ▶ **Power limiter:** protects speakers against thermal damage when excessive power is applied for extended periods of time, resulting in overheating and, eventually, burning. Designers should be aware of the maximum long term power safely applicable to speakers (AES power rating). An interesting approach to RMS limiting is one that uses coil temperature control. A complete knowledge of the driver's limits allows to keep the temperature level in a safe interval not only to avoid damage but to maintain the speaker in a "linear" zone that avoids power compression.

### 9:11.6.1. Peak Limiter

The peak limiter avoids potentially dangerous displacements of the cone (an excursion larger than allowed). It acts by reducing the amplifier gain in order to reduce the measured output peak voltage. To limit the dangers of dangerous very fast transient signals, all limiters implement a look ahead time of 0.5 ms.

As a rule of thumb, use the declared peak power or twice the program power as a loudspeaker safe-zone output power.

The peak limiter's settings do not change with the number of parallel speakers connected to the amplifier, this is because the same voltage is applied to all the components in a parallel circuit. When deciding parameters for a peak limiter of an amplifier with many loudspeakers connected to it in parallel, the peak power to be taken into consideration is that reaching only a single speaker.

You can refer to the following formulas:

$$P_{peak} = \frac{V_{peak}^2}{Re}$$

$$V_{peak} = \sqrt{Re \cdot P_{peak}}$$

Where  $Re$  is the nominal impedance of only one driver,  $P_{peak}$  is the peak power and  $V_{peak}$  is the peak output voltage.

A peak limiter, used with a very short attack time (i.e., with a very rapid onset), can also be useful in limiting the maximum peak voltage in distributed constant voltage lines.

Powersoft designed the K Series limiters as protective measures; therefore, they are not meant to "color" the sounds such as dynamic compressors can do. With this in mind, time constants for these limiters should be selected so as to limit potentially harmful phenomena which persist for no more than one or two periods of the related signal bandwidth.

TABLE 8 gives a few examples of attack and release times with respect to the frequency range of the signal to be limited.

Octave band (Hz)	Attack time (ms)	Release time (ms)	Atk/Rel ratio
63	45	720	x16
125	16	256	x16
250	8	128	x8
500	4	32	x8
1000	2	8	x4
> 1000	1	2	x2

TABLE 8: Attack and release times per octave bands.

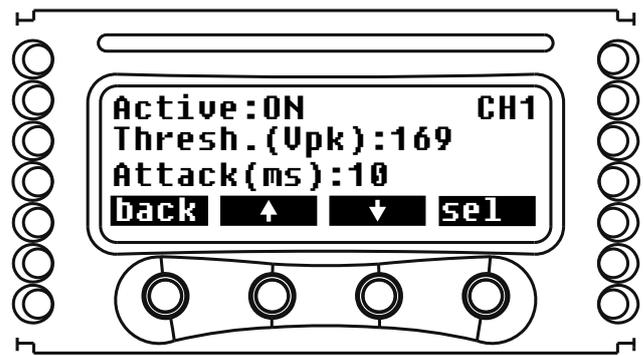


FIGURE 30: Peak limiter settings.

The peak limiter menu allows the user to define the following parameters:

- ▶ **Active:** toggles the power limiter's on/off status;
- ▶ **Threshold ( $V_{pk}$ ):** the peak voltage threshold at which the gain begins to be reduced;
- ▶ **Attack:** the attack time, i.e. the response time of the limiter intervention;
- ▶ **Release:** the decay time, i.e. the time constant after which the limiter's action is released and the gain restored to the nominal value.

In order to avoid choking the exceptional dynamic range offered by K Series amplifiers, the peak limiter is designed to ignore signal peaks lasting less than the attack time parameter. Moreover, the limiter has an additional lookahead buffer (0.5 ms) to soften clipping and minimize distortion, effectively yielding superior sonic performance.

When tweaking the peak limiter's levels, it is preferable to first setup the time parameters, and then adjust the threshold voltage. When editing the threshold value, the display shows the gain reduction (GR) in dB enforced by the limiter.

This information, together with the limiting voltage referred to the signal in the input amplifier stage (I) expressed in dBu, is displayed in real time to allow monitoring of the limiting actions as they are performed.

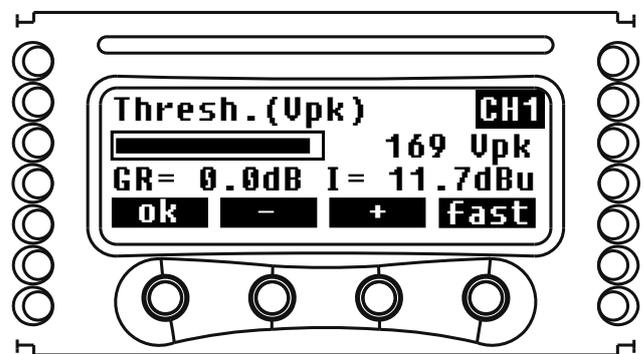


FIGURE 31: Peak limiter: threshold voltage and gain reduction.

### 9:11.6.2. Power Limiter

Given the low efficiency of electromechanical transducers, almost 50% of power reaching the voice coil is transformed into heat.

The power limiter is intended to avoid melting the voice coils of drivers while at the same time exploiting their maximum performance, therefore the power limiter should not be engaged at normal working levels. The power limiter acts by decreasing the amplifier's gain in order to reduce the power delivered to the load.

A correct power limiting is not an easy task and is multi-faceted, based on a number of variable, like the knowledge of the component heat dissipation and the goals that must be achieved. Therefore may be difficult and a little bit empirical decide thresholds and constants time. Power limiters behavior base their operations on a mix based on threshold, dynamic behavior of the output readings (voltage and current) and the type of output readings monitored.

Check the gain reduction: in order to obtain the optimal sound it should not be greater than 2-4 dB even for the loudest piece of music. Please note that a common musical signal has very high peaks, but a rather small average level (high crest factor). A stationary tone has a much higher average power (e.g. a stationary sine wave has 3 dB crest factor) even if it "sounds" less loud to the human ear.

There are three main operating modes for the K Series power limiters.

- ▶ **TruePower™**: the amplifier's active output power is estimated by measuring the load current. The TruePower limiter is a Powersoft patent technology useful to avoid overheating of the voice coil; it can however also be used to avoid power compression. The DSP provides the measurement of the real power delivered (and then dissipated) to the coil, ignoring the apparent power handled by the line.

Empirical observation yields the following equation

$$P_{max} = \frac{P_{AES}}{3}$$

where  $P_{AES}$  is the declared AES power and  $P_{max}$  is the maximum power the speaker can dissipate "in real life".

If the  $P_{AES}$  is not available, the average or continuous power, known as  $P_{rms}$  can be used as well; however, it is important to proceed with caution in evaluating how the  $P_{rms}$  value is obtained. If no other values are declared, this rule of the thumb can be used: the  $P_{AES}$  can be estimated as 6 dB below the peak power (1/4 of the peak power).

It is very important to note that, contrary to what happens with the peak limiter, setting the TruePower limiter parameters must take into account the number of speakers connected to the amplifier. This is due to the fact that the real power is calculated not only with the output voltage (which is identical for all speakers connected in parallel) but also with the output current (which changes according to the number of parallel speakers).

Determining the ideal time parameters for TruePower limiters is a very empirical process. As a guide, consider this simple rule: larger the coil, larger the thermal inertia, larger the time constant (ref. [TABLE 9](#)).

	Voice coil size (inches)	Threshold (W)	Attack time (ms)	Release time (ms)
1"	tweeter	10-20	100	300
1.5"	tweeter	20-30	150	300
2"	comp. driver	20-40	200	400
3"	comp. driver	30-50	300	500
4"	com. driver	40-60	500	3000
2"	midrange	30-100	500	3000
3"	midbass	50-150	1000	5000
4"	woofer	100-200	2000	5000
4"	woofer	150-250	4000	8000
6"	woofer	250-500	6000	10000

TABLE 9: Filters parameters.

- ▶ **Power vs voltage @ 8 ohm**: the amplifier's output power is estimated by measuring the RMS value of the output voltage, assuming an 8 ohm load. This mode allows to create settings that work well for any number of speakers connected in parallel. For example, if a "power @ 8 ohm" limiter is set to limit the output power to 150 W, a single cabinet will be delivered a maximum of 150 W with 8 ohm load. Two speaker cabinets connected in parallel will be delivered a maximum of 300 W with 4 ohm load (8 ohm loads in parallel) and so on.

This limiter is a pure RMS limiter whose functioning is based solely on the voltage module measured at the amplifier output. Differently from the TruePower limiter, this limiter does not take into account the real part of the power; however, it has the advantage of being independent from the number of cabinets linked together, just as a peak limiter.

Some attention is needed to set the power threshold. The  $P_{AES}$  can be used if it is available. If no other power rating is declared, the  $P_{rms}$  can be used as well; however, the RMS parameter is a value related to the maximum manageable power and not the real power. Proceed with caution because the manageable power could be greater than the real power. Some constructors declare the RMS power at the minimum impedance point of the speaker; this, again, may lead to an overestimation of the true power values the speaker can handle. If no other values are available, the following rule of the thumb can be used: the  $P_{rms}$  can be estimated as 6 dB below the peak power (1/4 of the peak power).

In order to preserve the driver in the long term, once the maximum power limit is decided upon, consider a power reduction of up to 3 dB of that value.

In order to use this limiter correctly, it is important to recalculate the equivalent power at 8 ohm. For example, with an 4 ohm speaker with 500 W maximum RMS power, the equivalent power at 8 ohm needs to be calculated as follow:

1. calculate the RMS voltage value needed to generate the maximum RMS power on the 4 ohm speaker:

$$V_{rms} = \sqrt{Re \cdot P_{rms}}$$

where  $V_{rms}$  is the RMS voltage of the speaker,  $P_{rms}$  is its average or continuous power and  $Re$  the nominal impedance. In the above example the RMS voltage of the 4 ohm speaker is  $V_{rms} = 44.7$  V.

- calculate the power delivered to a speaker with nominal impedance of 8 ohm with that  $V_{rms}$  voltage:

$$P_{equiv} = \frac{V_{rms}^2}{8}$$

where  $P_{equiv}$  is the equivalent power on the 8 ohm speaker and  $V_{rms}$  is the RMS voltage value calculated at step 1. In this example (4 ohm speaker) this is 250 W. This is the threshold power to set in the limiter.

The time constants for the Power vs voltage @ 8 Ohm limiter can be set in the same way as for the TruePower limiter.

- **Power vs current @ 8 ohm:** similar to the case power vs voltage @ 8 ohm, but based on the current measured at the output.

In this case the formula to derive the average or continuous power, known as  $P_{rms}$  from the RMS current is:

$$P_{rms} = I_{rms}^2 \cdot R_e$$

where  $I_{rms}$  is the RMS current.

This limiter is particularly useful in situations where the parameter to be controlled is the output current (e.g. for tweeters).

It is also useful for special applications such as large coil speakers with current controls. When determining this limiter's parameters, it is necessary to take into account the number of speakers connected in parallel to the amplifier.

The power limiter menu allows to set the following parameters:

- **Mode:** allows to determine the power limiter
  - OFF/ON: toggle the limiter on or off;
  - TruePower: sets the limiter mode to TruePower
  - Power vs V @ 8 Ω: sets the limiter mode to Power vs voltage @ 8 ohm
  - Power vs I @ 8 Ω: sets the limiter mode to Power vs current @ 8 ohm
- **Soft knee:** toggle ON/OFF
- **Thresh.(W):** threshold output power level expressed in watt at which the gain begins to be reduced;
- **Attack (ms):** the time it takes for the limiter to start reducing the amplifier gain once the output power has exceeded the threshold value;
- **Release (ms):** the time constant after which the gain is restored to its nominal value once the output power has returned below the threshold.

When editing the power threshold value, the display shows the gain reduction (GR) in dB enforced by the combined effect of the peak and power limiters. This information, together with the average power truly delivered to the load ( $P_{avg}$ ), is displayed in real time to allow monitoring of the limiting actions as they are performed.

## 9:11.7. Damping Control

This unique and patented feature allows to add a “virtual” series resistor to the amplifier output. This is done to obtain the desired damping factor with any cabling used. For this end, the virtual series resistor can also have a negative value to compensate cabling resistance.

For example, using a 10 meter cable to power the subwoofer means adding a series parasitic resistance of about 0.3 Ohms. By enabling the damping control, a virtual negative series resistance can be added to compensate the cable resistance.

**When damping control is enabled, a lowpass filter cutting around 400 Hz is automatically inserted into the amplifier chain. This feature is intended to be used only for subwoofer applications.**

Another advantage offered by the damping control feature is that in adding the series equivalent output resistance to the amplifier chain, the variation of the voice coil resistance due to heating can be taken into account. This allows to obtain a correctly damped bass response at average working condition, where the voice coils are subject to heating due to the passage of current.

For example, if the subwoofers are going to work at close to full power, an additional negative resistance of 1 to 2 Ohms should be added to compensate the high resistance generated by the heated voice coils to obtain a correctly damped response. On the other hand, if the same subwoofers are working at low power, a smaller negative resistance should be added: in this case the cooler voice coil presents a smaller series resistance to be compensated.

Leaving too high an equivalent series resistance results in an overdamped system.

Section area (mm <sup>2</sup> - AWG)	Nominal resistance	Length (ms)	Resistance (ohm)
2 x 1.5 - 16 AWG	R = 12 Ω/km	5	0,12
		10	0,24
		20	0,48
2 x 2.5 - 13 AWG	R = 7.4 Ω/km	5	0,07
		10	0,15
		20	0,30
2 x 4 - 11 AWG	R = 4.5 Ω/km	5	0,05
		10	0,09
		20	0,18

TABLE 10: Typical speaker cabling resistance.

On TABLE 11 notice the exceptionally high value (3.8 ohm) when the driver reaches its thermal limit.

Average power/ rated power	Power compression	Equivalent series resistance to a 8 Ω driver
10%	1.4 dB	1.0 Ω
20%	2.0 dB	1.4 Ω
50%	2.8 dB	2.1 Ω
100%	4.5 dB	3.8 Ω

TABLE 11: Typical resistance increase due to voice coil heating.

## 9:12.DSP Settings: Channel setup

---

### 9:12.1.Auxiliary delay

This delay is a further input delay: it acts before the input EQ and is independent from the input EQ stage.

### 9:12.2.Diagnostics

The diagnostics tool allows the user to program and test the integrity of the input and/or output line.

- ▶ The input test is based on the detection of a pure tone (generated by an external tone generator) on any input line.
- ▶ The output test relies on the measurement of the impedance at a well defined frequency: the amplifier can generate a pure tone and measure the voltage and current at the generated tone frequency. It is therefore possible to recalculate the impedance at that specific frequency.

When an alarm condition is met, the user can be informed of the event via software or directly from the amplifier.

#### 9:12.2.1.Tone in alarm

The tone in alarm can measure the integrity of any input line feeding signal into the amplifier. This detector can measure a tone applied by an external generator.

- ▷ **Tone in alarm:** enable/disable the input tone detection
- ▷ **Tone in freq:** the frequency of the tone that has to be detected (range 20 Hz - 24 kHz, step of 10 Hz).
- ▷ **Tone in Vmin:** the minimum threshold value that has been detected (range 0  $V_{rms}$  - 4  $V_{rms}$ , step of 10  $mV_{rms}$ ).
- ▷ **Tone in Vmax:** the maximum threshold value that has been detected (range 0  $V_{rms}$  - 4  $V_{rms}$ , step of 10  $mV_{rms}$ ).

#### 9:12.2.2.Tone out gen

The inner tone generator allows the user to generate a tone that can be used to check the integrity of the output line. This tone should be used outside of the frequency bandwidth of the driven speaker to avoid can be listen.

- ▷ **Tone out gen:** enable/disable the internal generator.
- ▷ **Tone out ampl:** the output voltage of the generator (range 0  $V_{rms}$  - 20  $V_{rms}$ , step of 1  $V_{rms}$ ).
- ▷ **Tone out freq:** the frequency of the tone that has to be generated and eventually detected (range 20 Hz - 24 kHz, step of 10 Hz).

#### 9:12.2.3.Tone out alarm

The output tone detection can measure the presence of a tone generated by an external or internal generator.

- ▷ **Tone out alarm:** enable/disable the output tone detection.
- ▷ **Tone out Vmin:** the minimum detected threshold voltage value (range 0  $V_{rms}$  - 20  $V_{rms}$ , step of 1  $V_{rms}$ ).
- ▷ **Tone out Vmax:** the maximum detected threshold voltage value (range 0  $V_{rms}$  - 20  $V_{rms}$ , step of 1  $V_{rms}$ ).

#### 9:12.2.4.Load Alarm

The output Load Monitor allows to detect the impedance load at a certain frequency. The high resolution algorithm implemented in this tool allows accurate measures.

- ▷ **Load alarm:** enable/disable the impedance detection.
- ▷ **Load Zmin:** the minimum allowed impedance threshold value (range 0  $\Omega$  - 500  $\Omega$ , step of 0.1  $\Omega$ ).
- ▷ **Load Zmax:** the maximum allowed impedance threshold value (range 0  $\Omega$  - 500  $\Omega$ , step of 0.1  $\Omega$ ).

#### 9:12.2.5.Measures

Pressing the button measures gives access to a sub menu where the various amplifier readings are available.

- ▷ **Tone in:** measurements of the input tone at the selected frequency.
- ▷ **Tone out:** measurements of the output tone at the selected frequency.
- ▷ **Z load:** measurements of the load at the selected frequency.

## 9:13.DSP Settings: Input EQ

---

This menu allows to turn on / turn off the input processing block. This can be useful when resetting the amplifier to the original “output processing only” behavior without using any software.

Turning off the Input EQ, all input processing set up using, for example, the Armonía Audio Suite can be bypassed at once.

It is advisable to save amplifier presets with this setting turned off: in this way when loading presets the user can be sure that only the output processing is enabled. The burden of re-enabling and setting up input processing is left to the remote control software.

## 9:14.DSP Settings: Reset input section

---

This operation disables the input processing (input EQ, input gain and delay) and resets the aux delay to zero.

## 9:15.DSP Settings: Reset output section

---

This function disables all output EQ, limiters and damping functions.

**Warning: this operation may potentially damage connected speakers.**

Pay special attention to shutting down any audio source before using this function.

## Network operations

Network capabilities and network setting menus are available only for K Series amplifiers equipped with a KAESOP board.

KAESOP stands for K (as in Powersoft's K Series) AES3 and Ethernet Simple Open Protocol. Powersoft's KAESOP is designed to provide high reliability to live applications in harsh environments where Quality of Service must be guaranteed. Electromagnetic and radio frequency interference (EMI and RFI) originating from a high power audio and light system must not degrade audio quality or cause a control link interruption. Moreover, a single cable or device failure should not affect the overall system performance.

### 10:1.Introduction to AESOP

The AESOP standard can transport a single bidirectional Ethernet 100 Mbps control data stream and two separate AES3 digital audio monodirectional streams using one Cat5 cable.

All K Series amplifier with the optional KAESOP board installed are equipped with at least two RJ45 connectors, each of them being a single AESOP port, capable of sending and/or receiving data and audio.

If the amplifier has only two RJ45 plugs, these will be on the front panel. If four plugs are present, the rear two will be "primary" ports, while the two on the front panel are "secondary" ports.

Primary ports allow both data and AES3 streams; secondary ports, on the other hand, are data-only ports, allowing Ethernet connections only.

Cat5 standard twisted pair cables shall be used for connections up to 100 meters (328 ft). RJ45 pinout must comply to TIA/EIA-568-B and adopt the T568B scheme pinout, as show in [TABLE 1 p. 22](#).

**Please note that even if crossed Ethernet cables would work control wise, crossed cables are not to be used for KAESOP connections: they will not allow the AES3 streams to flow correctly.**

#### 10:1.1.Data stream

The data stream in the AESOP is implemented by a 100 Mbit Ethernet connectivity with auto-sense.

Each device can use a static IP address assigned by the user. Alternatively, it can be set to automatically configure itself without user intervention following the Zeroconf protocol.

The dual port design in K Series amplifiers allows for daisy chain and redundant ring topologies. A fault-bypass built-in feature takes into account the possibility of loosing an intermediate device or having a faulty cable link without compromising the ring integrity.

The KAESOP board detects bad quality connections by counting errors on the Ethernet control. Faulty connections are automatically switched from 100 Mbit/s to 10 Mbit/s to attempt to keep the link active even in the worst case scenarios.

#### 10:1.2.Audio

Audio is distributed to devices via the AESOP protocol by 2 independent and separate AES3 streams labeled AES3-A stream, AES3-B stream. These are carried by two Cat5 wire pairs unused in the 100 Mbit Ethernet protocol.

AES3 is a license free and well known standard guaranteeing low-latency, high reliability and excellent audio quality. A single AES3 stream can carry a stereo audio signal. The AESOP protocol can therefore handle four audio channels.

When a K Series amplifier is powered off or if it is unavailable, a passive high frequency relay circuit allows the audio signal to pass through, preserving the network chain connection integrity.

When the device is powered up, the internal circuits automatically select the most appropriate AES3 stream direction and bypass the relay, re-buffering actively the AES3 signal. The direction is maintained until errors are detected on the AES3 receiver circuit. When errors or link failure are detected, the direction is swapped, to build-up a new path for the audio. In a fraction of a second (no more than 50ms), some of the devices in a ring will swap to the other direction, restoring the audio streaming.

#### 10:1.3.Ethernet internal switch

All control data streams in the KAESOP system are transported via an Ethernet protocol. Inside all K Series amplifiers is an Ethernet switch connected to each RJ45.

This means that the bidirectional data stream can enter/exit one port and exit/enter any other port, either alongside AES3 streams or on its own.

Internal routing of Ethernet networking is automatic and not user controllable. An internal switch provides packet flooding block services in order to allow building networks with a ring topology.

#### 10:1.4.Forwarding and repeater modes

Each K Series amplifier can be configured to handle the pair of AES3 streams embedded in the AESOP protocol in one of two basic network modes: repeater and forwarder.

These are true connection "building blocks"; it is therefore important to understand these two modes thoroughly before attempting to create or modify larger and more complex amplifier networks.

The following are definitions of the terms used in this section:

- ▶ **AES3-A stream:** AESOP digital audio stream A (two channels)
- ▶ **AES3-B stream:** AESOP digital audio stream B (two channels)
- ▶ **AES3-XLR stream:** AES3 digital audio stream via the rear panel XLR connector.
- ▶ **PORT 1, PORT 2:** primary RJ45 AESOP ports
- ▶ **PORT 3, PORT 4:** secondary RJ45 Ethernet ports

## 10.2.KAESOP repeater mode

The In the Repeater mode, any AES3 stream received on PORT 1 will be repeated on PORT 2 and vice-versa: if the AES3 stream is received on PORT 2 it will be repeated on PORT 1.

The Repeater mode is the default device mode setting.

This applies to both AES3-A stream and AES-B stream independently. If an AES3 stream (A or B) is present as input at both RJ45 ports (this can happen when a ring network topology is used), the internal AESOP repeater feeds only one of the two identical streams keeping the second stream in standby.

If for some reason the first stream fails the second stream is used as a backup audio source.

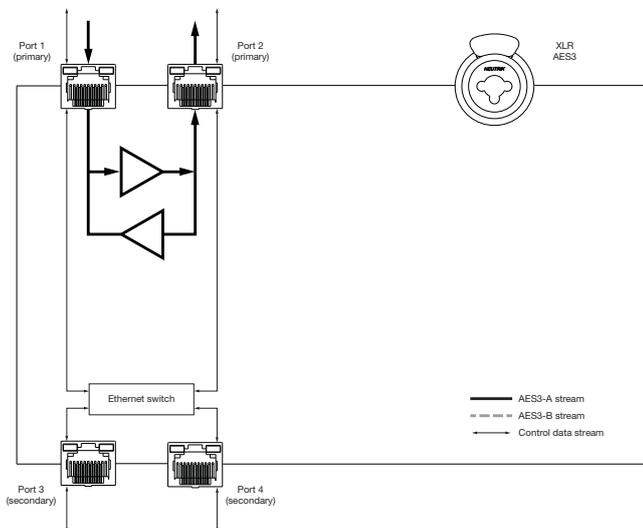


FIGURE 32: Repeat AES3-A from PORT 1 to PORT 2.

For consistency, primary ports are placed in the rear of the amp, while secondary ports are at the front. Notice that AES3 streams are monodirectional, while data stream is bidirectional.

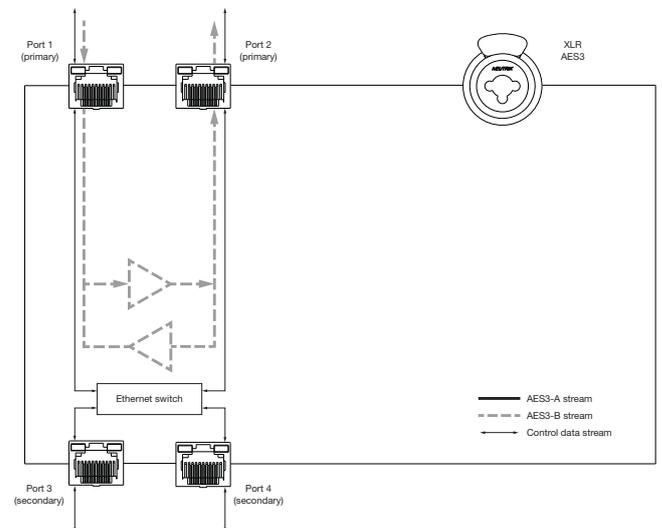


FIGURE 34: Repeat AES3-B from PORT 1 to PORT 2.

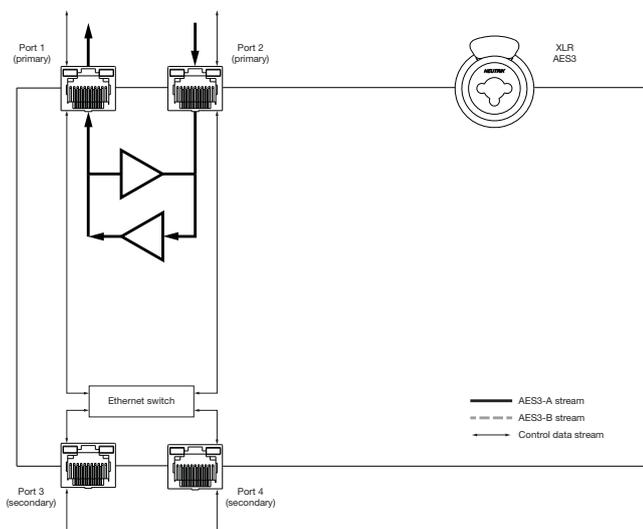


FIGURE 33: Repeat AES3-A from PORT 2 to PORT 1.

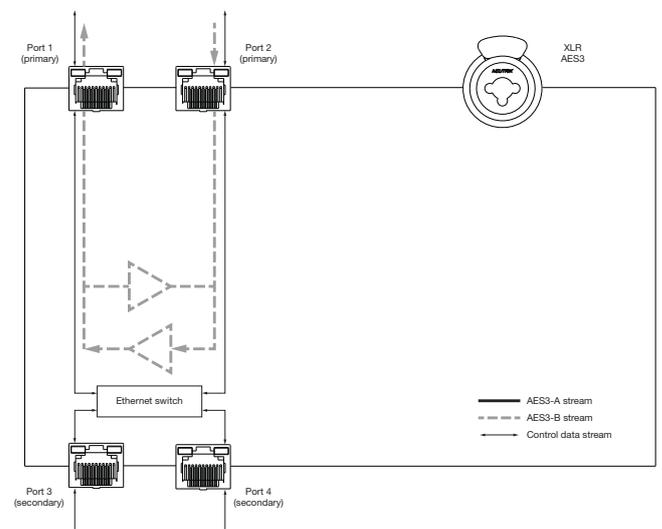


FIGURE 35: Repeat AES3-B from PORT 2 to PORT 1.

## 10:3. KEASOP forward mode

When the amplifier is set in forward mode, the AES3 signal coming into the amplifier from the AES3-XLR connector is forwarded to both of the primary RJ45 ports.

The rear panel toggle button near to the channel 2 XLR connector must be in the “AES/EBU” position. There are three ways the AES can be forwarded: forward to AES3-A, forward to AES3-B, forward to both.

### 10:3.1. Forward to AES3-A

The amplifier’s AES3-XLR connector will be routed to the AES3-A stream on both primary PORT 1 and 2 (FIGURE 36).

If there is an AES3-B stream incoming from either primary RJ45 ports (1 or 2), this will be repeated on the other primary port (FIGURE 39).

### 10:3.2. Forward to AES3-B

The amplifier behaves just as in the forward to AES3-A mode but with respect to the AES3-B stream.

The AES3-XLR stream will be routed to the AES3-B stream on both primary PORTS 1 and 2 (FIGURE 37).

The AES3-A stream, if present will be repeated from/to primary RJ45 ports 1 and 2.

### 10:3.3. Forward to both

The amplifier’s AES3-XLR stream will be routed to both AES3-A and AES3-B streams on both primary PORTS 1 and 2 (FIGURE 38).

Repeater functionality will be disabled.

**IMPORTANT: In any forward mode, the amplifier can accept as the sole AES3 input signal the one coming from the AES3-XLR connector. The RJ45 ports cannot, input AES3 signals to the amplifier.**

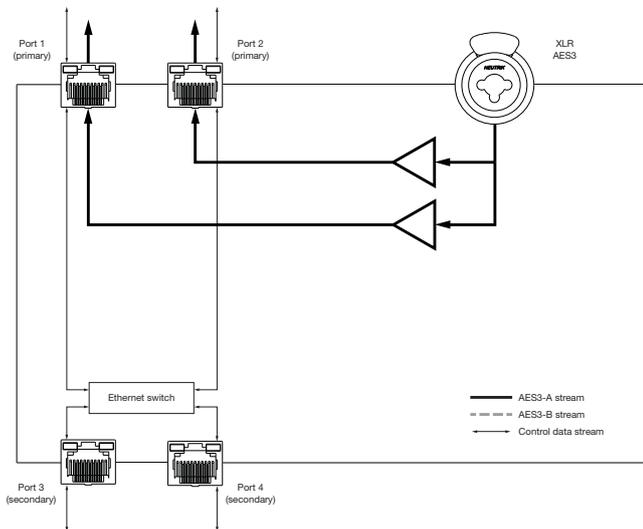


FIGURE 36: Forward AES3-XLR to AES3-A.

For consistency, primary ports are placed in the rear of the amp, while secondary ports are at the front. Notice that AES3 streams are monodirectional, while data stream is bidirectional.

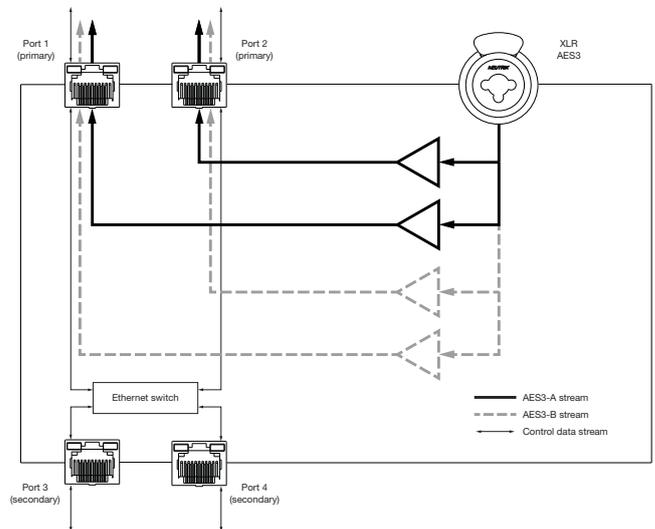


FIGURE 38: Forward AES3-XLR to both.  
Repeat is disabled.

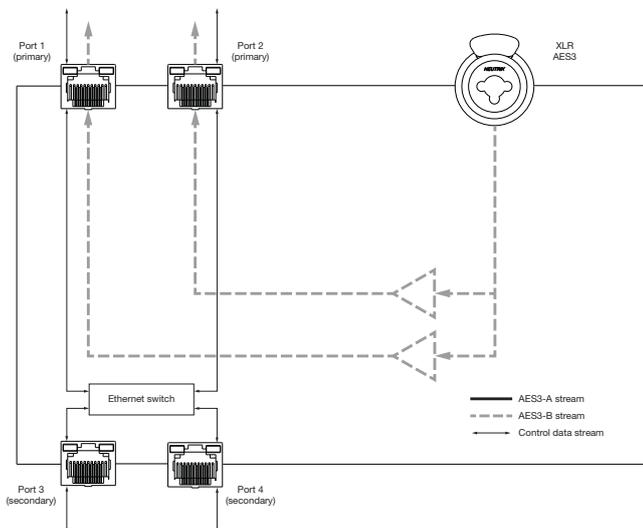


FIGURE 37: Forward AES3-XLR to AES3-B.

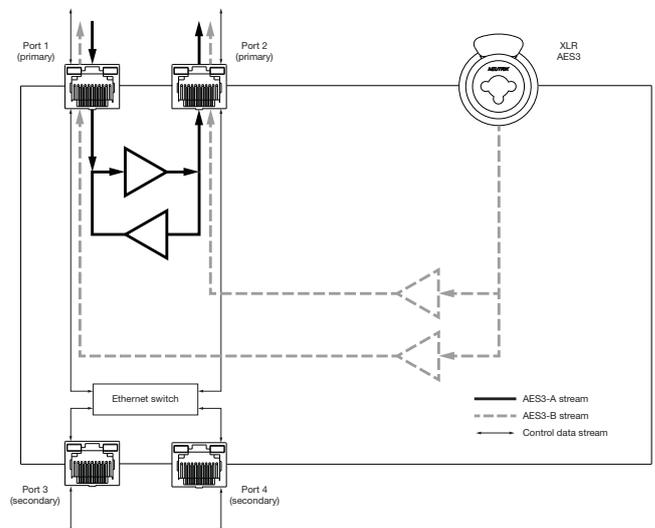


FIGURE 39: Forward AES3-XLR to AES3-B.  
Repeat AES3-A from PORT 1 to PORT 2.

## 10:4. Network robustness

K Series amplifiers equipped with a KAESOP are capable of being networked routing both data and audio streams to each other.

In dealing with networks of amplifiers, one of the most important aspects to consider, especially when working in a critical application such as large venue sound distribution, is the robustness of the network itself. Data and audio connections can be made fault proof by means of some level of redundancy.

The degree of redundancy expresses how many network connections can break before sound is interrupted in any one amplifier part of the system.

A zero degree redundant system is not robust: the first connection to jump (either from a cable failure or even from an amplifier problem) means the whole system goes down.

A one degree redundancy system, on the other hand, will continue working automatically if one (but no more than one) connection fails.

K Series amplifiers support up to two degrees redundancy thanks to the adoption of proper networking topology: by detecting any connection failure on both analog and digital input K Series amplifiers are capable to automatically (and almost instantaneously) modify the audio feed direction to allow the output signal to remain uninterrupted.

The following section illustrates and analyzes some common amplifier network topologies with different degree of redundancy.

### 10:4.1. Daisy chain

Daisy chain is a wiring scheme in which multiple devices are networked together in sequence, i.e. in series.

**FIGURE 40** and **FIGURE 41** show the diagrams of daisy chain connections of 4 amplifiers with four and two AESOP ports respectively.

In both configuration, only the first amplifier – fed with the digital signal via the AES3-XLR – is set in forward mode: any other amplifier in the chain is a repeater.

Ethernet data are fed through any free port, either primary or secondary, and conveyed to the AESOP with the AES3.

This daisy chain topology is not robust (zero degree of redundancy). If any single AES3 or Ethernet cable connection is interrupted, the whole system fails.


### 10:4.2. Daisy chain with redundant AES3

A slightly more robust network with respect to the audio system is the one illustrated in **FIGURE 42** and **FIGURE 43**.


Two amplifiers, the first and the last one in the chain, are set to work in forward mode. The remaining amplifiers are set to work in repeater mode.

Even if both the leading and the trailing amplifier forward the AES3 stream through the AESOP, there is no risk of data collision; furthermore, all amplifiers are capable to switch in real time to the best signal source in case of connection failures.

This configuration implies the use of an AES3 patch bay in order to feed with the same digital signal the leading and trailing amplifiers.

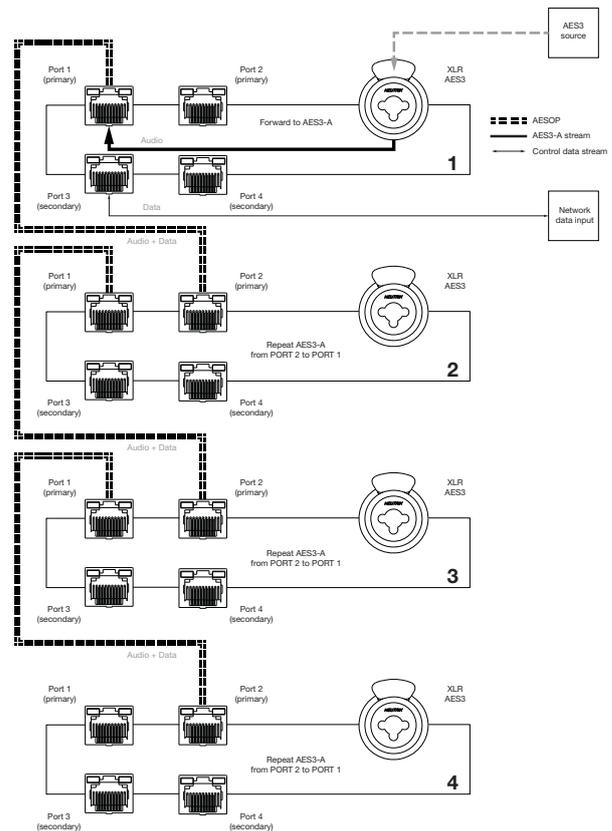

**FIGURE 40:** Daisy chain - four port models.

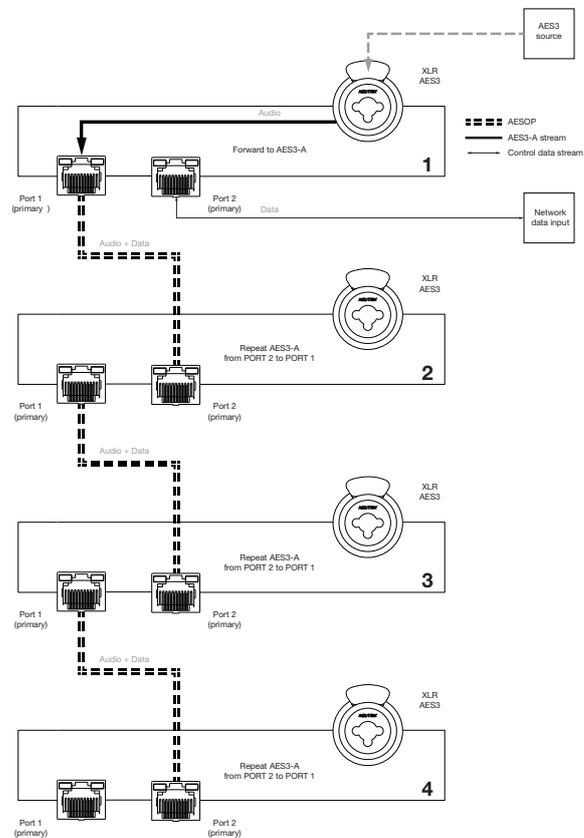

**FIGURE 41:** Daisy chain - two port models.

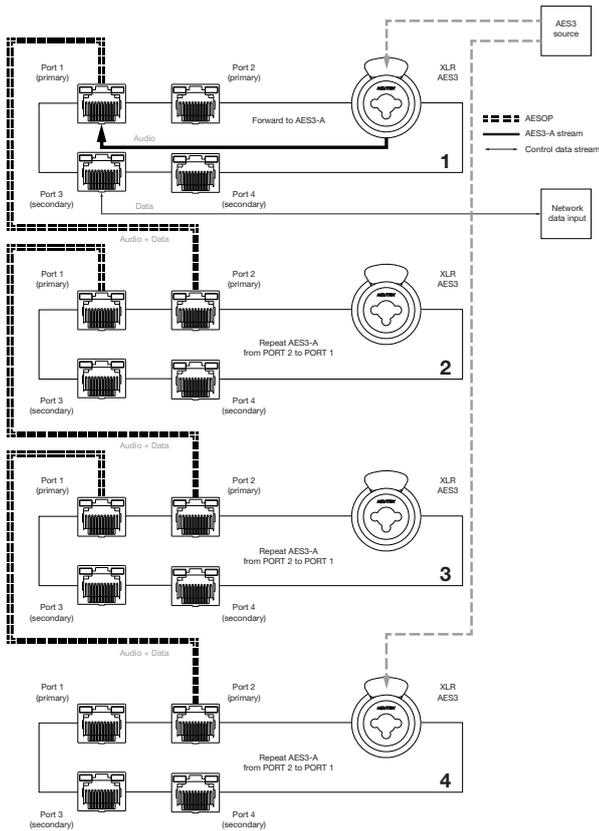


FIGURE 42: Daisy chain with AES3 redundancy - four port models.

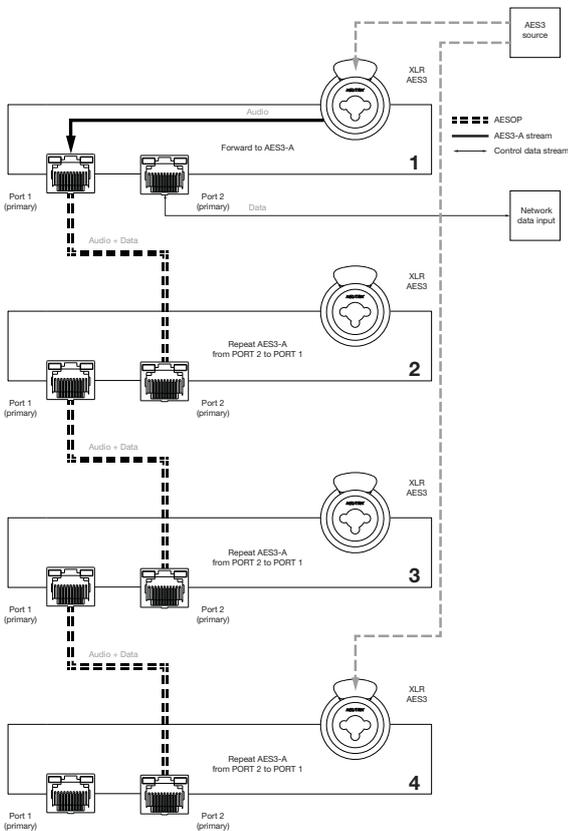


FIGURE 43: Daisy chain with AES3 redundancy - two port models.

Thanks to the auto-sync features implemented in K Series amplifiers, no synchronization mismatch occur between the two AES3 streams.

Failure cases:

- ▶ damaged AESOP connection between amp n and n+1: Ethernet network connection would be interrupted but not the audio stream. The audio continuity is preserved thanks to the real-time switch of the AESOP stream toward the uncorrupted source coming from the trailing amplifier. The amplifier n+1 and the following lose the data connectivity.
- ▶ damaged AES3 input connection: no sound interruption would be heard because the failed input is immediately replaced by the AESOP stream. Ethernet connectivity is not affected by this kind of failure.

The robustness of this network is guaranteed for AES3 signals only, and for a single cable failure at a time (one degree of redundancy). If two or more connections should fail, one or more amplifiers (depending on where the interruption occurs) would be muted.

### 10:4.3. Daisy chain with AES3 and Ethernet redundancy

Similarly to the previous schema, both AES3 and Ethernet connection are fed to the leading and the trailing amplifiers in the daisy chain network.

The AESOP protocol can handle data conflict and manage real-time switching to a safe signal and/or data source.

This configuration implies the use of an AES3 patch bay and an ethernet switch.

Failure cases:

- ▶ damaged AESOP connection between amp n and n+1: the audio and ethernet continuity is preserved thanks to the real-time switch of the AESOP stream toward the uncorrupted source coming from the trailing amplifier.
- ▶ damaged AES3 input connection: no sound interruption would be heard because the failed input is immediately replaced by the AESOP stream. Ethernet connectivity is not affected by this kind of failure.
- ▶ damaged Ethernet input connection: no data corruption would occur because the failed input is immediately replaced by the AESOP stream. The audio stream is not affected by this kind of failure.

Even if this network configuration implements both data and audio redundancy, its robustness is the same of that of the previous topology: la connettività è garantita per un singolo guasto del cavo alla volta (un grado di ridondanza), sia nei dati o nella rete audio.

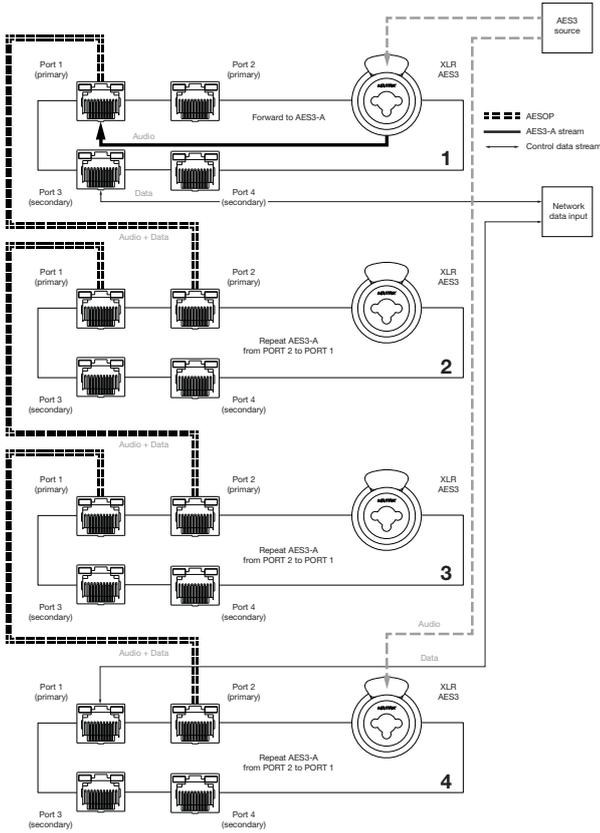


FIGURE 44: Daisy chain with AES3 and Ethernet redundancy - four port models.

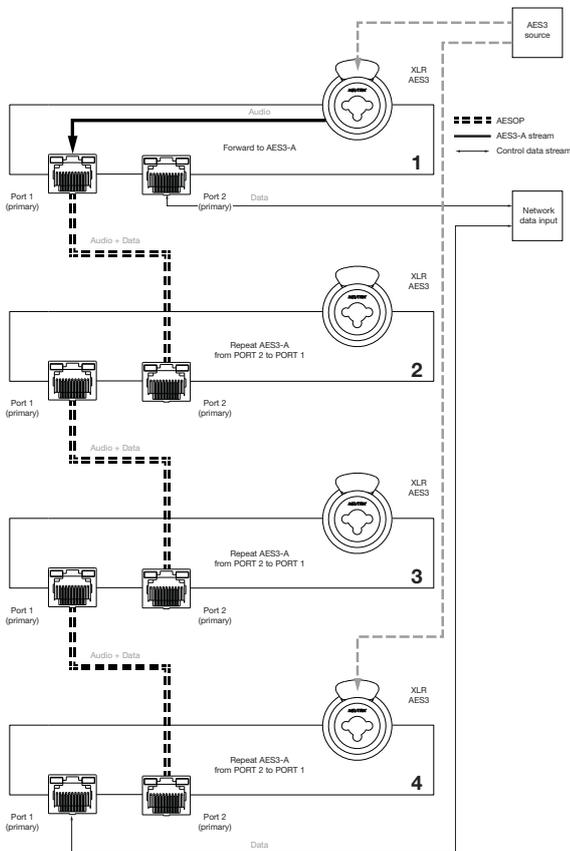


FIGURE 45: Daisy chain with AES3 and Ethernet redundancy - two port models.

### 10:4.4. Two degree redundant daisy chain

If the amplifiers in the daisy chain are fed with mono signal and the channel of each unit are linked – so that to use the same input signal (ref. [Chapter 9:10.1. Source selection](#)) –, a two degree redundant connection topology can be achieved.

Taking advantage of the “if no link” features in the Network settings menu (ref. [Chapter 10:5. Network settings menu](#)), the K Series can switch to the analog input when the KAESOP stream fails. Bearing this in mind, it is possible to achieve high degree of redundancy exploiting both digital and analog inputs.

Remember that when operating with digital inputs – i.e. AES3 and AESOP – channel link must be achieved via software: do not switch the link pushbutton.

The network topology is described in [FIGURE 46](#).

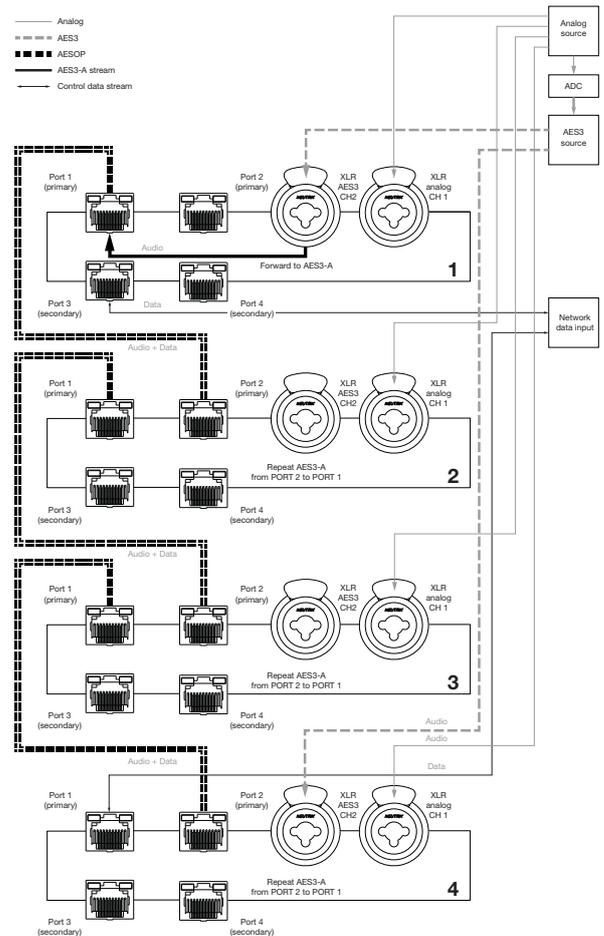


FIGURE 46: Two degree redundant daisy chain via AES3, Ethernet and Analog input.

## 10:5. Network settings menu

The Network settings menu become available when the KAESOP board is installed (ref. [FIGURE 20](#)).

Many of the menus in this section require the user to select one functioning mode from a set of possible alternatives. These alternatives are all presented in a list. A black diamond shape next to a specific item in the list indicates that that is the selected option.

- ▶ **Device mode:** this parameter sets the amplifier mode with respect to the AES3 stream (ref. [Chapter 10:2. KAESOP repeater mode](#) and [Chapter 10:3. KAESOP forward mode](#)). Available options are:

- ▷ Repeater (default); Forward to AES3-A;
- ▷ Forward to AES3-B;
- ▷ Forward to both.

Note: when an amplifier is in forward mode (either to AES3-A, AES3-B or both) the amplifier can only accept the AES signal coming from the AES3-XLR connector. AES3 streams incoming from any other RJ45 port are ignored.

- ▶ **Addressing Mode:** this parameter controls the IP addressing assignment strategy:
  - ▷ **Manual:** requires the user to set a valid static address and subnet mask (and, optionally, the default gateway). The PC should be on the same subnet of the amplifier if no routers are present between the PC and amplifier.
  - ▷ **Automatic:** lets the amplifier ask and obtain a network configuration from a DHCP server. Starting from power-on, the amplifier tries to obtain a valid IP address from a DHCP server. After a timeout of 30 seconds, if an IP address is not obtained, the amplifier takes an automatic private address in the range 169.254.x.y, but continues to search for a DHCP server. When the DHCP becomes available, the address is updated. If no DHCP server is available, the amplifier obtains an IP address by Automatic IP (local link addressing or ZeroConf).

The amplifier behavior complies with RFC 3927, guaranteeing the interoperability with any host PC supporting this standard.

- ▶ **Set address:** this menu allows to manually set the amplifier's IP address, subnet mask and default gateway.
- ▶ **Show net config:** this menu shows the current networking configuration, either set by the user via the "Set address" menu or obtained automatically if the automatic addressing mode is selected.
- ▶ **Audio**
  - ▷ **Source selection:** this menu allows the user to select the AES3 stream source to feed the output power stage. The AES3 signal can come from either: AES3-XLR, AES3-A or AES3-B.
  - ▷ **Source mode:** this menu allows to select the channel(s) contained the selected AES stream to be forwarded to the output power stage of the amplifier. The possibilities are: Parallel from L (the left channel

from the selected AES3 stream is forwarded to both amplifier channels), Parallel from R (the right channel from the selected AES3 stream is forwarded to both amplifier channels), Stereo (the right channel from the selected AES3 stream goes to channel 1 or the amplifier; the right channel from the AES3 stream goes to the amplifier's left channel).

- ▷ **Gain trim:** this parameter trims the digital level of the AES3 stream. The gain trim scale goes from +5 dB to -40 dB with 0.5 dB steps with respect to 0 dB equivalent of +13.5 dBu. A 0 dBFS level in the AES3 stream corresponds to an absolute analog level of +18.5 dBu when a +5 dB gain trim level is applied.
- ▷ **If no link:** this parameter allows the user to choose the behavior of the amplifier when the digital audio stream is missing and the "Input selection" is set as KAESOP → OUT (or KAESOP → DSP → OUT). The two possible alternatives are: Mute and Analog. In Analog mode the amplifier automatically switches to CH1/CH2 analog input if the digital stream is missing, returning to the digital stream in case this should become available again. This mode could be used to implement an analog backup connection for the digital stream (ref. [Chapter 10:4.4. Two degree redundant daisy chain](#)).

## Display

The Display menu allows the user to monitor the system status and performance.

### 11:1.Display: Output meters

The output meters screen shows important output signal information for the amplifier.

By pressing the right most front panel button, the screen view is toggled between information relative to channel 1, channel 2 or relative to the sum of channels 1 and 2.

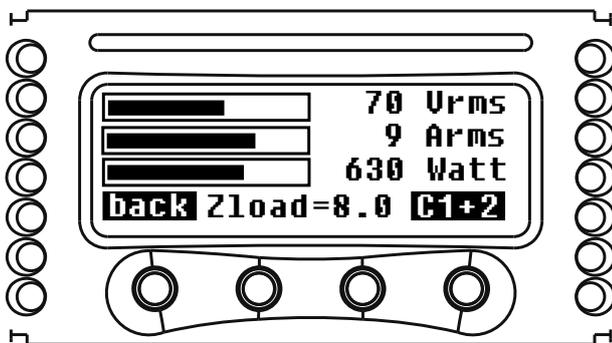


FIGURE 47: Display: Output meters.

The top line in this screen displays the RMS voltage value of the output, both as a number as well as a horizontal meter bar. The second and third line display the output RMS current and power level respectively. The output power reported is a peak value reading taken every 200 ms.

In the “C1+2” mode, the RMS voltage and power readings displayed are the average RMS voltage and peak power of each channel. The RMS current value, on the other hand, is the sum of each single channel’s RMS current level.

The bottom line of the screen displays the load impedance as Zload. The minimum output voltage is stored internally and available to remote clients connected to the amplifier.

The load impedance is indirectly inferred by a successive approximations. Time between single output impedance approximations depends on the output signal: the greater the amplitude of the signal, the shorter the time interval between measurements needed to approximate the output impedance, the faster the successive approximation method will converge to the true impedance value.

### 11:2.Display: Temperature

This screen displays the current amplifier temperature.

### 11:3.Display: Mains meters

This screen displays the updated mains RMS voltage and RMS current levels. Values are displayed in numbers and as progress bars.

The current and voltage levels displayed in this screen are approximate values: which serve the purpose of giving a general indication of the mains levels. Please refer to other sources (such as calibrated multimeters) for reliable and exact mains voltage and current measurements.

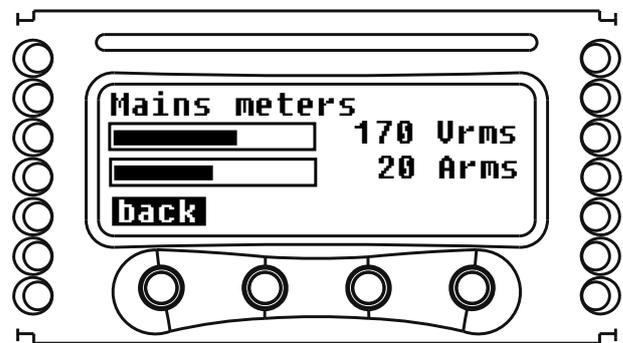


FIGURE 48: Display: Mains meters.

### 11:4.Display: Amplifier name

The Amplifier Name menu gives access to two menu branches: the “Display amp data” function and the “Edit amplifier name” menu.

When the “Display Amp data” function is activated, the main amplifier screen shows the amplifier name (20 characters, bold) blinking to a second screen showing the current selected preset name (40 characters). If the preset has been altered in any way, the displayed preset name will have a “Modified” prefix to indicate this.

The amplifier name can be assigned by entering the “Edit amplifier name” menu.

## Local presets

All K Series amplifiers have an on board memory capable of storing up to 50 presets.

An amplifier preset is a snapshot of the current amplifier status, including the basic amplifier settings and the KDSP board settings if a DSP board is present.

### 12:1.Local preset: Locked presets

When the “locked presets” function is active, a number of presets, determined by the “Locked bank size” menu, is not overwritable. This function’s status can be toggled on/off by entering the Lock code.

If a wrong code is entered, the system simply returns to the previous local presets menu.

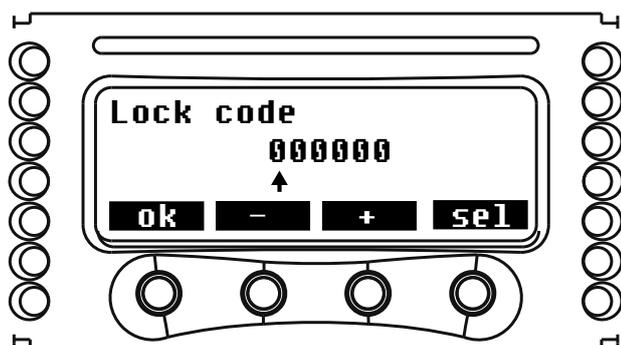


FIGURE 49: Lock code.

### 12:2.Local preset: Locked bank size

This menu allows the user to set the number of locally stored presets that cannot be overwritten. Either all (50) or none (0) of the presets can be locked. After entering the correct lock code, select the number of presets to be write protected.

### 12:3.Local preset: Recall local preset

In order to recall one of the 50 locally stored presets, press ok when the “Recall local preset” line is highlighted.

Navigate forwards or backwards in the existing presets list: press the right most button labelled “ok” to load the desired preset. If a preset location is not used, it is labelled <empty>.

## 12:4.Local preset:Save local preset

### 12:4.1.Save to an empty slot

To save the current amplifier setup as a preset to the local memory, enter the “Save local preset” menu. Select an empty preset location, press “ok”, and define a proper name.

If no other preset has been loaded in the amplifier either via remote control or using a SmartCard, by default the current preset name will be “PRESET” followed by the selected memory slot name.

The preset name can be edited one character at a time.

ABCDEFGHIJKLMNOPQRST  
 UVWXYZ !''#\$%&'()\*+,-  
 ./0123456789:;<=>?@

FIGURE 50: The “+” and “-” buttons allow to navigate within a standard set of capital letters and basic punctuation marks

### 12:4.2.Overwriting an existing preset

If the preset location is not empty, the amplifier will ask the user confirmation to overwrite the file.

Note that if you have already input a preset name, or if you have loaded a preset from local memory or a SmartCard, the name is used as starting point for a new save preset operation.

## 12:5.Local preset: Change lock code

In order to change the lock code used to activate the “Lock presets” function, the old user code must be entered.

If the entered code is incorrect, the system returns to the previous screen. There is no limit on the number of times that an incorrect lock code can be entered.

## 12:6.Local preset: Erase all presets

This function allows to erase all non write protected presets in the amplifier’s internal memory. After having selected this function’s submenu by pressing “ok”, a confirmation screen will appear.

Pressing “ok” will erase all non protected presets; when all non write protected presets have been erased, a screen confirming this will appear.

## Setup

### 12:7.Setup: Hardware info

This menu allows the user to access various information about the amplifier's hardware. The first screen shows the amplifier name followed by:

- ▶ **S/N:** serial number of the amplifier
- ▶ **Hw ID:** hardware ID, selectable via the rotary encoders on the back panel

Pressing the “more” button on the screen allows to cycle through a greater number of pages containing more information; the “back” button will bring the user back to the previous setup menu.

- ▶ **KFRNT:** front panel firmware version.
- ▶ **KCTRL:** controller firmware version number.
- ▶ **KDSP:** DSP board firmware version (available only for models with the optional DSP board).
- ▶ **KAESOP:** network board firmware version (available only for models with the optional KAESOP board).
- ▶ **Lifetime:** operating hours of the amplifier (by default any brand new amplifier has 50 operating hours spent during the factory burn-in and initialization process).

### 12:8.Setup: Hardware monitor

This menu allows the user to access information about the current amplifier system parameters. These are:

- ▶ **PWRBSCH1:** amplifier's power supply voltage for channel 1
- ▶ **PWRBSCH2:** amplifier's power supply voltage for channel 2

Pressing the “more” button on the screen allows to cycle through a greater number of pages containing more information; the “back” button will bring the user back to the previous setup menu.

- ▶ **VAUX:** internal auxiliary voltage.
- ▶ **+5VAN:** auxiliary analog voltage.
- ▶ **VEXT:** external remote control voltage.
- ▶ **VAUX:** indicates if the power supply auxiliary voltage is correct.
- ▶ **IGBTCONV:** indicates the DC/DC converter monitor status.
- ▶ **VBOOST:** internal post PFC voltage.
- ▶ **192KHZ:** system clock frequency status

### 12:9.Setup; LCD contrast

This screen allows the user to set the LCD display contrast using the “+” and “-” buttons.

### 12:10.Setup: Set the keylock code

In order to prevent the amplifier's settings from being altered by acting on the front panel commands, the “lock” function can be activated

To activate the lock function, keep pressed for more than 1 second the button corresponding to the lock label: all other buttons will be locked. Unlocking buttons is done in the same way, but an unlock code is required for security reasons.

In order to enter an unlock code for the amplifier, select the “Set keylock code” from the Setup menu. Please note that this screen can also be accessed by pressing the “unlock” button in the main screen when the amp is in locked key mode.

Using the two central buttons, chose and set an unlock code. Pressing the right most key (labelled “sel”) allows to select the desired digit.

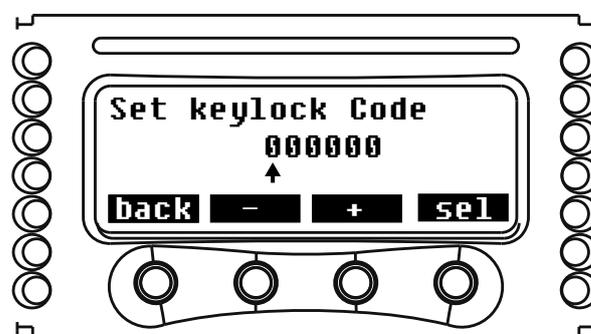


FIGURE 51: Setup: Set the keylock code.

### 12:11.Setup: Single channe muting

Muting of one channel at a time can be done via the “mute” function directly from the amplifier's front panel.

Pressing the button directly below the “mute” label can mute each channel individually; in this case, the on screen channel-specific parameters are replaced by the “muted” label. Unmuting the channels is done by pressing the “mute” button again.

## System and signal protections

In order to protect your device and your speakers from accidental damage, K Series amplifiers include an extensive automatic protection system.

### 13:1.Turn-On/Turn-Off muting

For about four seconds after turn-on, and immediately at turn-off, the amplifier outputs are muted. Class D amplifiers may cause severe speaker damage at power up due to the high voltage levels at the output stage.

In order to avoid this, the outputs are muted for about 4 seconds after turn on. Similarly, turning off the amplifier can cause the same problem: outputs are muted immediately at turn off.

### 13:2.Short circuit protection

Short circuits or very low impedance loads may destroy the output stage of any amplifier.

In order to protect the amplifier from the dangerously high current surges arising from accidental output short circuits or low impedance loads, all K series amps stop channel activity when the current drawn from the load rises above a set threshold.

In case of short circuit, the topmost front panel red LED will light-up. At the same time, the “PROT” warning appears in the first line of the LCD display. The channel is muted for 2 seconds after which the amplifier will check whether the current draw is still over the safety threshold. Should this be the case, the amplifier maintain muted the channel and the procedure will reiterate every 2 seconds.

The amplifier will therefore automatically self-reset the channel every 2 seconds. Once the amplifier channel has undergone 50 resets and the output current draw is still above safe limits, the channel enters a permanent protection mode: an on/off cycle is needed to restart the unit and restore it to full functioning mode. The red LED will be turned off and the amplifier will return to normal operating conditions only when the output current draw returns to acceptable levels.

### 13:3.Thermal protection

All K Series amplifiers use a continuously variable speed fan to assist cooling (the fan speed changes in response to the amplifier’s cooling needs).

If the heat sink temperature reaches approximately 80°C, the yellow front panel LED starts blinking. If the temperature should rise above 85°C the thermal sensing

circuitry will mute each power section channels, the yellow LED will be steadily on, and the power supply will be cut off. At the same time, the “PROT” warning appears in the first line of the LCD display.

Once the heatsink has cooled down, the amplifier will automatically reset and the yellow LED will go off. One possible way to reduce the temperature is to reduce the output power.

### 13:4.DC fault protection

In order to protect your speakers from mechanical damage caused by a DC signal coming from the amplifier’s output, a DC detection circuit is placed between the amplifier’s output stage and power supply.

If a DC signal or excessive subsonic energy appears at a channel output an instantaneous protection circuit will cut off the power supply to both channels. Power supply shut-down is used instead of speaker relays in order to improve the damping factor and reliability of K Series amplifiers. At the same time, the “PROT” warning appears in the first line of the LCD display.

### 13:5.Input/Output protection

An ultrasonic network decouples radio frequencies from the outputs keeping the amplifier stable with reactive loads and protects the loudspeakers against strong very high frequency non-musical signals above the audible range.

## SmartCard

K Series amplifiers implement a SmartCard reader in the front panel. The SmartCard – provided and initialized by Powersoft – is a tool meant for storing and sharing setup configurations and presets: up to 150 presets can be stored into a single card and easily shared among different amplifiers.

### 15:1.Firmware update

The SmartCard can be converted into firmware card – losing the storage capacity – allowing to update the internal firmware of the amplifier.

Since the firmware update procedure depends on the actual configuration of the amplifier, please refer to the technical note #03 “K Series Firmware Update Procedure” available in the download area of Powersoft website [www.powersoft-audio.com](http://www.powersoft-audio.com).

### 15:2.Step-Up card

K Series amplifiers are based on a flexible architecture that has been developed to meet specific expansibility criteria: by means of a specific Step-Up smartcard it is possible to upgrade the performance of a K series amplifier at the cost, more or less, as the price difference between the various models.

The K6, K8 and K10 all share the same hardware platform. This means that by purchasing a K6, it is possible – as your business and your power requirements grow – to upgrade the platform’s output power.

For example, one Step-Up will transform the K6 into a K8, two Step-Ups will make the K6 a K10. Of course the K8 can also be upgraded.

The K2 and K3 on the other hand, are based on a smaller hardware, so it is possible to Step-Up from K2 to K3, but not from K3 to K6.

Same goes for the K20, which is also based on a different hardware, making the K10 the highest possible upgrade currently available.

The step-up procedure is described in the technical note #04 “K Series Step-up Procedure” available in download area in Powersoft website [www.powersoft-audio.com](http://www.powersoft-audio.com).



FIGURE 52: Firmware Update Smart Card.

**Step-Up card as well as the storage and firmware smartcard can be requested to Powersoft dealers.**

## 16:1.Armonía Pro Audio Suite

**Armonía Pro Audio Suite™** has been specifically designed to be used with K Series amplifiers as an easy to use configuring interface that allows system setting and customization.

Communication between the software and the amplifier is established via an RS-485 or Ethernet connection, depending on the available ports on the units.

Armonía provides control and monitoring of a wide range of amplifier functions, such as attenuation, mute, internal temperature and voltage rail monitoring.

On K Series equipped with the KDSP board Armonía offers full control on all signal processing features, including input and output equalization, alignment delays, FIR filters and load impedance monitoring, etc.

Armonía is scalable: it allows control of a single Powersoft amplifier or a very large system containing many amplifiers. For large fixed or touring installations, Armonía gives the operator the ability to monitor and control all amplifiers in the system from a single location, regardless of the amplifiers' positions.

# Armonía

## Pro Audio Suite™

This software has been designed to accept software plug-ins to enable third-party product control.

Armonía is freely available on Powersoft website: it can be downloaded after signing up for the user forum: further information is available on the software section of Powersoft website [www.powersoft-audio.com](http://www.powersoft-audio.com).

### 16:1.1.Networking

Powersoft amplifiers can connect to a PC running Armonía in two ways: with an RS-485 serial connection or via Ethernet.

Systems employing both categories of amplifiers may use both methods simultaneously: an Ethernet network being implemented for some amplifiers, and RS-485 for the others (bear in mind that Ethernet is a faster communications protocol than serial RS-485).

The range of network topologies which can be used in wiring a real system varies between the two communications methods.

Ethernet provides a slightly greater degree of freedom, as standard IT network switches may be used to create multiple hub systems as well as a single hub and linear

daisy-chaining. A looped Ethernet topology is also permissible, which will provide redundancy in the event of a network failure.

An amplifier system using an RS-485 network can either be daisy-chained throughout or use the Powersoft PowerHub as a local switch.

## 16:2.Third party software

The K Series provides plug-ins for different third party control software.

Developed for Powersoft by independent consultants specialized in systems integration designs, these plug-ins provide monitoring and control of K Series amplifiers when integrated in proprietary network environment, such as:

- ▶ **Q-Sys™**: it provides integrated monitoring and control of Powersoft K Series and Duecanali Series amplifiers through a QSC Q-Sys system.
- ▶ **Crestron® macros**: it provides integrated monitoring and control of Powersoft amplifiers through a Crestron control system. These macros allow you to expand the flexibility of Powersoft's products in audio video integrated Systems.
- ▶ **AMX® module**: it provides AV system integrators with an interface control solution to take full advantage of the performance and flexibility of Powersoft's products in fixed install applications.
- ▶ **MediaMatrix® NWare™**: it provides integrated monitoring and control of Powersoft K Series.

Powersoft's Armonía Pro Audio Suite™ software will be required for initial setup and management of the amplifiers.

Further information is available on the software section of Powersoft website [www.powersoft-audio.com](http://www.powersoft-audio.com).

## Warranty and assistance

### 17:1.Warranty

---

#### 17:1.1.Product warranty

Powersoft guarantees its manufactured products to be free from defective components and factory workmanship for a period of 48 (forty eight) months, starting from the date of purchase printed on Powersoft's (or any of its Authorized Dealer's) invoice to the end customer. All warranty repairs and retrofits must be performed at Powersoft facilities or at an Authorized Service Center at no cost for the purchaser. Warranty exclusion: Powersoft's warranty does not cover product malfunctioning or failure caused by: misuse, abuse, repair work or alterations performed by non-authorized personnel, incorrect connections, exposure to harsh weather conditions, mechanical damages (including shipping accidents), and normal wear and tear. Powersoft will perform warranty services provided that the product is not damaged during transportation.

#### 17:1.2.Return of Goods

Goods can be returned to Powersoft only after they have been granted a Return Merchandise Authorization (RMA) number to be attached to the external packaging. Powersoft (or its Authorized Service Center) has the right to refuse any returned good without a RMA number.

#### 17:1.3.Repair or replacement

Powersoft reserves the right to repair or replace any defective goods covered by product warranty at its sole discretion and as it deems best.

#### 17:1.4.Cost and responsibility of transport

The purchaser (or end user/customer) is solely responsible for all transportation costs and risks associated with sending warranty covered goods to Powersoft or its Authorized Service Center. Powersoft will assume full responsibility and cover all costs incurred to send the goods back to the purchaser (or end user/customer).

### 17:2.Assistance

---

There are no user-serviceable parts in your amplifier. Refer servicing to qualified technical personnel. In addition to having an in-house service department, Powersoft supports a network of authorized service centers. If your amplifier needs repair contact your Powersoft dealer (or distributor). You can also contact the Powersoft Technical Service department to obtain the location of the nearest authorized service center.

Even though most product malfunctioning can be solved at your premises through Powersoft Customer Care or your direct knowledge, occasionally, due the nature of the failure, it might be necessary to return defective products to Powersoft for repair. In the latter case, before shipping, you are kindly asked to follow step by step the procedure described below: Obtain the "Defect Report Form" by contacting our Customer Care Department via email: [service@powersoft.it](mailto:service@powersoft.it) or download the "Defect Report Form" from Powersoft's website (<http://www.powersoft-audio.com/en/support/service>).

Fill out one "Defect Report form" for each returned item (the form is an editable tab guided document) and save as your name, amp model and serial Number (for example: `distributorenamek10sn17345.doc`) providing all required information except the RMA code/s and send it to [service@powersoft.it](mailto:service@powersoft.it) for Powersoft approval.

In case of defect reports approved by the Powersoft Customer Service Representative you will receive an RMA authorization code (one RMA code for each returning device). Upon receiving the RMA code you must package the unit and attach the RMA code outside the pack, protected in a waterproof transparent envelope so it is clearly visible.

All returning items must be shipped to the following address:

Powersoft  
Via Enrico Conti, 13-15  
50018 Scandicci (FI) Italy

In case of shipment from countries NOT belonging to the European Community make sure you have also followed the instructions described in the document available for download at the TEMPORARY EXPORTATION / IMPORTATION PROCEDURE link at <http://www.powersoft-audio.com/en/support/service>.

Thank you for your understanding and cooperation and continued support as we work to improve our partnership.

# Specifications

## K20 and K20 DSP+AESOP

Channel Handling	
Number of output channels	2 mono, bridgeable per ch. pair
Number of input channels:	
Analog	2x Combo XLR/TRS
AES3	1x XLR <sup>1,2</sup>
	AESOP via 2x RJ45 <sup>2</sup>
Number of output channels:	
Speaker	2x NL4MD speakON

Audio				
Gain	26 dB	29 dB	32 dB	35 dB
Input sensitivity @ 8 Ω	7.37 V	5.22 V	3.68 V	2.62 V
Max input level	27 dB	24 dB	21 dB	18 dB
Gate	-52 dBu	-55 dBu	-58 dBu	-61 dBu
Frequency Response (±0.5 dB, 1 W @ 8 Ω)	20 Hz - 20 kHz			
Crosstalk (1 kHz)	> 66 dB			
S/N ratio (20 Hz - 20 kHz A-Weighted @ 8 Ω)	> 110 dB			
Input impedance	10 kΩ balanced			
THD+N (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
DIM (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
Slew Rate (input filter bypassed @ 8 Ω)	> 50 V/μs			
Damping Factor @ 8 Ω, 20 Hz - 200 Hz	> 5000			

DSP <sup>3</sup>	
AD converters	24 Bit Tandem™ @ 96 kHz 127 dB-A Dynamic Range - 0.005 % THD+N
DA converters	24 Bit Tandem™ @ 192 kHz 122 dB-A Dynamic Range - 0.003 % THD+N
Sample rate converter	24 Bit @ 44.1 kHz to 192 kHz 140 dB Dynamic Range - 0.0001 % THD+N
Internal precision	40 bit floating point
Latency	6.0 ms fixed latency architecture
Memory/Presets	8 MB (RAM) plus 2 MB flash for presets: 50 stored locally + 150 stored on SmartCard
Delay	4 s (input) + 32 ms (output) for time alignment
Equalizer	Raised-cosine, custom FIR, parametric IIR: peaking, hi/lo-shelving, all-pass, band-pass, band-stop, hi/lo-pass
Crossover	linear phase (FIR), hybrid (FIR-IIR), Butterworth, Linkwitz-Riley, Bessel: 6 dB/oct to 48 dB/oct (IIR)
Limiters	TruePower™, RMS voltage, RMS current, Peak limiter
Damping control	Active DampingControl™ and LiveImpedance™ measurement

Networking	
Standards compliance	RS-485 serial connection or auto-sensing 10/100 Mbps UTP ports + AESOP <sup>2</sup>
Supported topologies	star, daisy-chain, closed loop <sup>2</sup>
Remote interface	Armonia Pro Audio Suite™
Ports	
Non AESOP models	Rear: 1 x RJ45 (RS-485 + V Ext)
2 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet + AESOP connection)
4 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet) Rear: 2 x RJ45 (Ethernet + AESOP connection)
Auxiliary supply <sup>3</sup>	12 V / 1 A max for DSP management and remote on/off via RJ45 or 2 pin Phoenix <sup>2</sup> MCV 1,5/ 2-G-3,81

Output Stage	
Maximum output power per channel @ 8 Ω	2700 W
Maximum output power per channel @ 4 Ω	5200 W
Maximum output power per channel @ 2 Ω	9000 W
Maximum output power @ 8 Ω Bridged	10400 W
Maximum output power @ 4 Ω Bridged	18000 W
Peak total output, all channels driven	18000 W
Maximum unclipped output voltage	225 V <sub>peak</sub>
Maximum output current	125 A <sub>peak</sub>

The power figure is calculated by driving and loading symmetrically all the channels: uneven loads allow to achieve highest performance.

AC Mains Power			
Power supply	Universal regulated switch more with PFC		
Nominal voltage (±10%)	100-240 V @ 50-60Hz		
Power factor (> 500 W output)	> 0.95		
Consumption/current draw	@ 115 V	@ 230 V	
Idle	91 W	1.3 A	88 W, 1.17 A
1/8 Max Output Power @ 4 Ω	1650 W	15.8 A	1625 W, 7.9 A
1/4 Max Output Power @ 4 Ω	3250 W	29.3 A	3250 W, 14.7 A
AC Mains connector	AMP CPC 45A connector - 45 A max (region-specific power cord provided)		

Thermal	
Operating temperature	0° - 45° C / 32° - 113° F
Cooling	Fan, continuously variable speed, temperature controlled, front to rear airflow
Thermal dissipation	
Idle	682 BTU/h, 171.9 kcal/h
1/8 Max Output Power @ 4 Ω	1590 BTU/h, 400.7 kcal/h
1/4 Max Output Power @ 4 Ω	2498 BTU/h, 629.5 kcal/h

Construction	
Dimensions	483 mm x 44.5 mm x 475 mm (19.0 in x 1.8 in x 18.7 in)
Weight	12 kg (26.5 lb)

<sup>1</sup> Common to channel 2 XLR analog input, either analog or AES3 depending on system configuration.

<sup>2</sup> Available only in KAESOP equipped models.

<sup>3</sup> Only for KDSP equipped model

# K10 and K10 DSP+AESOP

Channel Handling	
Number of output channels	2 mono, bridgeable per ch. pair
Number of input channels:	
Analog	2x Combo XLR/TRS
AES3	1x XLR <sup>1,2</sup>
	AESOP via 2x RJ45 <sup>2</sup>
Number of output channels:	
Speaker	2x NL4MD speakON

Audio				
Gain	26 dB	29 dB	32 dB	35 dB
Input sensitivity @ 8 Ω	6.34 V	4.49 V	3.18 V	2.25 V
Max input level	27 dBu	24 dBu	21 dBu	18 dBu
Gate	-52 dBu	-55 dBu	-58 dBu	-61 dBu
Frequency Response ( ±0.5 dB , 1 W @ 8 Ω)	20 Hz - 20 kHz			
Crosstalk (1 kHz)	> 66 dB			
S/N ratio (20 Hz - 20 kHz A-Weighted @ 8 Ω)	> 110 dB			
Input impedance	10 kΩ balanced			
THD+N (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
DIM (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
Slew Rate (input filter bypassed @ 8 Ω)	> 50 V/μs			
Damping Factor @ 8 Ω, 20 Hz - 200 Hz	> 5000			

DSP <sup>3</sup>	
AD converters	24 Bit Tandem™ @ 96 kHz 127 dB-A Dynamic Range - 0.005 % THD+N
DA converters	24 Bit Tandem™ @ 192 kHz 122 dB-A Dynamic Range - 0.003 % THD+N
Sample rate converter	24 Bit @ 44.1 kHz to 192 kHz 140 dB Dynamic Range - 0.0001 % THD+N
Internal precision	40 bit floating point
Latency	6.0 ms fixed latency architecture
Memory/Presets	8 MB (RAM) plus 2 MB flash for presets: 50 stored locally + 150 stored on SmartCard
Delay	4 s (input) + 32 ms (output) for time alignment
Equalizer	Raised-cosine, custom FIR, parametric IIR: peaking, hi/lo-shelving, all-pass, band-pass, band-stop, hi/lo-pass
Crossover	linear phase (FIR), hybrid (FIR-IIR), Butterworth, Linkwitz-Riley, Bessel: 6 dB/oct to 48 dB/oct (IIR)
Limiters	TruePower™, RMS voltage, RMS current, Peak limiter
Damping control	Active DampingControl™ and LiveImpedance™ measurement

Networking	
Standards compliance	RS-485 serial connection or auto-sensing 10/100 Mbps UTP ports + AESOP <sup>2</sup>
Supported topologies	star, daisy-chain, closed loop <sup>2</sup>
Remote interface	Armonia Pro Audio Suite™
Ports	
Non AESOP models	Rear: 1 x RJ45 (RS-485 + V Ext)
2 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet + AESOP connection)
4 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet) Rear: 2 x RJ45 (Ethernet + AESOP connection)
Auxiliary supply <sup>3</sup>	12 V / 1 A max for DSP management and remote on/off via RJ45 or 2 pin Phoenix <sup>2</sup> MCV 1,5/ 2-G-3,81

Output Stage	
Maximum output power per channel @ 8 Ω	2000 W
Maximum output power per channel @ 4 Ω	4000 W
Maximum output power per channel @ 2 Ω	6000 W
Maximum output power @ 8 Ω Bridged	8000 W
Maximum output power @ 4 Ω Bridged	12000 W
Peak total output, all channels driven	12000 W
Maximum unclipped output voltage	200 V <sub>peak</sub>
Maximum output current	125 A <sub>peak</sub>

The power figure is calculated by driving and loading symmetrically all the channels: uneven loads allow to achieve highest performance.

AC Mains Power				
Power supply	Universal regulated switch more with PFC			
Nominal voltage (±10%)	100-240 V @ 50-60Hz			
Power factor (> 500 W output)	> 0.95			
Consumption/current draw	@ 115 V	@ 230 V		
Idle	91 W	1.3 A	84 W	1.17 A
1/8 Max Output Power @ 4 Ω	1250 W	12.2 A	1250 W	6.1 A
1/4 Max Output Power @ 4 Ω	2500 W	22.6 A	2500 W	11.3 A
AC Mains connector	AMP CPC 45A connector - 45 A max (region-specific power cord provided)			

Thermal	
Operating temperature	0° - 45° C / 32° - 113° F
Cooling	Fan, continuously variable speed, temperature controlled, front to rear airflow
Thermal dissipation	
Idle	546 BTU/h      137.6 kcal/h
1/8 Max Output Power @ 4 Ω	1244 BTU/h      313.5 kcal/h
1/4 Max Output Power @ 4 Ω	1943 BTU/h      489.6 kcal/h

Construction	
Dimensions	483 mm x 44.5 mm x 475 mm (19.0 in x 1.8 in x 18.7 in)
Weight	12 kg (26.5 lb)

<sup>1</sup> Common to channel 2 XLR analog input, either analog or AES3 depending on system configuration.

<sup>2</sup> Available only in KAESOP equipped models.

<sup>3</sup> Only for KDSP equipped model

# K8 and K8 DSP+AESOP

Channel Handling	
Number of output channels	2 mono, bridgeable per ch. pair
Number of input channels:	
Analog	2x Combo XLR/TRS
AES3	1x XLR <sup>1,2</sup>
	AESOP via 2x RJ45 <sup>2</sup>
Number of output channels:	
Speaker	2x NL4MD speakON

Audio				
Gain	26 dB	29 dB	32 dB	35 dB
Input sensitivity @ 8 Ω	5.50 V	3.90 V	2.75 V	1.95 V
Max input level	27 dB	24 dB	21 dB	18 dB
Gate	-52 dBu	-55 dBu	-58 dBu	-61 dBu
Frequency Response ( ±0.5 dB , 1 W @ 8 Ω)	20 Hz - 20 kHz			
Crosstalk (1 kHz)	> 66 dB			
S/N ratio (20 Hz - 20 kHz A-Weighted @ 8 Ω)	> 110 dB			
Input impedance	10 kΩ balanced			
THD+N (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
DIM (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
Slew Rate (input filter bypassed @ 8 Ω)	> 50 V/μs			
Damping Factor @ 8 Ω, 20 Hz - 200 Hz	> 5000			

DSP <sup>3</sup>	
AD converters	24 Bit Tandem™ @ 96 kHz 127 dB-A Dynamic Range - 0.005 % THD+N
DA converters	24 Bit Tandem™ @ 192 kHz 122 dB-A Dynamic Range - 0.003 % THD+N
Sample rate converter	24 Bit @ 44.1 kHz to 192 kHz 140 dB Dynamic Range - 0.0001 % THD+N
Internal precision	40 bit floating point
Latency	6.0 ms fixed latency architecture
Memory/Presets	8 MB (RAM) plus 2 MB flash for presets: 50 stored locally + 150 stored on SmartCard
Delay	4 s (input) + 32 ms (output) for time alignment
Equalizer	Raised-cosine, custom FIR, parametric IIR: peaking, hi/lo-shelving, all-pass, band-pass, band-stop, hi/lo-pass
Crossover	linear phase (FIR), hybrid (FIR-IIR), Butterworth, Linkwitz-Riley, Bessel: 6 dB/oct to 48 dB/oct (IIR)
Limiters	TruePower™, RMS voltage, RMS current, Peak limiter
Damping control	Active DampingControl™ and LiveImpedance™ measurement

Networking	
Standards compliance	RS-485 serial connection or auto-sensing 10/100 Mbps UTP ports + AESOP <sup>2</sup>
Supported topologies	star, daisy-chain, closed loop <sup>2</sup>
Remote interface	Armonia Pro Audio Suite™
Ports	
Non AESOP models	Rear: 1 x RJ45 (RS-485 + V Ext)
2 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet + AESOP connection)
4 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet) Rear: 2 x RJ45 (Ethernet + AESOP connection)
Auxiliary supply <sup>3</sup>	12 V / 1 A max for DSP management and remote on/off via RJ45 or 2 pin Phoenix <sup>2</sup> MCV 1,5/ 2-G-3,81

Output Stage	
Maximum output power per channel @ 8 Ω	1500 W
Maximum output power per channel @ 4 Ω	3000 W
Maximum output power per channel @ 2 Ω	4800 W
Maximum output power @ 8 Ω Bridged	6000 W
Maximum output power @ 4 Ω Bridged	9600 W
Peak total output, all channels driven	9600 W
Maximum unclipped output voltage	169 V <sub>peak</sub>
Maximum output current	125 A <sub>peak</sub>

The power figure is calculated by driving and loading symmetrically all the channels: uneven loads allow to achieve highest performance.

AC Mains Power				
Power supply	Universal regulated switch more with PFC			
Nominal voltage (±10%)	100-240 V @ 50-60Hz			
Power factor (> 500 W output)	> 0.95			
Consumption/current draw	@ 115 V	@ 230 V		
Idle	91 W	1.3 A	84 W	1.17 A
1/8 Max Output Power @ 4 Ω	938 W	9.5 A	938 W	4.8 A
1/4 Max Output Power @ 4 Ω	875 W	17.4 A	1875 W	8.7 A
AC Mains connector	AMP CPC 45A connector - 45 A max (region-specific power cord provided)			

Thermal	
Operating temperature	0° - 45° C / 32° - 113° F
Cooling	Fan, continuously variable speed, temperature controlled, front to rear airflow
Thermal dissipation	
Idle	546 BTU/h      137.6 kcal/h
1/8 Max Output Power @ 4 Ω	1069 BTU/h      269.4 kcal/h
1/4 Max Output Power @ 4 Ω	1593 BTU/h      401.4 kcal/h

Construction	
Dimensions	483 mm x 44.5 mm x 475 mm (19.0 in x 1.8 in x 18.7 in)
Weight	12 kg (26.5 lb)

<sup>1</sup> Common to channel 2 XLR analog input, either analog or AES3 depending on system configuration.

<sup>2</sup> Available only in KAESOP equipped models.

<sup>3</sup> Only for KDSP equipped model

# K6 and K6 DSP+AESOP

Channel Handling	
Number of output channels	2 mono, bridgeable per ch. pair
Number of input channels:	
Analog	2x Combo XLR/TRS
AES3	1x XLR <sup>1,2</sup>
	AESOP via 2x RJ45 <sup>2</sup>
Number of output channels:	
Speaker	2x NL4MD speakON

Audio				
Gain	26 dB	29 dB	32 dB	35 dB
Input sensitivity @ 8 Ω	5.11 V	3.62 V	2.56 V	1.81 V
Max input level	27 dBu	24 dBu	21 dBu	18 dBu
Gate	-52 dBu	-55 dBu	-58 dBu	-61 dBu
Frequency Response ( ±0.5 dB , 1 W @ 8 Ω)	20 Hz - 20 kHz			
Crosstalk (1 kHz)	> 66 dB			
S/N ratio (20 Hz - 20 kHz A-Weighted @ 8 Ω)	> 110 dB			
Input impedance	10 kΩ balanced			
THD+N (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
DIM (from 0.1 W to Full Power)	< 0.5% (typical < 0.05%)			
Slew Rate (input filter bypassed @ 8 Ω)	> 50 V/μs			
Damping Factor @ 8 Ω, 20 Hz - 200 Hz	> 5000			

DSP <sup>3</sup>	
AD converters	24 Bit Tandem™ @ 96 kHz 127 dB-A Dynamic Range - 0.005 % THD+N
DA converters	24 Bit Tandem™ @ 192 kHz 122 dB-A Dynamic Range - 0.003 % THD+N
Sample rate converter	24 Bit @ 44.1 kHz to 192 kHz 140 dB Dynamic Range - 0.0001 % THD+N
Internal precision	40 bit floating point
Latency	6.0 ms fixed latency architecture
Memory/Presets	8 MB (RAM) plus 2 MB flash for presets: 50 stored locally + 150 stored on SmartCard
Delay	4 s (input) + 32 ms (output) for time alignment
Equalizer	Raised-cosine, custom FIR, parametric IIR: peaking, hi/lo-shelving, all-pass, band-pass, band-stop, hi/lo-pass
Crossover	linear phase (FIR), hybrid (FIR-IIR), Butterworth, Linkwitz-Riley, Bessel: 6 dB/oct to 48 dB/oct (IIR)
Limiters	TruePower™, RMS voltage, RMS current, Peak limiter
Damping control	Active DampingControl™ and LiveImpedance™ measurement

Networking	
Standards compliance	RS-485 serial connection or auto-sensing 10/100 Mbps UTP ports + AESOP <sup>2</sup>
Supported topologies	star, daisy-chain, closed loop <sup>2</sup>
Remote interface	Armonia Pro Audio Suite™
Ports	
Non AESOP models	Rear: 1 x RJ45 (RS-485 + V Ext)
2 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet + AESOP connection)
4 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet) Rear: 2 x RJ45 (Ethernet + AESOP connection)
Auxiliary supply <sup>3</sup>	12 V / 1 A max for DSP management and remote on/off via RJ45 or 2 pin Phoenix <sup>2</sup> MCV 1,5/ 2-G-3,81

Output Stage	
Maximum output power per channel @ 8 Ω	1300 W
Maximum output power per channel @ 4 Ω	2500 W
Maximum output power per channel @ 2 Ω	3600 W
Maximum output power @ 8 Ω Bridged	5000 W
Maximum output power @ 4 Ω Bridged	7200 W
Peak total output, all channels driven	7200 W
Maximum unclipped output voltage	153 V <sub>peak</sub>
Maximum output current	125 A <sub>peak</sub>

The power figure is calculated by driving and loading symmetrically all the channels: uneven loads allow to achieve highest performance.

AC Mains Power				
Power supply	Universal regulated switch more with PFC			
Nominal voltage (±10%)	100-240 V @ 50-60Hz			
Power factor (> 500 W output)	> 0.95			
Consumption/current draw	@ 115 V	@ 230 V		
Idle	91 W	1.3 A	84 W	1.17 A
1/8 Max Output Power @ 4 Ω	781 W	8.2 A	781 W	4.1 A
1/4 Max Output Power @ 4 Ω	1563 W	14.8 A	1563 W	7.4 A
AC Mains connector	AMP CPC 45A connector - 45 A max (region-specific power cord provided)			

Thermal	
Operating temperature	0° - 45° C / 32° - 113° F
Cooling	Fan, continuously variable speed, temperature controlled, front to rear airflow
Thermal dissipation	
Idle	546 BTU/h      137.6 kcal/h
1/8 Max Output Power @ 4 Ω	982 BTU/h      247.5 kcal/h
1/4 Max Output Power @ 4 Ω	1419 BTU/h      357.6 kcal/h

Construction	
Dimensions	483 mm x 44.5 mm x 475 mm (19.0 in x 1.8 in x 18.7 in)
Weight	12 kg (26.5 lb)

<sup>1</sup> Common to channel 2 XLR analog input, either analog or AES3 depending on system configuration.

<sup>2</sup> Available only in KAESOP equipped models.

<sup>3</sup> Only for KDSP equipped model

# K3 and K3 DSP+AESOP

Channel Handling	
Number of output channels	2 mono, bridgeable per ch. pair
Number of input channels:	
Analog	2x Combo XLR/TRS
AES3	1x XLR <sup>1,2</sup>
	AESOP via 2x RJ45 <sup>2</sup>
Number of output channels:	
Line out (through)	2x XLR
Speaker	2x NL4MD speakON

Audio				
Gain	26 dB	29 dB	32 dB	35 dB
Input sensitivity @ 8 Ω	5.30 V	3.75 V	2.66 V	1.88 V
Max input level	27 dB	24 dB	21 dB	18 dB
Gate	-52 dBu	-55 dBu	-58 dBu	-61 dBu
Frequency Response (±0.5 dB, 1 W @ 8 Ω)	20 Hz - 20 kHz			
Crosstalk (1 kHz)	> 70 dB			
S/N ratio (20 Hz - 20 kHz A-Weighted @ 8 Ω)	> 106 dB			
Input impedance	10 kΩ balanced			
THD+N (from 0.1 W to Full Power)	< 0.3% (typical < 0.05%)			
DIM (from 0.1 W to Full Power)	< 0.3% (typical < 0.05%)			
Slew Rate (input filter bypassed @ 8 Ω)	> 50 V/μs			
Damping Factor @ 8 Ω, 20 Hz - 200 Hz	> 5000			

DSP <sup>3</sup>	
AD converters	24 Bit Tandem™ @ 96 kHz 127 dB-A Dynamic Range - 0.005 % THD+N
DA converters	24 Bit Tandem™ @ 192 kHz 122 dB-A Dynamic Range - 0.003 % THD+N
Sample rate converter	24 Bit @ 44.1 kHz to 192 kHz 140 dB Dynamic Range - 0.0001 % THD+N
Internal precision	40 bit floating point
Latency	6.0 ms fixed latency architecture
Memory/Presets	8 MB (RAM) plus 2 MB flash for presets: 50 stored locally + 150 stored on SmartCard
Delay	4 s (input) + 32 ms (output) for time alignment
Equalizer	Raised-cosine, custom FIR, parametric IIR: peaking, hi/lo-shelving, all-pass, band-pass, band-stop, hi/lo-pass
Crossover	linear phase (FIR), hybrid (FIR-IIR), Butterworth, Linkwitz-Riley, Bessel: 6 dB/oct to 48 dB/oct (IIR)
Limiters	TruePower™, RMS voltage, RMS current, Peak limiter
Damping control	Active DampingControl™ and LiveImpedance™ measurement

Networking	
Standards compliance	RS-485 serial connection or auto-sensing 10/100 Mbps UTP ports + AESOP <sup>2</sup>
Supported topologies	star, daisy-chain, closed loop <sup>2</sup>
Remote interface	Armonia Pro Audio Suite™
Ports	
Non AESOP models	Rear: 1 x RJ45 (RS-485 + V Ext)
2 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet + AESOP connection)
4 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet) Rear: 2 x RJ45 (Ethernet + AESOP connection)
Auxiliary supply <sup>3</sup>	12 V / 1 A max for DSP management and remote on/off via RJ45 or 2 pin Phoenix <sup>2</sup> MCV 1,5/ 2-G-3,81

Output Stage	
Maximum output power per channel @ 8 Ω	1400 W
Maximum output power per channel @ 4 Ω	2600 W
Maximum output power per channel @ 2 Ω	2800 W
Maximum output power @ 8 Ω Bridged	5200 W
Maximum output power @ 4 Ω Bridged	5600 W
Peak total output, all channels driven	5600 W
Maximum unclipped output voltage	165 V <sub>peak</sub>
Maximum output current	102 A <sub>peak</sub>

The power figure is calculated by driving and loading symmetrically all the channels: uneven loads allow to achieve highest performance.

AC Mains Power				
Power supply	Universal regulated switch more with PFC			
Nominal voltage (±10%)	100-240 V @ 50-60Hz			
Power factor (> 500 W output)	> 0.95			
Consumption/current draw	@ 115 V	@ 230 V		
Idle	64 W	1.12 A	75 W	1.3 A
1/8 Max Output Power @ 4 Ω	813 W	8 A	813 W	4 A
1/4 Max Output Power @ 4 Ω	1625 W	14.8 A	1625 W	7.4 A
AC Mains connector	AMP CPC 45A connector - 45 A max (region-specific power cord provided)			

Thermal	
Operating temperature	0° - 45° C / 32° - 113° F
Cooling	Fan, continuously variable speed, temperature controlled, front to rear airflow
Thermal dissipation	
Idle	382 BTU/h      96.3 kcal/h
1/8 Max Output Power @ 4 Ω	836 BTU/h      210.7 kcal/h
1/4 Max Output Power @ 4 Ω	1390 BTU/h      350.3 kcal/h

Construction	
Dimensions	483 mm x 44.5 mm x 380 mm (19.0 in x 1.8 in x 15 in)
Weight	8 kg (17.7 lb)

<sup>1</sup> Common to channel 2 XLR analog input, either analog or AES3 depending on system configuration.

<sup>2</sup> Available only in KAESOP equipped models.

<sup>3</sup> Only for KDSP equipped model

# K2 and K2 DSP+AESOP

Channel Handling	
Number of output channels	2 mono, bridgeable per ch. pair
Number of input channels:	
Analog	2x Combo XLR/TRS
AES3	1x XLR <sup>1,2</sup>
	AESOP via 2x RJ45 <sup>2</sup>
Number of output channels:	
Line out (through)	2x XLR
Speaker	2x NL4MD speakON

Audio				
Gain	26 dB	29 dB	32 dB	35 dB
Input sensitivity @ 8 Ω	4.48 V	3.17 V	2.47 V	1.59 V
Max input level	27 dB	24 dB	21 dB	18 dB
Gate	-52 dBu	-55 dBu	-58 dBu	-61 dBu
Frequency Response (±0.5 dB, 1 W @ 8 Ω)	20 Hz - 20 kHz			
Crosstalk (1 kHz)	> 70 dB			
S/N ratio (20 Hz - 20 kHz A-Weighted @ 8 Ω)	> 106 dB			
Input impedance	10 kΩ balanced			
THD+N (from 0.1 W to Full Power)	< 0.2% (typical < 0.05%)			
DIM (from 0.1 W to Full Power)	< 0.2% (typical < 0.05%)			
Slew Rate (input filter bypassed @ 8 Ω)	> 50 V/μs			
Damping Factor @ 8 Ω, 20 Hz - 200 Hz	> 5000			

DSP <sup>3</sup>	
AD converters	24 Bit Tandem™ @ 96 kHz 127 dB-A Dynamic Range - 0.005 % THD+N
DA converters	24 Bit Tandem™ @ 192 kHz 122 dB-A Dynamic Range - 0.003 % THD+N
Sample rate converter	24 Bit @ 44.1 kHz to 192 kHz 140 dB Dynamic Range - 0.0001 % THD+N
Internal precision	40 bit floating point
Latency	6.0 ms fixed latency architecture
Memory/Presets	8 MB (RAM) plus 2 MB flash for presets: 50 stored locally + 150 stored on SmartCard
Delay	4 s (input) + 32 ms (output) for time alignment
Equalizer	Raised-cosine, custom FIR, parametric IIR: peaking, hi/lo-shelving, all-pass, band-pass, band-stop, hi/lo-pass
Crossover	linear phase (FIR), hybrid (FIR-IIR), Butterworth, Linkwitz-Riley, Bessel: 6 dB/oct to 48 dB/oct (IIR)
Limiters	TruePower™, RMS voltage, RMS current, Peak limiter
Damping control	Active DampingControl™ and LiveImpedance™ measurement

Networking	
Standards compliance	RS-485 serial connection or auto-sensing 10/100 Mbps UTP ports + AESOP <sup>2</sup>
Supported topologies	star, daisy-chain, closed loop <sup>2</sup>
Remote interface	Armonía Pro Audio Suite™
Ports	
Non AESOP models	Rear: 1 x RJ45 (RS-485 + V Ext)
2 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet + AESOP connection)
4 port AESOP <sup>2</sup> models	Front: 2 x RJ45 (Ethernet) Rear: 2 x RJ45 (Ethernet + AESOP connection)
Auxiliary supply <sup>3</sup>	12 V / 1 A max for DSP management and remote on/off via RJ45 or 2 pin Phoenix <sup>2</sup> MCV 1,5/ 2-G-3,81

Output Stage	
Maximum output power per channel @ 8 Ω	1000 W
Maximum output power per channel @ 4 Ω	1950 W
Maximum output power per channel @ 2 Ω	2400 W
Maximum output power @ 8 Ω Bridged	3900 W
Maximum output power @ 4 Ω Bridged	4800 W
Peak total output, all channels driven	4800 W
Maximum unclipped output voltage	140 V <sub>peak</sub>
Maximum output current	102 A <sub>peak</sub>

The power figure is calculated by driving and loading symmetrically all the channels: uneven loads allow to achieve highest performance.

AC Mains Power				
Power supply	Universal regulated switch more with PFC			
Nominal voltage (±10%)	100-240 V @ 50-60Hz			
Power factor (> 500 W output)	> 0.95			
Consumption/current draw	@ 115 V	@ 230 V		
Idle	69 W	1.2 A	88 W	1.35 A
1/8 Max Output Power @ 4 Ω	609 W	6.3 A	609 W	3.1 A
1/4 Max Output Power @ 4 Ω	1219 W	11.4 A	1219 W	5.7 A
AC Mains connector	AMP CPC 45A connector - 45 A max (region-specific power cord provided)			

Thermal	
Operating temperature	0° - 45° C / 32° - 113° F
Cooling	Fan, continuously variable speed, temperature controlled, front to rear airflow
Thermal dissipation	
Idle	382 BTU/h      96.3 kcal/h
1/8 Max Output Power @ 4 Ω	722 BTU/h      181.9 kcal/h
1/4 Max Output Power @ 4 Ω	1062 BTU/h      267.6 kcal/h

Construction	
Dimensions	483 mm x 44.5 mm x 380 mm (19.0 in x 1.8 in x 15 in)
Weight	8 kg (17.7 lb)

<sup>1</sup> Common to channel 2 XLR analog input, either analog or AES3 depending on system configuration.

<sup>2</sup> Available only in KAESOP equipped models.

<sup>3</sup> Only for KDSP equipped model

Page intentionally left blank





Powersoft S.p.A.  
Via Enrico Conti, 5  
50018 Scandicci (FI) Italy

Tel: +39 055 735 0230  
Fax: +39 055 735 6235

General inquiries: [info@powersoft.it](mailto:info@powersoft.it)  
Sales: [sales@powersoft.it](mailto:sales@powersoft.it)  
Application & technical support: [support@powersoft.it](mailto:support@powersoft.it)  
Service & maintenance: [service@powersoft.it](mailto:service@powersoft.it)  
Compliance questions: [compliance@powersoft.it](mailto:compliance@powersoft.it)

[powersoft-audio.com](http://powersoft-audio.com)